

Audio Control Switch Clap On/Off Model GSK-409

Classified as a remote controlled circuit this product uses an audio signal (clap on) to activate the on/off function of the switch. A sensitivity/volume controlled microphone picks up audio signal activating a relay generating an electrical signal to the switch.

Technical Specifications

■ Power Source: 12 VDC

■ Power Consumption: 50 mA max.■ Sensitivity Adjustment: potentiometer

■ Maximum Load: 10 A, 125 VAC or 5 A, 220 VAC


■ PCB Dimensions: 2.92 x 1.49 inches

Operating Principles

This circuit utilizes a sensitivity microphone to obtain an audio signal and a flip-flop circuit to turn the switch to the on and off position. The audio signal enters from the microphone to transistor 1 through capacitor 2 entering variable resistor 1 allowing sensitivity adjustments. The collector of transistor 2 is connected through capacitor 3 and 4 creating a flip-flop sector comprising of transistor 3 and 4 both taking turn functioning to the signal transmitted by the microphone. The transmittal of an audio signal through transistor 1 and 2 causes the collector of transistor 2 to be amplified creating a momentary low voltage while current at the base of transistor 4 is drawn through diode 2 and capacitor 4 to ground at collector transistor 2 making transistor 4 stop inducing current. The higher voltage will cause transistor 3 to draw current through the base of transistor 4 and ground causing transistor 3 to work in place of transistor 4. At this point the relay will release the contact face so the LED will be turned off. Transistor 4 will be inactive until an audio signal is present to cause transistor 3 to stop induction and then transistor 4 will start functioning.

PCB Assembly

Please refer to Figures 1, 2, and 3 for aid in component placement. It is recommended to start with lower components i.e. diodes, resisters, electrolyte capacitors, and transistors. Be careful to check polarity with Figure 3 before soldering. Take extra precaution to ensure electrolytic capacitors are inserted correctly. If a problem is detected it is best too use a desoldering pump or desoldering braids to remove component. This will minimize potential damage to the printed circuit board.

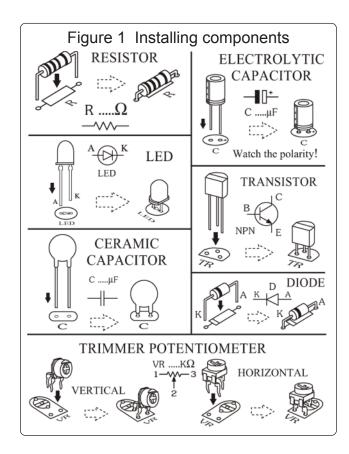

Testing


Connect the 12VDC power source and adjust variable resistor 1 to just past neutral. The LED may be on or off; test by clapping your hands; LED should change from previous condition; clap hands once more and LED should return to original position. The LED should go on and off by clapping your hands if so, the circuit is working. Connect the audio control switch at "OUT" terminal and connect the unit to the "IN" terminal.


Troubleshooting

The main cause of problems will come from misplaced components or faulty soldering. Utilize figure 2 and 3 to ensure proper placement, polarity and then check solder points for connectivity.

Accessories

Use GSB-04 (sold separately) to house the PCB and batteries.

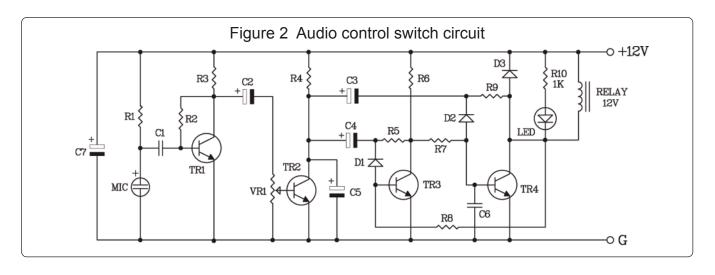

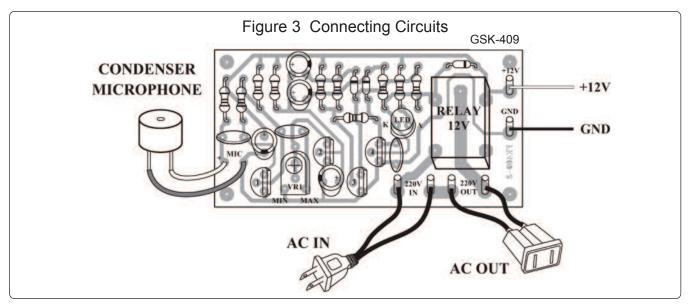

Resistors R1, R10 R2 R3, R8 R4 R5, R9 R6	1 kΩ 1 MΩ 10 kΩ 56 kΩ 47 kΩ 3 kΩ	brown – black – red – gold brown – black – green – gold brown – black – orange – gold green – blue – orange – gold yellow – violet – orange – gold orange – black – red – gold
R7	5 kΩ	green – black – red – gold
Potentiometer VR1	103 or 14 or 10 kΩ	
Ceramic Capacitors C1 C6	104 or 0.1 μFΩ 273 or 0.027 μF	
Electrolytic Capacitors C2 C3, C4, C5 C7	C2 0.1 µF C3, C4, C5 2.2 µF	
Transistor TR1, TR2, TR3, TR4	C458, C828, C945, C1815	
Diodes D1, D2, D3	1N4148	

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Component Kits category:

Click to view products by Global Specialties manufacturer:

Other Similar products are found below:

T107/C 5210211 KIT-ENERGY HARVEST KIT PROTO SHIELDS GSK-1004 G30-7100 G10-7100 G30-8000 BOX3-1455L-BK 4504

B03-7100 B04-7100 B05-7100 2450L/C603D L201DC L/C-201DL L/C-805DS KBOX1-AC-SV-PR2H L/C-603DS RGCBNJ660P22 B10
8000 B20-7100 B45-8000 MH-1 MH-2 TW-E41-1020 TW-E41-1060 B04-8000 B03-8000 G10-8000 KBOX3-AL-SV-POW B05-8000

G20-7100 GSK-820 GSK-1001 GSK-944 GSK-409 GSK-918 JRG01-EXP2 G20-8000 977990 CCAUTO-LAB1 CC-LAB2 JRG01-KIT

JRG01-PARTS JRG01-PCB 6002-240-001 GSC-DL020 GSK-1005 GSK-109