



# EL-WEM+

WiFi CO, and Indoor Air Quality Monitor

# The Key to Comfort and Health

## **EL-WEM+**

- Records CO<sub>2</sub> and Indoor Air Quality (IAQ) with alarms
- Measures:
  - · CO,
  - Particulate Matter Including PM1, PM2.5 and PM10
  - Temperature
  - Humidity
  - VOC's
  - Pressure
- Automatically uploads data to the EasyLog Cloud
- Coloured status ring shows IAQ level
- Sounder and instant notifications when IAQ is poor
- Detects VOCs from paints, lacquers, paint strippers, cleaning products, furnishings, glues, adhesives and alcohol
- Control device and view data anywhere with the EasyLog Cloud or App
- Power supply included
- Internal back-up battery if power interrupted

The EL-WEM+ continually monitors Indoor Air Quality, with a coloured status ring to display the IAQ level at a glance. It also automatically uploads data to the EasyLog Cloud, allowing your complete set of data measurements to be viewed, analysed and downloaded from any internet-enabled device.

The IAQ level is rated in five levels from Excellent to Inadequate, and if it reaches either of the two lowest levels the status ring turns red. Using the EasyLog Cloud, you can set emails and SMS messages to notify you as soon as this happens. You can also activate an audible alert sounder, and set a daily Do Not Disturb period if you wish.

The EL-WEM+ is simple to set up, with a single button press and the EasyLog Cloud App. A power supply is included and the unit also has an internal back-up battery, allowing it to continue operating in low power mode if mains power is temporarily lost.





#### **EL-WEM+**

The EL-WEM+ measures and monitors CO, temperature, humidity, VOC's, PM1 (the smallest type of particle), PM2.5, PM10 and

users as soon as air quality gets poor.

pressure. Like the EL-WEM, the EL-WEM+ checks for any changes to the air quality, sending an instant alert via email and SMS to

£219.99

**Each** 

All data is automatically uploaded to the users EasyLog Cloud account when they can view, analyse and download all their readings.

### **EL-WEM**

£189.99 EasyLog's EL-WEM device continuously observes **Each** Indoor Air Quality, monitoring particulate matter (PM2.5 and PM10) temperature, humidity, VOC's and pressure to ensure the air quality is always excellent. If the air quality becomes poor, an alert is automatically sent to selected users to warn them of the change.

Thanks to the device's Cloud-connectivity, all readings are automatically uploaded to the EasyLog Cloud. Simply set up the EL-WEM using the EasyLog Cloud App and benefit from 24/7 access to data via the EasyLog Cloud.

EasyLog Cloud - Your data, anytime, anywhere

Within the EasyLog Cloud, users can access vital data from any internet-enabled computer, tablet mobile device. Users can view, analyse graph live and historic data from single locations to worldwide operations from anywhere in world. Critical events are notified to specific users seconds via the alarm system that's easily tailored to user's exact requirements.



# **Applications**

The EL-WEM+ Indoor Air Quality Monitor is the perfect device for a wide range of applications including: Housing and Business Premises, Veterinary and Animal Welfare, Museums and Exhibitions, Schools, Colleges and Universities.







Your data, anytime, anywhere


# What Contributes to Indoor Air Quality?

Air quality is a key contributor to feeling comfortable, and staying healthy, at work and in the home. The EL-WEM+ uses a silent fan to sample the air around it, the internal sensors measuring five important factors.



#### Particulate Matter (PM)

Tiny particles that hang in the air include pollen, dust, mould spores and soot from engines and fires. In high concentrations these can cause allergic reactions and health problems. The EL-WEM+ measures three types: PM10, PM2.5 and the extremely small PM1.

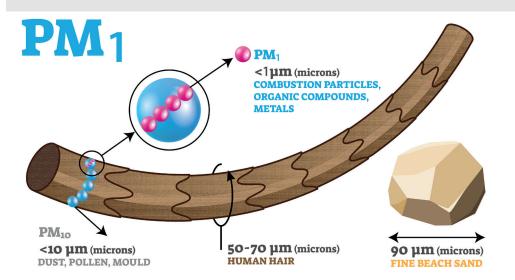

#### **Temperature**

Our bodies immediately sense if we are too hot or too cold, but temperature changes can also cause physical reactions that affect our susceptibility to viruses and other airborne diseases. Poor temperatures can also accelerate the growth of mould and bacteria on indoor surfaces.

#### **Humidity**

The amount of moisture in the air can affect how well our bodies can maintain a comfortable internal temperature. Low levels can lead to irritated skin and eyes, and high humidity can stimulate mould growth.

#### **Volatile Organic Compounds (VOCs)**

VOCs are gases and chemicals in the air that can have health effects. Many common chemicals and materials emit VOCs, sometimes over long periods of time. These include paint and varnishes, cleaning products and air fresheners, plastics, fabrics and many more.

#### CO

Exposure to CO, can produce a variety of health effects. These may include dizziness, restlessness, difficulty breathing, sweating, tiredness, increased heart rate and elevated blood pressure. High CO, readings can also indicate poor ventilation.

#### **Air Pressure**

High atmospheric pressure can exacerbate joint pain and contribute to headaches and migraines. It can also have an effect on blood pressure and blood sugar levels.

# **How Can I Improve Indoor Air Quality?**

The easiest and most important way is to open windows to allow fresh air in, and also to encourage air circulation by opening any internal doors. Also use fans and ventilators where available, and keep rooms clean and free of dust and pet hair. Remove sources of pollutants such as chemicals and cleaning products, and make sure all sources of combustion emissions (such as boilers and cookers) are clean and well maintained. Air conditioning systems and dehumidifiers can help keep both the temperature and humidity within comfortable







Your data, anytime, anywhere

# IAQ RATING INDEX

Indoor Air Quality is scored out of 25, by adding together scores out of 5 for five measured parameters. The total score determines the IAQ rating, on five levels, from Excellent down to Inadequate. The status ring colour on your EL-WEM+ matches the IAQ rating.

IAQ Rating	Excellent	Good	Fair	Poor	Inadequate
IAQ Score	≥ 23 points	≥ 20 points	≥ 15 points	≥ 10 points	< 10 points

The IAQ score is calculated as follows:

	Temperature °C	Humidity % RH	VOC Index	PM10 μg/m³	CO <sub>2</sub> ppm
5 points	18 ∢ T ≼ 21	40 ≤ RH ≤ 60	VOC < 50	PM < 33	CO <sub>2</sub> < 600
4 points	17 < T < 18 21 < T < 22	30 ≤ RH < 40 60 < RH ≤ 70	51 < VOC < 100	33 ≤ PM < 58	600 ≤CO <sub>2</sub> < 800
3 points	16 < T < 17 22 < T < 23	20 < RH < 30 70 < RH < 80	101 ≤ VOC < 150	58 < PM < 75	800 ≤ CO <sub>2</sub> < 1500
2 points	15 < T < 16 23 < T < 24	10 < RH < 20 80 < RH < 90	151 ≤ VOC < 200	75 < PM < 91	1500 ≤ CO <sub>2</sub> < 1800
1 point	T < 15 T > 24	RH < 10 RH > 90	VOC ≽ 201	PM ≽ 91	CO <sub>2</sub> ≥ 1800

- Example: Temperature 10°C (1 point), Humidity 9% (1 point), VOC 220 (1 point), PM10 96 (1 point), CO $_2$  1850 (1 point) = 5 points total, IAQ rating is Inadequate.
- You can find a copy of this table, including Temperature in °F, by clicking the ② help icon next to the measurement readings in the EasyLog Cloud.

# **CONNECTING TO THE CLOUD**

Plug in the power supply, then press the central button to turn the device on.

2

Download and login to the EasyLog Cloud App on your mobile device. Select "Setup Device" and follow the onscreen instructions to add your EL-WEM+.

You can now view the EL-WEM+'s data and change settings either in the EasyLog Cloud App or by visiting your account at: www.easylogcloud.com





Your data, anytime, anywhere

# EasyLog Cloud Your Data: Anytime. Anywhere.



Easily access your most important data, anywhere



and SMS





Connect data loggers from multiple sites in one account



Remotely manage all of your data logger devices



Graph, review and analyse your data



Audits are easy with our event log system



Secure Cloud storage



Configurable user profiles

# **EasyLog Cloud App**

Available for Android and Apple devices, the EasyLog Cloud app enables you to monitor and manage your wireless sensors on the go.





Access your vital data from any internetenabled computer, tablet or mobile device with EasyLog Cloud. From single locations to worldwide operations, the system is perfectly scalable and can run through your existing wireless networks.

Critical events are notified to specific users in seconds via an alarm system that's easily tailored to your exact requirements.

Data is accessible 24/7 and powerful online tools make it simpler than ever to view, compare and analyse readings. An audit trail is automatically created that includes both system and data events.

Starter and Professional accounts are available, always flexible and with no locked-in contracts.





## **INCLUDED IN THE BOX**







**PSU Power supply** 



**3 x ADAPTORS** 




CABLE **Power cable** 

# **ALSO IN THE RANGE**



**EL-WEM** 

# **DIMENSIONS**

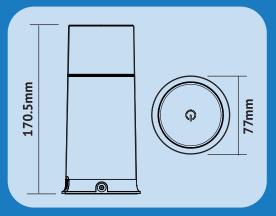

Visit lascarelectronics.com/data-loggers to see our full range of data loggers and measuring devices

# **SPECIFICATIONS**





**EL-WEM+** 

			w		
Particul	回	m	W	回	rter

Particle Size Measured PM1, PM2.5, PM10

Temperature

-20 to +60°C Measurement Range

Resolution 0.1°C

**Measurement Accuracy** ±0.6°C at 15°C

**Humidity** 

0 to 95%RH Measurement Range

1%RH Resolution

±3% Measurement Accuracy

**Volatile Organic Compounds (VOC)** 

±5% **Biogenic VOC Accuracy** 

Pressure

300 to 1100mbar Measurement Range

**Measurement Accuracy** ±0.6mbar

Carbon Dioxide (CO<sub>2</sub>)

0 to 40,000ppm Measurement Range

±3% **Measurement Accuracy** 

**Auto-calibration** Yes

Height x Diameter 170.5 x 77mm



The appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance. This appliance contains batteries that are only replaceable by skilled persons. WARNING: For the purpose of recharging the battery, only use the power supply model: ICP06C-050-1000B provided with this appliance.





# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Environmental Test Equipment category:

Click to view products by Lascar manufacturer:

Other Similar products are found below:

CW40 F150C10E3DRT F150LRS 2740212 2837806 4328074 4366444 S-11 382153 700PTP-1 12420 H115 H300 F150-SLC50

DEM701 HS115 12008761 DT-9851M DT-321S WY-HIC401BC802JK NT-311 NT-312 A13T A37 VICTOR 230D A61 W22940

6921734990129 6921734990112 STHT0-77365 SEFRAM9892 1100-PT100001 STHT77649-1 STHT77648-1 STHT1-77409 MAGNES DO

ST-140 AKCELEROMETR DO ST-140 LM120A 1-77-023 1-77-132 UT305S TM-751 SEFRAM9891 STHT77498-1 FMHT0-77422 0-77-030 STHT0-77363 EL-PDF-1-002 STHT77065-0 FLK-SMFT-1000/PRO