

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

# Heart Rate 11 Click





PID: MIKROE-5170

**Heart Rate 11 Click** is a compact add-on board suitable for heart rate monitoring applications. This board features the <u>OB1203</u>, a multi-channel light sensor (LS/CS), a proximity sensor (PS), and a photoplethysmography sensor (PPG) from <u>Renesas</u>. It can be configured as an ambient light sensor to measure ambient light similar to the human eye experience or as an RGB color sensor. The OB1203 establishes communication to and from the module entirely through a standard I2C compatible interface and has a fully integrated biosensor for reflective photoplethysmography. With the appropriate algorithm, this Click board<sup>™</sup> can determine human heart rate (HR), oxygen saturation (SpO2), respiration rate, and heart rate variability (a measure of stress).

Heart Rate 11 Click is supported by a <u>mikroSDK</u> compliant library, which includes functions that simplify software development. This <u>Click board</u><sup>m</sup> comes as a fully tested product, ready to be used on a system equipped with the <u>mikroBUS</u><sup>m</sup> socket.

# How does it work?

Heart Rate 11 Click as its foundation uses the OB1203, a fully integrated all-in-one biosensor module that measures heart rate and blood oxygen levels from Renesas. The OB1203 combines all light sources, drivers, and sensor elements, in a single optically optimized package and can be used with just one side of a user's finger because it uses the spaceconserving reflective PPG method. The appropriate algorithm can determine human heart rate, respiration rate, and heart rate variability (a measure of stress) or blood oxygen saturation (SpO2) behind IR transmissive but visibly dark ink, allowing implementation in aesthetic industrial designs.

Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.




ISO 27001: 2013 certification of informational security management system. ISO 14001: 2015 certification of environmental management system. OHSAS 18001: 2008 certification of occupational health and safety management system.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

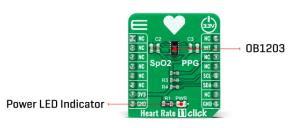

The biosensor module contains different photodiodes for light (R, G, B, and Clear channels), proximity measurements, photoplethysmography, and temperature compensation of the light sensor. Those diodes are arranged in a matrix array, while the single diode for PS/PPG measurement is located below the matrix. The current photodiode is then converted to digital values by an analog-to-digital converter (ADC) and then forwarded via a serial interface for further processing.

The OB1203 communicates with MCU using the standard I2C 2-Wire interface with a maximum clock frequency of 400kHz, fully adjustable through software registers. Also, it uses an interrupt pin, the INT pin of the mikroBUS<sup>™</sup> socket, indicating when a specific interrupt event occurs, such as light, proximity, or photoplethysmography threshold crossed.

This Click board<sup>™</sup> can be operated only with a 3.3V logic voltage level. The board must perform appropriate logic voltage level conversion before using MCUs with different logic levels. However, the Click board<sup>™</sup> comes equipped with a library containing functions and an example code that can be used, as a reference, for further development.

# Specifications

Туре	Biometrics,Heart Rate
Applications	This Click board <sup>™</sup> can determine human heart rate (HR), oxygen saturation (SpO2), respiration rate, and heart rate variability (a measure of stress)
On-board modules	OB1203 - fully integrated all-in-one biosensor module that measures heart rate and blood oxygen levels from Renesas
Key Features	SpO2 measurement behind IR transmissive but visibly dark ink, high illuminance accuracy across various light sources, high sensitivity and resolution, low power consumption, object movement detection, and more
Interface	I2C
Feature	No ClickID
Compatibility	mikroBUS™

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system. ISO 14001: 2015 certification of environmental management system. OHSAS 18001: 2008 certification of occupational health and safety management system.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

Click board size	S (28.6 x 25.4 mm)		
Input Voltage	3.3V		

# **Pinout diagram**

This table shows how the pinout on Heart Rate 11 Click corresponds to the pinout on the mikroBUS<sup>™</sup> socket (the latter shown in the two middle columns).

Notes	Pin	● ● mikro* ● ● ● BUS				Pin	Notes
	NC	1	AN	PWM	16	NC	
	NC	2	RST	INT	15	INT	Interrupt
	NC	3	CS	RX	14	NC	
	NC	4	SCK	TX	13	NC	
	NC	5	MISO	SCL	12	SCL	I2C Clock
	NC	6	MOSI	SDA	11	SDA	I2C Data
Power Supply	3.3V	7	3.3V	5V	10	NC	
Ground	GND	8	GND	GND	9	GND	Ground

### **Onboard settings and indicators**

Label	Name	Default	Description
LD1	PWR	-	Power LED Indicator

# Heart Rate 11 Click electrical specifications

Description	Min	Тур	Max	Unit
Supply Voltage	-	3.3	-	V
PSpectral Response (R/G/B/C)	610/550/470/520			nm
PPG Resolution	16	-	18	bits
AL Sensitivity	0.06	-	150.000	lux
AL&CS Resolution	13	-	20	bits
Operating Temperature Range	-40	+25	+85	°C

# Software Support

We provide a library for the Heart Rate 11 Click as well as a demo application (example), developed using MikroElektronika <u>compilers</u>. The demo can run on all the main MikroElektronika <u>development boards</u>.

Package can be downloaded/installed directly from NECTO Studio Package Manager(recommended way), downloaded from our <u>LibStock™</u> or found on <u>Mikroe github</u> <u>account</u>.

#### **Library Description**

This library contains API for Heart Rate 11 Click driver.

Key functions



Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system. ISO 14001: 2015 certification of environmental management system. OHSAS 18001: 2008 certification of occupational health and safety management system.





- heartrate11 get int pin This function returns the INT pin logic state.
- heartrate11 set led current This function sets the maximal current of the selected LED.
- heartrate11 read fifo This function reads a 24-bit data from the FIFO.

#### **Example Description**

This example demonstrates the use of Heart Rate 11 Click board<sup>™</sup> by reading and displaying the PPG1 (HR) values which can be visualized on the SerialPlot application.

The full application code, and ready to use projects can be installed directly from NECTO Studio Package Manager(recommended way), downloaded from our LibStock<sup>™</sup> or found on Mikroe aithub account.

Other Mikroe Libraries used in the example:

- MikroSDK.Board
- MikroSDK.Log
- Click.HeartRate11

#### Additional notes and informations

Depending on the development board you are using, you may need USB UART click, USB UART 2 Click or RS232 Click to connect to your PC, for development systems with no UART to USB interface available on the board. UART terminal is available in all MikroElektronika compilers.

# mikroSDK

This Click board<sup>™</sup> is supported with <u>mikroSDK</u> - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant Click board<sup>™</sup> demo applications, mikroSDK should be downloaded from the <u>LibStock</u> and installed for the compiler you are using.

For more information about mikroSDK, visit the official page.

#### Resources

mikroBUS™

<u>mikroSDK</u>

Click board<sup>™</sup> Catalog

Click boards<sup>™</sup>

**Downloads** 

Heart Rate 11 click example on Libstock

OB1203 datasheet

#### Heart Rate 11 click 2D and 3D files

Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.

ISO 27001: 2013 certification of informational security management system. ISO 14001: 2015 certification of environmental management system. OHSAS 18001: 2008 certification of occupational health and safety management system.





Heart Rate 11 click schematic

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.cor www.mikroe.com

Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system. ISO 14001: 2015 certification of environmental management system. OHSAS 18001: 2008 certification of occupational health and safety management system.



# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Multiple Function Sensor Development Tools category:

Click to view products by MikroElektronika manufacturer:

Other Similar products are found below :

AS7022-EVALKIT P-NUCLEO-53L5A1 X-NUCLEO-6283A1 SLG-0150 DK-45686 DK-40609-D EV\_ICM-42670-P MIKROE-5448 GX-F12A GX-F12A-P GX-F15A GX-F6A GX-F6A-P GX-H12A GX-H12A-P 1093 MIKROE-2455 MIKROE-2458 MIKROE-2507 MIKROE-2508 MIKROE-2516 MIKROE-2529 1458 DK-20789 176 189 1893 ATQT4-XPRO 910-28015A GX-F12AI-P GX-F15A-P GX-F8A GX-F8A-P GX-H15A-P GX-H8A GX-H8A-P GX-FL15A-P SDAWIR01 AAS-AQS-UNO SDAWIR02 SDAF01 IQS620AEV04-S SMOD701KITV1 DFR0131 DFR0165 DFR0280 SEN0213 SEN0217 SEN0219 SEN0220