Drawing No.	Rev.	Page
NHL-5FB2-W18	O	1 / 8

SPECIFICATIONS

Product Name: Network Monitor Signal Tower

Model: NH□-□FB2□-□□□□□

PATLITE Corporation

Drawing No.	Rev.	Page
NHL-5FB2-W18	O	2 / 8


1. General Specifications

	5 tiers	NHL-5FB2	NHP-5FB2		
	4 tiers	NHL-4FB2	NHP-4FB2		
Model	3 tiers	NHL-3FB2	NHP-3FB2		
	2 tiers	NHL-2FB2	NHP-2FB2		
	1 tier	NHL-1FB2	NHP-1FB2		
Rated Vo	ltage	24VDC (Main Unit)			
	AC Adaptor	Input: 100VAC - 240VAC (50/60Hz) Output: 24VDC		
Operating Volta	age Range	Rated Volta	age ±10%		
Rated Power	Main Unit	Standby: 2.0W Maximum: 4.0W	(with AC Adaptor, 100VAC input)		
Consumption	LED Unit	1.0W (per Unit)		
Operating Ambient	t Temperature	0°C - +40°C (No Dew or Condensation)			
Operating Ambie	ent Humidity	20% - +80% RH (No	Dew or Condensation)		
Storage Ambient		-10°C - +60°C (No	Dew or Condensation)		
Storage Ambier		20% - +80% RH (No	Dew or Condensation)		
Mounting Lo			r Only		
Mounting Di			ight		
Protection I			20		
Insulation Re		More than $10M\Omega$ at $500VDC$ between live p			
		1500VAC applied for 1min (10mA or less)			
Withstand V	/oltage	metallic part without I			
Mass	5 tiers	900g	715g		
(Tolerance	4 tiers	840g	680g		
±10%)	3 tiers	780g	645q		
(AC Adaptor	2 tiers	720g	610g		
not include)	1 tier	660g	575g		
Outer Dime		Refer to the Outer Dimension Drawing			
Sound Pressu		High: 80dB or more Low: 70dB or less (at 25°C)			
Environmenta					
Communicatio	Condition n Method	Ethornot (Conforms	to the IEEE 802.3)		
(LAN)		Ethernet (Conforms to the IEEE 802.3) 10BASE-T / 100BASE-TX (Auto negotiation, Full Duplex / Half Duplex)			
Operating p		"Volume" Switch, "Reset" Switch, "Clear" Switch, "Test" Switch			
Operating p	JOHLIOH	AC Adaptor *1, Replacement plug (5 pcs.) *2, Installation Manual,			
Accesso	ries	Rubber feet (4 pcs.), Adhesive seal, Support Base, Screw (3 pcs.)			
		Tint Film (NHL			
Option	n	Wall Bracket (NH-WST), Part	,,		
			(EN IEC 63000)		
			,		
		EMC Directive (EN 55032, EN 55024) FCC Part15 Subpart B Class B, ICES-003 Class B			
Conformity St	tandards	·			
·		UL 1638, UL 464, CSA C22.2 No. 205			
		KC (KN 61000-6-2, KN 61000-6-4) *3 PSE Compliant AC Adaptor			
			ni AC Adaptor		
		*1 : N type excluded			
Remark		*2 : Only W type			
		*3 : Only N type and W type			
		CE Marking			
		UL/cUL Listed			
		W type is an international model.			

Drawing No.	Rev.	Page
NHL-5FB2-W18	O	3 / 8

2. Model

2.1. Model Number Configuration

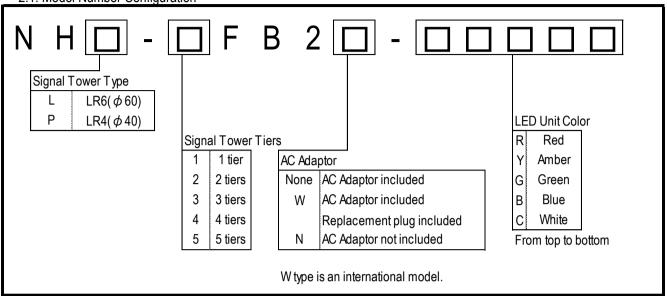

2.2. Model Number List

NHL-1FB2-R	NHL-3FB2-RYG	NHP-1FB2-R	NHP-3FB2-RYG
NHL-1FB2-Y	NHL-3FB2N-RYG	NHP-1FB2-Y	NHP-3FB2N-RYG
NHL-1FB2-G	NHL-3FB2W-RYG	NHP-1FB2-G	NHP-3FB2W-RYG
NHL-2FB2-RY	NHL-4FB2-RYGB	NHP-2FB2-RY	NHP-4FB2-RYGB
NHL-2FB2-RG	NHL-5FB2-RYGBC	NHP-2FB2-RG	NHP-5FB2-RYGBC

3. Action Specification

3.1. Information (Main Unit)

Signal	gnal Tower Lighting pattern for each color LED units,	
		such as continuous lighting, flashing pattern 1, and flashing pattern 2
	Flashing pattern 1	ON(500ms), OFF(500ms) (repetition)
	Flashing pattern 2	ON(80ms), OFF(170ms), ON(80ms), OFF(670ms) (repetition)
Buzzer		Four kinds of buzzer sounds, such as buzzer pattern1, 2, 3, and 4
	Buzzer pattern 1	ON(250ms), OFF(250ms) (repetition)
	Buzzer pattern 2	ON(500ms), OFF(500ms) (repetition)
	Buzzer pattern 3	ON(200ms), OFF(50ms), ON(200ms), OFF(550ms) (repetition)
	Buzzer pattern 4	ON(continuity)

3.2. Information (Network)

Mail Tra	ansmission	When an event occurs, an e-mail message is transmitted to the registered address.
	Number of mail address	8
	Authentication protocol	POP before SMTP, SMTP_AUTH
	Security	SSL, TLS, none
SNMP	TRAP Transmission	When an event occurs, TRAP transmission can be executed.
	Number of transmission	8
	Version	v2c

Drawing No.	Rev.	Page
NHL-5FB2-W18	С	4 / 8

SLMP	Write Command	When "Clear operation" occurs, SLMP Write Command can be executed.
	Number of transmission	4
Protocol	SLMP (The same format as the QnA compatible 3E and 4E frame of MC protocol)	
	1 1010001	TCP / UDP

4. Function Specification

4.1. Main Unit Control Function

1.1. Main one control anotion	
RSH Command	Controllable with RSH Command
HTTP Command Controllable with HTTP Command	
Socket Communication	Controllable with PNS Command and PHN Command
SNMP Command	Controllable with SNMP "set" Command
Version	v1 / v2c
"Clear" Switch	Clear operation is possible with "Clear" Switch of the main unit.

		Controllable Action				
Comm	and	Signal Tower	Buzzer	e-mail	TRAP	SLMP
RSH Command		✓	✓	✓ *1	✓ *1	-
HTTP Command		✓	V	-	-	-
Socket	PNS	✓	✓	-	-	-
Socker	PHN	△ *2	△ *3	-	-	-
SNMP Command		~	V	-	-	-
"Clear" Switch		~	✓ *4	/	V	V

^{*1 :} It can be used when e-mail or TRAP is set to "Active" in the RSH Command Configuration.

4.2. External Monitoring Function

Ping M	onitoring Function	Network abnormality detection by sending Ping network devices
	Number of Monitoring	24
	Monitoring Cycle	60 seconds (Fixed): 12 Devices 1 - 600 seconds (Variable): 12 Devices
	Sending Count	The number of times to detect can be set from 1 to 30.
	Number of Sending	The number of sending Ping by one monitoring can be set from 1 to 3.
		1 (Fixed): 12 Devices 1 - 3 (Variable): 12 Devices
Applica	ation Monitoring Function	External devices abnormality detection by receiving the data from them
	Number of Monitoring	4
	Monitoring Cycle	1 - 600 seconds
SNMP	TRAP Reception Function	TRAP Reception detection
	Version	v1 / v2c
	Number of Reception	64
	variable-bindings	2 OID per 1 TRAP Reception
SLMP	Read Command	Detects the state change of the device information of the PLC
	Number of Monitoring	16
	Transmission Interval	10ms / 50ms / 100ms
	Protocol	SLMP (The same format as the QnA compatible 3E and 4E frame of MC protocol) TCP / UDP

^{*2 :} Signal Tower "Red", "Amber"and "Green",and Flashing pattern 1

^{*3:} Buzzer pattern1 and Buzzer pattern 2

^{*4:} It is possible to stop only the buzzer while maintaining the state of Signal Tower.

Drawing No.	Rev.	Page
NHL-5FB2-W18	O	5 / 8

	Executable action at detection				
Monitoring	Signal Tower	Buzzer	e-mail	TRAP	SLMP
Ping Monitoring	/	✓	'	/	-
Application Monitoring	~	/	/	/	-
TRAP Reception	~	✓	/	/	-
SLMP Read Command	V	V	/	'	-

4.3. Main Unit Status Acquisition Function

Tio: Main othe others / togaloutor		
RSH Command	The state of the main body can be acquired by the status acquisition command.	
Socket Communication	Status acquisition available with PNS Command and PHN Command	
SNMP Command	Status acquisition available with SNMP "get" Command	
Version	v1 / v2c	
HTTP Communication	By executing CGI, the state of the main body can be acquired in XML data format.	
Web browser	Download main unit status and event log with web browser	
	Main Unit Status: XML format file Event Log: text format file	


		Acquisition data		
Comm	and	Signal Tower	Buzzer	
RSH Cor	nmand	/	✓	
Socket	PNS	~	✓	
	PHN	✓ *1	✓ *2	
SNMP Co	mmand	V	V	
XML forr	nat file	/	✓	


^{*1 :} Signal Tower "Red", "Amber"and "Green",and Flashing pattern 1


4.4. Main Unit Setting Function

4.4. Main Onli Setting Function	
Time Correction Function	The internal clock in this product can communicate with an NTP server
	to automatically correct the time.
Automatic Network Setting	Network setting in this product can communicate with an DHCP server
	to automatically set.
Standard Action Setting	This product can set lighting color of the Signal Tower after clear operation is executed.
Self-test Function	Self test of Signal Tower and buzzer is possible
	with test switch of the main body and RSH command.
Config Setting	Various settings of the main body can be read and written as setting file.
Main Unit Setting	Various settings of the main body can be done with a web browser.
Setting Supported languages	Japanese, English, Traditional Chinese

^{*2 :} Buzzer pattern 1 and Buzzer pattern 2

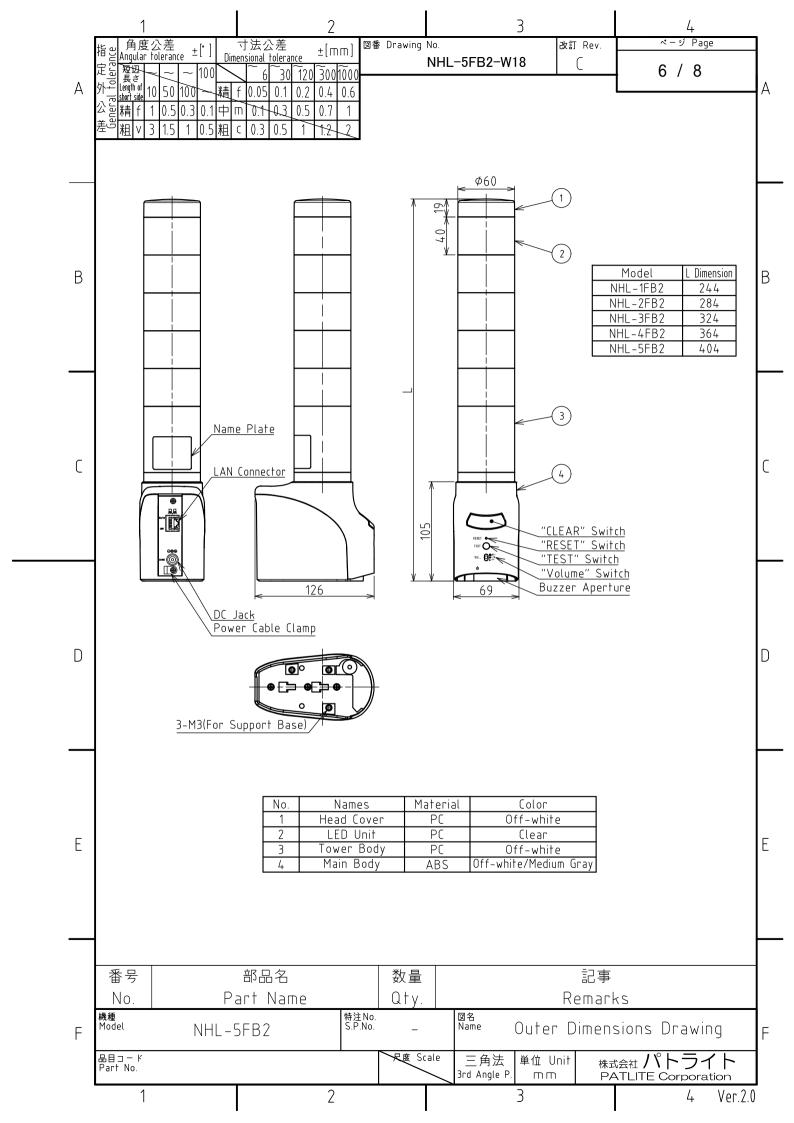

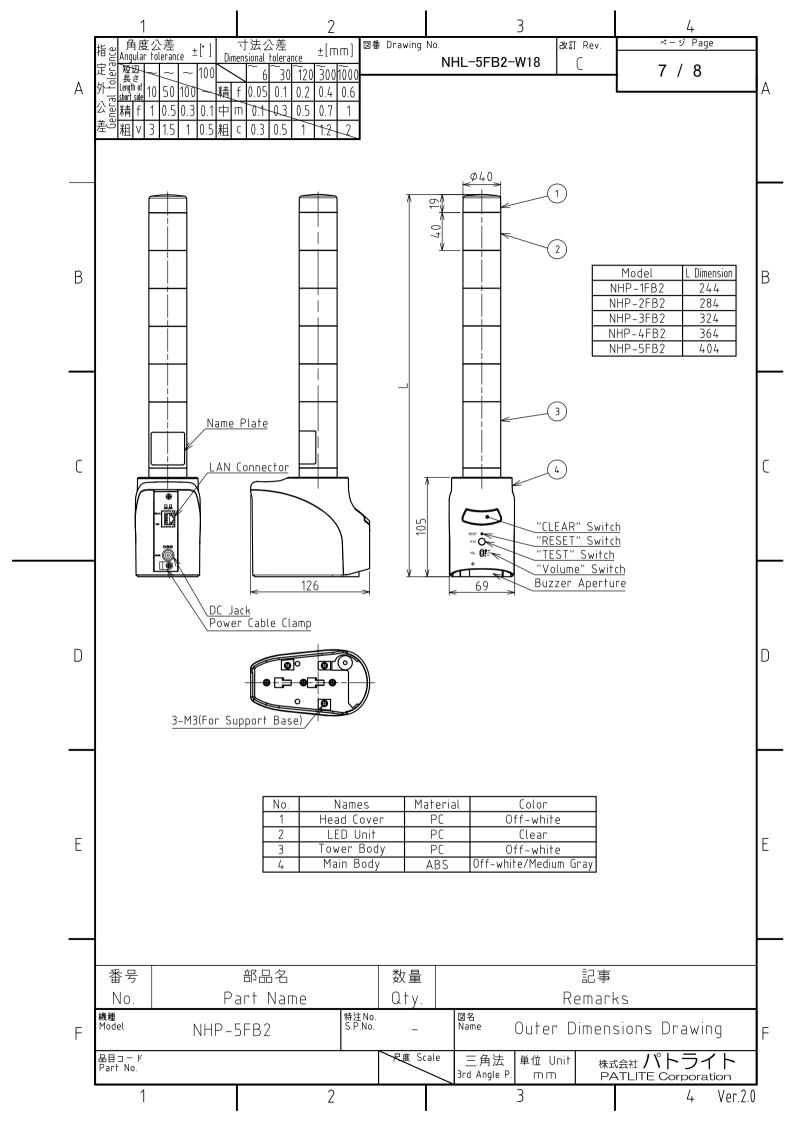

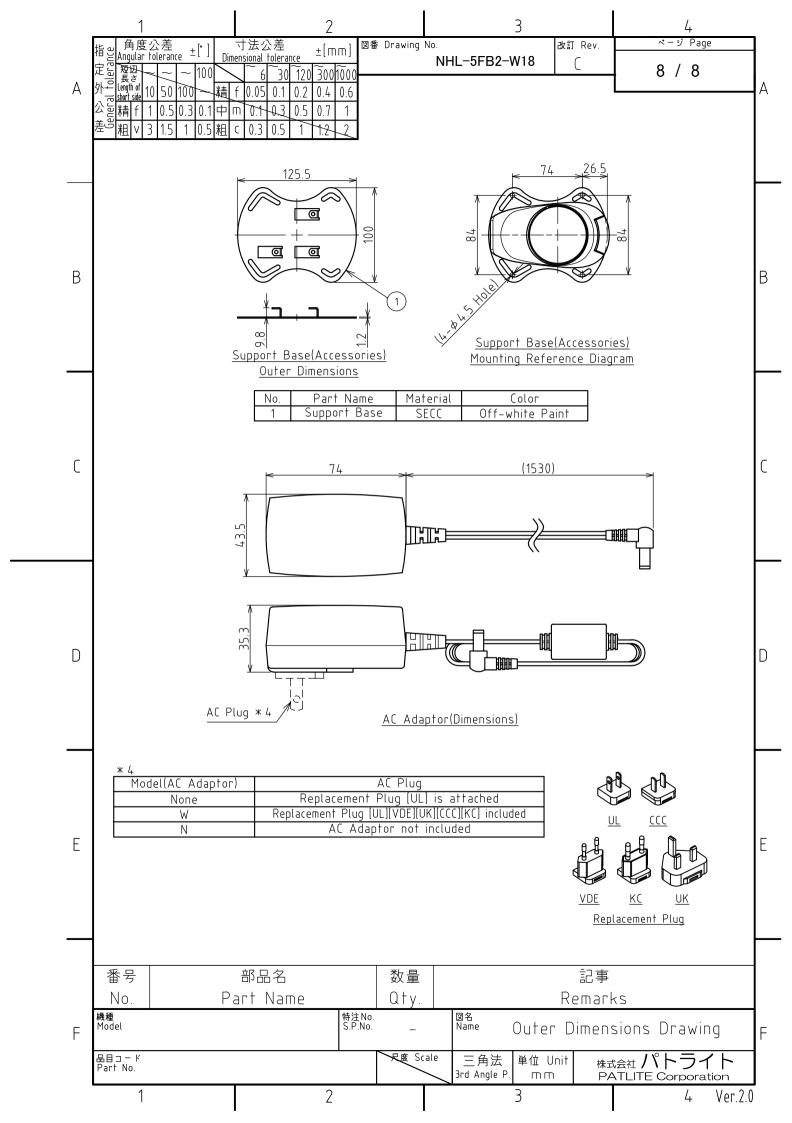

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Patlite manufacturer:

Other Similar products are found below:

LA6-3DTNWB-RYG LR4-302QJBW-RYG LR6-E-B LR7-02WTNU NH-WST VSST-LR6-502LJBW-RYGBC NE-ILTB-M NE-ILXB-M NE-M1ANN-M NE-M1ATB-M NE-24A-R WME-402DFB-RYGB PFH-BT-R PFH-BT-Y WEP-302-RYG WEP-302FB-RYG WEP-402FB-RYGB WEP-502-RYGBC CLA1S-24A-CD-30 CLA2S-24A-CD-30 CLA3S-24A-CD-30 CLK3C-24AG-CD CLN-24A-CD-PT CLN-24A-CD-T CWF3S-24-CD CWK2S-24-CD CWK3C-24-CD+FL008 CWK3S-24-CD CWK6S-24-CD LA6-3DTNUB-RYG LA6-3DTNUB-RYG LA6-5DTNUB-RYGBC LA6-5DTNUB-RYGBC LA6-5DTNWB-RYGBC LFH-24-R LFH-24-Y LR4-302QJNW-RYG LR4-402LJBW-RYGB LR5-02KTNK LR5-02KTNU LR5-02KTNW LR5-02WTNW LR6-202WJBW-RYG LR6-302PJBU-RYG LR6-302WJNU-RYG LR6-302WJNW-RYG LR6-302WJNW-RYG LR6-302WJBW-RYG LR6-402WJBW-RYGB