

Issue: 3

Date: Aug' 2013

Cable Marker Installation Guide

| APPROVALS | NAME | Signed | DATE |
|-------------------------|---------------|-------------------------------------|-----------|
| TECHNICAL | Mario Appello | Document is approved electronically | Aug' 2013 |
| PRODUCT MANAGEMENT - UK | Alan Mitchell | Document is approved electronically | Aug' 2013 |

Table of Contents

| 1.0 | PURPOSE | 2 |
|-----|--------------------------------------|---|
| 2.0 | SCOPE | 2 |
| | REMOVAL OF MARKERS FROM THE BACKBONE | |
| | MARKER INSTALLATION | _ |

The information contained within this document is the property of TE Connectivity. It is supplied in confidence and the commercial security of the contents must be maintained. It must not be used for any purpose other than that for which it is supplied nor may any information contained in it be disclosed to unauthorised persons. It must not be reproduced in whole or in part without obtaining written permission from TE Connectivity.

Author: A Kean Issue date: Aug' 2013 Page: 1 of 4



Issue: 3

Date: Aug' 2013

Cable Marker Installation Guide

1.0 Purpose

- 1.1 To ensure that the integrity of the cable marker is not compromised when it is removed from the backbone and during installation.
- 1.2 Failure to follow this procedure could lead to the Marker being damaged.

2.0 Scope

- 2.1 Cable markers that have a perforation along the length of the product should be removed from the backbone as detailed in section 3; "Removal of Markers from the Backbone", see figures 1 and 2.
 - Product descriptions covered by this procedure begin with:
 - CM-SCE-...
 - CM-SCE-TP-...
 - HTCM-SCE-...
 - HTCM-SCE-TP-...

Figure 1: Perforation of CM-SCE-1/2-4H-4

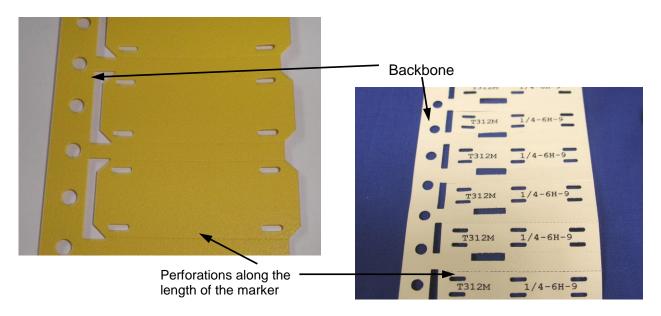


Figure 2: Perforation of CM-SCE-1/4-TP-4H-9

2.2 All Cable markers should be installed as shown in Section 4 "Marker Installation".

Author: A Kean Issue date: Aug' 2013 Page: 2 of 4



Issue: 3

Date: Aug' 2013

Cable Marker Installation Guide

3.0 Removal of Markers from the Backbone

3.1 The following procedure should be followed to prevent tearing of the cable marker whilst removing from the backbone.

3.2 Procedure

- 3.2.1 Grip cable marker by the end closest to the backbone.
- 3.2.2 For thermal transfer products have the smooth side up; for dot matrix printed products have the rough surface should be upwards.
- 3.2.3 Gently pull the marker away from the backbone as shown in figures 3 and 4.

Figure 3: Removal of CM-SCE-1/2-4H-4 from backbone


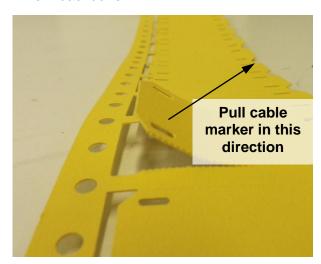


Figure 4: Removal of CM-SCE-TP-1/4-9 from backbone



3.3 The procedure ensures that the force is applied across both of the perforations, thus preventing the product from tearing into the cable tie holes.

Author: A Kean Issue date: Aug' 2013 Page: 3 of 4

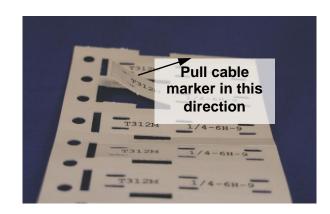


Issue: 3

Date: Aug' 2013


Cable Marker Installation Guide

4.0 Marker Installation

- 4.1 Products descriptions start with:
 - CM-SCE...
 - TMS-CM...
 - HLX...
 - HL...
 - HTTMS-CM...
 - HT-CM-SCE...
- 4.2 To prevent tearing of the cable marker during installation, the cable ties must be applied correctly. Incorrect use of the cable ties exerts undue stress to the edges of the cable-tie holes.
- 4.3 It is recommended that the cable marker is installed in its final desired position and **not** slid after fixing along the cable into the final position.
- 4.4 Note correct positioning of cable ties in photos below.

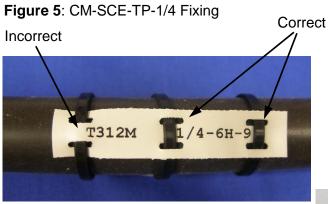



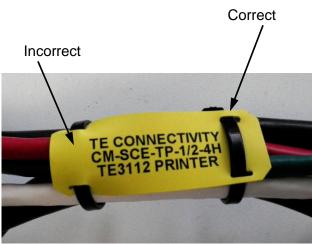

Author: A Kean Issue date: Aug' 2013 Page: 4 of 4

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Wire Labels & Markers category:

Click to view products by TE Connectivity manufacturer:

Other Similar products are found below:

89078GBEST 89082GBESR 89082GBEST PCL025-4 5761-2SF 58400 586R734H02 M1.040.0000.6 CRS-CM5M CRS-M18M CS1836000 CS8626-000 CU6337-000 CU6342-000 CU6343-000 CWD01-0 CWD012-0 CWD012-7 CWD015-3 CWD015-7 CWD02-0 CWD023 CWD02-4 CWD02-6 CWD02-8 CWD02-A CWD02-D CWD02-H CWD02-K CWD02-L CWD02-M CWD02-P CWD02-Q CWD02-R
CWD02-U CWD02-W CWD02-Y CWD03-+ CWD03-0 CWD03-P CWD06-0 CWD06-8 CWD06-9 CWD06-L CWD06-N CWD09-0
CWD09-5 CWD09-7 6806810001 CZ2857-000