

AT Command Manual For ZTE Corporation's MG2639_V2 Module

Version: V2.0

ZTE CORPORATION

Copyright Statement

Copyright © 2011 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE中兴 is the registered trademark of ZTE Corporation. All other trademarks appeared in this manual are owned by the relevant companies.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

ZTE Corporation keeps the right to make the final explanation to this manual.

With strong technical force, ZTE Corporation can provide CDMA/GPRS module customers with the following all-around technical support:

1. Provide complete technical documentation;
2. Provide the development board used for R&D, test, production, after-sales, etc.
3. Provide evaluations and technical diagnosis for principle diagram, PCB, test scenarios;
4. Provide test environment;

ZTE Corporation provides customers with onsite supports, and also you could get supports through telephone, website, instant communication, E-mail, etc.

The module website module.ztemt.com.cn provides the relevant industry information and module technical documentation. The authorized module customers could download the latest technical documentation from our website. If you have more requirements, you could send an E-mail to module@zte.com.cn. You can also call us at 0755-86360280 for technical support.

Preface

Target Readers

This manual is mainly applicable for the following engineers:

- System designing engineers
- Hardware engineers
- Software engineers
- Test engineers

Update History

- **V1.1**
Completely follow MG2636 AT command Set user manual.
- **V1.2**
Completely follow ME3000_V2 AT command Set user manual.
- **V1.3**
Modify the previous documents and make them further standardized;
Delete Relay station Command and Transparent transmission Command;
- **V1.4**
 1. Modify the previous documents and make them further standardized;
 2. Add FTP command;
- **V1.5**
 1. Modify the previous documents and make them further standardized;
 2. Add transparent transfer command.
- **V1.6**
 1. Modify the previous documents and make them further standardized;
- **V1.8**
 1. Modify the previous documents and make them further standardized;

Contents

| | | |
|----------|---|-----------|
| 1 | General Description | 8 |
| 1.1 | Description of AT Commands | 8 |
| 1.1.1 | Type of AT Commands | 8 |
| 1.1.2 | Returned Syntax of AT Commands | 8 |
| 1.1.3 | AT Command Syntax | 8 |
| 1.2 | Abbreviations | 9 |
| 2 | AT Commands | 12 |
| 2.1 | Common Commands | 12 |
| 2.1.1 | A/: repeat | 12 |
| 2.1.2 | ATA: answer | 12 |
| 2.1.3 | ATD: dial | 12 |
| 2.1.4 | ATDL: dial last | 13 |
| 2.1.5 | ATE: enable | 13 |
| 2.1.6 | ATH: hang up | 13 |
| 2.1.7 | ATI: Information | 14 |
| 2.1.8 | ATQ: set whether or not to display the returned value | 14 |
| 2.1.9 | +++ : switch from data mode to command mode | 14 |
| 2.1.10 | ATO: switch from command mode to data mode | 14 |
| 2.1.11 | ATP: pulse | 15 |
| 2.1.12 | ATSO: auto answer setting | 15 |
| 2.1.13 | +CRC: set ringer type | 15 |
| 2.1.14 | +CLVL: volume level | 16 |
| 2.1.15 | +CLIP: Calling Line Identification Presentation | 16 |
| 2.1.16 | +ZSETMUTE: mute control | 17 |
| 2.1.17 | +CIMI: International Mobile Identification | 17 |
| 2.1.18 | +CGMR: get product version | 17 |
| 2.1.19 | +ECHO: echo remove | 17 |
| 2.1.20 | +(C)GSN: get current IMEI | 18 |
| 2.1.21 | +ZVERS: get current software version | 18 |
| 2.1.22 | +CLCK: lock | 18 |
| 2.1.23 | +CCFC: call forwarding number and conditions | 19 |
| 2.1.24 | +CCWA: call waiting | 21 |
| 2.1.25 | +CHLD: call hold | 21 |
| 2.1.26 | *TSIMINS: check SIM card status | 22 |
| 2.1.27 | +CPWD: change password | 23 |
| 2.1.28 | +CGMI: inquire manufacturer's information | 23 |
| 2.1.29 | ATZ: reset | 23 |
| 2.1.30 | +CSCS: character set selection | 23 |
| 2.1.31 | +CLCC: check call status | 24 |
| 2.2 | 25 | |
| 2.3 | DTMF Command | 26 |

| | | |
|--------|---|----|
| 2.3.1 | +VTS: send DTMF | 26 |
| 2.4 | Network Service Command | 27 |
| 2.4.1 | +CREG: network registration and roaming | 27 |
| 2.4.2 | +COPS: network selection | 27 |
| 2.5 | Mobile Device Control and Status Report | 29 |
| 2.5.1 | +CPAS: check module's status | 29 |
| 2.5.2 | +CFUN: set module's function | 29 |
| 2.5.3 | +CMEE: mobile equipment errors | 29 |
| 2.5.4 | +ZPWROFF: power off | 30 |
| 2.5.5 | +CPIN: input PIN | 30 |
| 2.5.6 | +CSQ: check signal strength | 30 |
| 2.5.7 | +CCLK: clock management | 31 |
| 2.6 | Message Service Command | 32 |
| 2.6.1 | +CSCA: SMS center number | 32 |
| 2.6.2 | +CNMA: message acknowledgement | 32 |
| 2.6.3 | +CMGF: SMS mode | 32 |
| 2.6.4 | +CNMI: message indication | 33 |
| 2.6.5 | +CMGR: message read | 35 |
| 2.6.6 | +CMGW: message write | 36 |
| 2.6.7 | +CSMS: select SMS service | 36 |
| 2.6.8 | +CMGS: message send | 37 |
| 2.6.9 | +CPMS: preferred message storage | 38 |
| 2.6.10 | +CMGD: message delete | 39 |
| 2.6.11 | +CMGL: message list | 40 |
| 2.6.12 | +CMSS: messages saved in SIM card | 42 |
| 2.6.13 | +ZSMGS: message full indication | 42 |
| 2.7 | Phonebook Command | 43 |
| 2.7.1 | +CPBS: phonebook storage | 43 |
| 2.7.2 | +CPBR: phonebook read | 43 |
| 2.7.3 | +CPBW: phonebook write | 44 |
| 2.7.4 | +CPBF: phonebook find | 45 |
| 2.7.5 | +CNUM: owner's number | 46 |
| 2.8 | Data Compression Command | 47 |
| 2.8.1 | +IFC: flow control | 47 |
| 2.8.2 | &D: set DTR mode | 47 |
| 2.8.3 | &C: set DCD mode | 47 |
| 2.8.4 | +IPR: set module's baud rate | 47 |
| 2.8.5 | &F: restore factory settings | 48 |
| 2.8.6 | &W: save settings | 48 |
| 2.9 | GPRS Command | 48 |
| 2.9.1 | +CGDCONT: set PDP | 49 |
| 2.9.2 | +CGACT: activate/deactivate PDP | 49 |
| 2.9.3 | +CGATT: set GPRS | 49 |
| 2.9.4 | +CGCLASS: GPRS device class | 49 |

| | |
|--|----|
| 2.10 ZTE Exclusive Commands | 50 |
| 2.10.1 +ZGPIO: read/write GPIO | 50 |
| 2.10.2 +ZSTR: check module's status | 51 |
| 2.10.3 +ZGETICCID: set ICCID | 51 |
| 2.10.4 +ZCSQ: set auto display CSQ | 52 |
| 2.10.5 +ZEDT: set DTR inspection mode | 52 |
| 2.10.6 +ZDSLEEP: 32KHz Deep sleep mode | 53 |
| 2.10.7 +CUSD: send USSD data | 53 |
| 2.10.8 +ZRINGPINMODE: set RING PIN signal mode | 55 |
| 2.11 Network Parameter Commands | 55 |
| 2.11.1 +ZPNUM: set APN, username and password | 56 |
| 2.11.2 +ZPPPOPEN: open GPRS connection | 56 |
| 2.11.3 +ZPPPCLOSE: close GPRS connection | 56 |
| 2.11.4 +ZIPGETIP: check current IP address | 56 |
| 2.11.5 +ZDNSSERV: set DNS IP address | 57 |
| 2.11.6 +ZDNSGETIP: obtain Internet Domain name's IP address | 57 |
| 2.12 TCP Link Commands | 57 |
| 2.12.1 +ZIPSETUP: Set up TCP server link | 58 |
| 2.12.2 +ZIPSEND: send TCP data to target address | 58 |
| 2.12.3 +ZPPPSTATUS: check GPRS connection status | 58 |
| 2.12.4 +ZIPCLOSE: close TCP link | 58 |
| 2.12.5 +ZIPSTATUS: check current TCP link status | 59 |
| 2.12.6 +ZIPRECV: receive data from current data link | 59 |
| 2.13 UDP Link Commands | 59 |
| 2.13.1 +ZIPSETUPU: set up UDP server link | 60 |
| 2.13.2 +ZIPSENDU: send data to UDP server | 60 |
| 2.13.3 +ZIPSTATUSU: check UDP status | 60 |
| 2.13.4 +ZIPCLOSEU: close UDP link | 60 |
| 2.13.5 +ZIPRECVU: receive UDP data | 61 |
| 2.14 Server Commands | 61 |
| 2.14.1 +ZTCPLISTEN: set port monitoring | 62 |
| 2.14.2 +ZTCPSENDP: send data through passively opened link | 62 |
| 2.14.3 +ZTCPCLOSEP: close monitored connection | 63 |
| 2.14.4 +ZTCPRECV(P): receive data report | 63 |
| 2.14.5 +ZTCPSTATUSP: check passively opened link | 64 |
| 2.14.6 +ZIPTIMEOUT: set the timeout for connecting the server & sending data | 64 |
| 2.14.7 +ZTCPTIMEOUT: set the timeout for receiving data | 65 |
| 2.15 FTP Commands | 66 |
| 2.15.1 ZFTPLOGIN: log in FTP server | 66 |
| 2.15.2 ZFTPPTYPE: set FTP file type | 66 |
| 2.15.3 ZFTPUPLOAD: upload files | 67 |
| 2.15.4 ZFTPDNLOAD: download files | 67 |
| 2.15.5 ZFTPDEL: delete files | 68 |
| 2.15.6 ZFTPQUIT: quit FTP | 69 |

| | | |
|--------|---|----|
| 2.16 | Transparent Transfer Command..... | 69 |
| | +ZTRANSFER: Transparent transfer..... | 69 |
| 2.17 | Relevant Audio Commands..... | 72 |
| 2.17.1 | +ZCALLTONE: set pick-up tone..... | 72 |
| 2.17.2 | +ZDTMFTONE: set ZDTMF tone..... | 72 |
| 2.17.3 | +SPEAKER: audio channel switch command..... | 73 |
| 2.17.4 | +ZMICGB: set MIC audio parameters..... | 73 |
| 3 | Application Cases and Precautions..... | 75 |
| 3.1 | SMS Application Case..... | 75 |
| 3.2 | Phonebook Application Case..... | 76 |

1 General Description

1.1 Description of AT Commands

MG2639 provides AT command interfaces, through which the module could communicate with the external devices conveniently. The AT commands set provided by MG2639 module not only covers the standard GSM voice call and SMS applications, but adds some other commands based on GSM specification and some ZTE exclusive commands for users to use conveniently.

1.1.1 Type of AT Commands

As a standard interface, the returned values and syntax of AT commands are both fixed. As a whole, the AT commands could be divided into four types:

- Without parameter: a type of simple commands; Syntax: AT[+|&]<command>, e.g.: AT+CSQ, AT&W
- Query: used to inquire the current setting value; Syntax: AT[+|&]<command>?, e.g.: AT+CNMI?
- Help: used to list the possible parameters of the command; Syntax: AT[+|&]<command>=?, e.g.: AT+CMGL=?
- Parameter: a kind of mostly common syntax, which provides strong flexibility to the command, Syntax: AT[+|&]<command>=<par1>,<par2>,<par3>...

The returned values of this type of commands are all the same. This will be clarified in details later. The basic frame of the returned value is:

```
<CR><LF><Response string><CR><LF>
<CR><LF><OK/ERROR>[ERROR INFO]<CR><LF>
```

1.1.2 Returned Syntax of AT Commands

The following describes the AT commands and returned descriptions supported by MG2639 module:

- AT command returned syntax:
 - <CR><LF><corresponding strings ><CR><LF>
 - An exceptional case: e.g.: AT+ZPOWEROFF, directly return with "OK"
- AT command status report (OK, ERROR):
 - If there is error in AT command syntax, return with "ERROR";
 - If AT command executes successfully, return with "OK";

1.1.3 AT Command Syntax

- AT command starts with "AT" and ends with <CR>;
- After the module runs, the serial port default setting will be: 8-digit data bit, 1-digit stop bit, no parity check, no CTS/RTS, data rate 115200bps.

1.2 Abbreviations

| | | |
|--------------|---|--|
| A | | |
| ADC | Analog-Digital Converter | |
| AFC | Automatic Frequency Control | |
| AGC | Automatic Gain Control | |
| ARFCN | Absolute Radio Frequency Channel Number | |
| ARP | Antenna Reference Point | |
| ASIC | Application Specific Integrated Circuit | |
| | | |
| B | | |
| BER | Bit Error Rate | |
| BTS | Base Transceiver Station | |
| | | |
| C | | |
| CDMA | Code Division Multiple Access | |
| CDG | CDMA Development Group | |
| CS | Coding Scheme | |
| CSD | Circuit Switched Data | |
| CPU | Central Processing Unit | |
| | | |
| D | | |
| DAI | Digital Audio interface | |
| DAC | Digital-to-Analog Converter | |
| DCE | Data Communication Equipment | |
| DSP | Digital Signal Processor | |
| DTE | Data Terminal Equipment | |
| DTMF | Dual Tone Multi-Frequency | |
| DTR | Data Terminal Ready | |
| | | |
| E | | |
| EFR | Enhanced Full Rate | |
| EGSM | Enhanced GSM | |
| EMC | Electromagnetic Compatibility | |
| EMI | Electro Magnetic Interference | |
| ESD | Electronic Static Discharge | |
| ETS | European Telecommunication Standard | |
| | | |
| F | | |
| FDMA | Frequency Division Multiple Access | |
| FR | Full Rate | |

| | | |
|-------------|---|--|
| | | |
| G | | |
| GPRS | General Packet Radio Service | |
| GSM | Global Standard for Mobile Communications | |
| | | |
| H | | |
| HR | Half Rate | |
| | | |
| I | | |
| IC | Integrated Circuit | |
| IMEI | International Mobile Equipment Identity | |
| ISO | International Standards Organization | |
| ITU | International Telecommunications Union | |
| | | |
| L | | |
| LCD | Liquid Crystal Display | |
| LED | Light Emitting Diode | |
| | | |
| M | | |
| MCU | Machine Control Unit | |
| MMI | Man Machine Interface | |
| MS | Mobile Station | |
| | | |
| P | | |
| PCB | Printed Circuit Board | |
| PCL | Power Control Level | |
| PCS | Personal Communication System | |
| PDU | Protocol Data Unit | |
| PLL | Phase Locked Loop | |
| PPP | Point-to-point protocol | |
| | | |
| R | | |
| RAM | Random Access Memory | |
| RF | Radio Frequency | |
| ROM | Read-only Memory | |
| RMS | Root Mean Square | |
| RTC | Real Time Clock | |
| | | |
| S | | |
| SIM | Subscriber Identification Module | |

| | | |
|-------------|---|--|
| SMS | Short Message Service | |
| SRAM | Static Random Access Memory | |
| T | | |
| TA | Terminal adapter | |
| TDMA | Time Division Multiple Access | |
| TE | Terminal Equipment also referred it as DTE | |
| U | | |
| UART | Universal asynchronous receiver-transmitter | |
| UIM | User Identifier Management | |
| USB | Universal Serial Bus | |
| V | | |
| VSWR | Voltage Standing Wave Ratio | |
| Z | | |
| ZTE | ZTE Corporation | |

2 AT Commands

2.1 Common Commands

2.1.1 A/: repeat

| | | |
|-------------|--|---------------------------------|
| Description | This command is used to repeat the previous command. | |
| Syntax | A/ | |
| Example | AT+CSQ | Inquire current signal strength |
| | A/ | Repeat AT+CSQ command |
| | AT+CMGS="13714393404" >123→ | Send a text message |
| | A/ >123→ | Repeat AT+CMGS command |

2.1.2 ATA: answer

| | | |
|-------------|--|---------------------------|
| Description | This command is used to answer a call. | |
| Syntax | ATA | |
| Example | RING | An incoming call rings. |
| | ATA | Answer the incoming call. |

2.1.3 ATD: dial

| | | |
|-------------|---|---|
| Description | This command is used to originate a voice call, data and fax call | |
| Syntax | ATD<string>; ATD<<mem><n>; ATD<n>; ATD>"name"; | |
| Example | AT+CPBS="SM" ATD13024540756; | Select SIM card phonebook as the current phonebook Search the number from SIM card phonebook and dial |
| | AT+CPBS="SM" ATD>2; OK | Select SIM card phonebook as the current phonebook Search the second phone number in current phonebook |
| | ATD>SM1; | Dial the first number in SIM card phonebook |
| | ATD13714393404; | Directly dial the phone number |

| | | |
|------------|---|---|
| | ATD>"name"; | Search the phone number with "name" in SIM card and nvram |
| Parameters | <mem>: phonebook "SM": SIM card phonebook. "ME": local phonebook. "LD": last dialed calls in phonebook. "MC": missed calls "RC": received calls <n>: the n-th option in phonebook. <string>: the number of called party, e.g., *99#. | |

2.1.4 ATDL: dial last

| | | |
|-------------|--|---------------------|
| Description | This command is used to dial the last outgoing number. | |
| Syntax | ATDL | |
| Example | ATD34394036; OK | Dial 34394036 |
| | ATH OK | Hang up the call |
| | ATDL | Dial 34394036 again |

2.1.5 ATE: enable

| | | |
|-------------|---|---|
| Description | This command is used to enable echo display. | |
| Syntax | ATE<n> | |
| Example | ATE0 OK OK | ATE0, don't display input command on the terminal |
| | ATE1 OK ATE1 OK | ATE1, displays input command on the terminal |
| Parameters | <n>=0 Disable echo display. <n>=1 Enable echo display. | |

2.1.6 ATH: hang up

| | | |
|-------------|---|-----------------|
| Description | This command is used to hang up the call. | |
| Syntax | ATH | |
| Example | ATA OK | Answer the call |

| | | |
|--|-----|------------------|
| | ATH | Hang up the call |
|--|-----|------------------|

2.1.7 ATI: Information

| | | |
|-------------|---|--|
| Description | This command is used to display the module manufacturer's information. | |
| Syntax | ATI | |
| Example | ATI ZTE Mobile LTD GSM/GPRS Mobile Station Revision: 1.0 OK | Display the module manufacturer's information. |

2.1.8 ATQ: set whether or not to display the returned value.

| | | |
|-------------|---|--|
| Description | This command is used to set whether or not to display the returned value. | |
| Syntax | ATQ<n> | |
| Example | ATQ0 OK ATQ0 OK | Set the terminal displays the returned value |
| | ATQ1 OK ATQ1ATQ1 | Set the terminal doesn't display the returned value. |

2.1.9 +++: switch from data mode to command mode

| | | |
|-------------|--|--|
| Description | This command is used to switch from data mode to command mode. | |
| Syntax | +++ | |
| Example | ATD*99# CONNECT +++ AT OK | Dial to enter data mode Switch from data mode to command mode |

2.1.10ATO: switch from command mode to data mode

| | | |
|-------------|--|--|
| Description | This command is used to switch from command mode to data mode. | |
| Syntax | ATO | |

| | | |
|---------|--|--|
| Example | ATD*99# CONNECT +++ ATO | Dial to enter GPRS data connection Switch from data mode to command mode Switch from command mode to data mode |
|---------|--|--|

2.1.11 ATP: pulse

| | | |
|-------------|--|---------------------------|
| Description | This command is used for pulse dialling. | |
| Syntax | ATP | |
| Example | ATP OK | Set pulse dialling method |

2.1.12 ATSO: auto answer setting

| | | |
|-------------|--|---------------------------------|
| Description | This command is used to control the module's auto answer mode. | |
| Syntax | ATSO=<value> | |
| Example | ATSO=2 OK | Auto answer after ringing twice |
| | ATSO? 2 OK | Check current settings |
| | ATSO=0 OK | Cancel auto answer |
| Parameter | <value>: ringing times | |

2.1.13 +CRC: set ringer type

| | | |
|-------------|---|---|
| Description | This command is used to display the type of ringer. | |
| Syntax | AT+CRC=<num> | |
| Example | AT+CRC=1 OK +CRING:VOICE | Set RING as ringer type Set CRC as ringer type |
| Parameters | <num>: 0: Do not display the type of ringer 1: display the type of ringer Descriptions of ringer type: VOICE: Voice | |

| | |
|--|--------------------|
| | GPRS: GPRS service |
| | FAX: Fax |

2.1.14+CLVL: volume level

| | | |
|-------------|---|------------------------------------|
| Description | This command is used to set the volume level of the speaker. | |
| Syntax | AT+CLVL=<level> | |
| Example | AT+CLVL=100 OK | Set current receiver volume as 100 |
| Parameters | AT+CLVL? +CLVL:100 | Check the current receiver volume |
| | <level> ranging 0~100, the lower the level is, the smaller the volume is. | |

2.1.15+CLIP: Calling Line Identification Presentation

| | | |
|-------------|--|--|
| Description | This command is used to set CLIP. The default settings are to disable CLIP. | |
| Syntax | AT+CLIP=<mode> +CLIP:<mode> return from AT+CLIP? +CLIP:<number>,<type>,<name>,<subaddr>,<cli_validity> AT+CLIP? +CLIP:<mode>,<status> | |
| Example | AT+CLIP=1 OK | Enable CLIP |
| | RING:+CLIP: "130*****",129, "name","",0 | There is an incoming call, incoming number is 130***** |
| | AT+CLIP=0 OK RING | Disable CLIP No CLIP |
| | At+CLIP? +CLIP: 0,1 OK | Inquire CLIP |
| Parameters | <mode>: 0: disable CLIP 1: enable CLIP; <number>: incoming number (need apply for relevant service) <type>: 129. <name>: contact's name <subaddr>:syntax of sub address specified by satype. Default as null by MTK. <status>: CLIP status 0: Do not provide CLIP service 1: Provide CLIP service 2: Unknown unavailable network | |

2.1.16+ZSETMUTE: mute control

| | | |
|-------------|--|------------------------------|
| Description | This command is used for mute control and it can be used only during the call. | |
| Syntax | AT+ZSETMUTE=<Mode> | |
| Example | AT+ZSETMUTE=? +ZSETMUT: (0-1) OK | check the setting parameters |
| | AT+ZSETMUTE=1 OK | Mute on |
| | AT+ZSETMUTE=0 OK | Mute off |
| Parameters | <Mode>: 0: Turn off mute 1: Turn on mute. | |

2.1.17+CIMI: International Mobile Identification

| | | |
|-------------|---|---------------------------|
| Description | This command is used to read the International Mobile Identification of SIM card and check current PIN. | |
| Syntax | AT+CIMI | |
| Example | AT+CIMI 460030916875923 OK | Check CIMI Return CIMI |

2.1.18+CGMR: get product version

| | | |
|-------------|--|---------------------------------|
| Description | This command is used to obtain the module's current product version. | |
| Syntax | AT+CGMR | |
| Example | AT+CGMR=? OK | No meaning |
| | AT+CGMR +CGMR: Revision: 1.0 OK | Return current module's version |

2.1.19+ECHO: echo remove

| | | |
|-------------|--|-----------------------------|
| Description | This command is used to remove the echo. | |
| Syntax | AT+ECHO=num | |
| Example | AT+ECHO? +ECHO:1 OK | Check current echo settings |
| | AT+ECHO=0 OK | Cancel echo remove |

| | |
|--------|--|
| Syntax | Num: default value 1. 1: set echo remove function 0: cancel echo remove function |
|--------|--|

2.1.20+(C)GSN: get current IMEI

| | | |
|-------------|--|---------------------|
| Description | This command is used to get the current device's IMEI. | |
| Syntax | AT+GSN | |
| Example | AT+GSN N OK | Return current IMEI |

2.1.21+ZVERS: get current software version

| | | |
|-------------|---|-----------------------------------|
| Description | This command is used to get the current software version. | |
| Syntax | AT+ZVERS | |
| Example | AT+ZVERS +ZVERS: **.bin OK | get the current software version. |

2.1.22+CLCK: lock

| | | |
|-------------|---|--|
| Description | This command is used to lock the terminal or network function. | |
| Syntax | AT+CLCK=<fac>,<mode>[,<passwd>[,<class>]] +CLCK:<status> | |
| Example | AT+CLCK=? +CLCK:("PF","SC","AO","OI","OX","AI","IR","AB","AG","AC","FD","PN","PU","PP","PC") OK | |

| | |
|------------|---|
| Parameters | <p><fac>: "SC" SIM card; "AO" all outgoing calls barring; "OI" Outgoing international calls barring; "OX" Outgoing international calls barring except for local; "AI" all incoming calls barring; "IR" Incoming roaming barring; "AB" all services barring; "AG" barring of all outgoing calls; "AC" barring of all incoming calls; "FD" Fixed dial; "PN" Personalized network; "PU" Personalized sub network; "PP" Personalized provider; "PC" Personalized corporate.</p> <p><mode>: 0 unlock 1 lock 2 check the status</p> <p><passwd>: password or operation code, character string type "****".</p> <p><class>: 1 voice call 2 data 4 fax 7 All</p> <p><status>: 0: Disable 1: Enable</p> |
|------------|---|

2.1.23+CCFC: call forwarding number and conditions

| | | |
|-------------|--|---|
| Description | This command is used to set call forwarding number and conditions. | |
| Syntax | AT+CCFC=<reason>,<mode>[,<number> [, <type>[,<class>[,<subaddr>[,<saytype>[,time]]]]]] If mode!=2, setting successfully return: OK; If mode=2, setting successfully return: +CCFC:<status>,<class> | |
| Example | AT+CCFC=? +CCFC: (0,1,2,3,4,5) OK | Check call forwarding control setting Return reason range. |

| | |
|------------|--|
| Parameters | <p><reason>:</p> <p>0: unconditional</p> <p>1: mobile device busy</p> <p>2: No answer</p> <p>3: Can't be connected</p> <p>4: All calls</p> <p>5: all conditions</p> <p><mode>:</p> <p>0: disabled</p> <p>1: enabled</p> <p>2: check status</p> <p>3: register</p> <p>4: delete</p> <p><number>: phone number</p> <p><type>:</p> <p>145: international number</p> <p>129: other number</p> <p><subaddr>: address of character string type</p> <p><saytype>: 128</p> <p><class>:</p> <p>1: voice</p> <p>2: data</p> <p>4: fax</p> <p>7: all</p> <p>Time: 1..20..30 multiplies 5 seconds</p> <p><status>:</p> <p>0: deactivate</p> <p>1: activate</p> |
| Remarks | Need apply for relevant services. |

2.1.24+CCWA: call waiting

| | | |
|-------------|---|---|
| Description | This command is used for call waiting. | |
| Syntax | AT+CCWA=[<n>] [,<mode> [,<class>]] | |
| Example | AT+CCWA=? | List all supported <n> +CCWA: (list of supported <n>s) OK |
| | AT+CCWA? | Read current <n> +CCWA: <n> OK |
| | AT+CCWA=[<n>] [,<mode> [,<class>]] | Call waiting setting As mode!=2, if successful: OK As mode!=2, return: +CCWA:<status>,<class1>[<CR><LF> +CCWA:<status>,<class2>[...]] OK If there is an error in operation: +CME ERROR: <err> If <n>=1, send the result code of call waiting: +CCWA: <number>,<type>,<class> [,<alpha>][,<CLI validity>] Under the premise of call waiting activated, during the call connection process; As the call terminates in the system, send the result code of call waiting. |
| Parameters | <n> 0: do not send the result code of call waiting; 1: send the result code of call waiting. <mode> 0: Deactivate call waiting; 1: Activte call waiting; 2: Check current state; <class> 1: voice call <status> 0: deactivate; 1: activate. <number> call waiting number, and its syntax designated by <type>; <type> <number> syntax <alpha>,<CLI validity> see AT+CLIP | |

2.1.25+CHLD: call hold

| | |
|-------------|--|
| Description | This command is used to set call held and conference call. |
|-------------|--|

| | | |
|------------|---|--|
| Syntax | AT+CHLD=[<n>] | |
| Example | AT+CHLD=? | Check supported <n> +CHLD: (list of supported <n>s) OK |
| | AT+CHLD=[<n>] | Set call held and conference call; If the setting is successful: OK If there is an error in operation: +CME ERROR: <err> |
| Parameters | <p><n></p> <p>0: release all held calls or set a waiting call as UDUB</p> <p>1: Release all activated calls and receive a held or waiting call.</p> <p>1X: Release call X</p> <p>2: Hold all activated calls and receive another held or waiting call.</p> <p>2X: hold all calls except for call X</p> <p>3: Add the held call into the conference call</p> <p>4: Connect two calls or end two calls.</p> <p>5: Activate call request from busy subscriber</p> | |
| Remarks | <ol style="list-style-type: none"> 1. This command is used for telecom service; 2. The range of X value:1~7 3. When there is both held call and waiting call, the process above should be applied for the waiting call. 4. When releasing call, please firstly use AT+CHLD=1 to release the current call, and use ATH to hang up the call. 5. Please refer to the method of conference call provided by the operator when using AT+CHLD=3. | |

2.1.26*TSIMINS: check SIM card status

| | | |
|-------------|--|------------------------|
| Description | This command is used to check SIM card status. | |
| Syntax | AT*TSIMINS=num, status | |
| Example | AT*TSIMINS? | Check SIM card status. |
| | *TSIMINS:0,0 OK | No SIM card. |
| Parameters | <p>Num: take 0 or 1, no meaning.</p> <p>Status:</p> <p>0: There is no SIM card;</p> <p>1: There is SIM card.</p> | |

2.1.27+CPWD: change password

| | | |
|-------------|--|---|
| Description | This command is used to change the password. | |
| Syntax | AT+CPWD=<fac>,<passwd>,<newpasswd> +CPWD:<fac,length>s | |
| Example | <pre>AT+CPWD=? +CPWD: ("SC",8),("P2",8),("AO",4),("OI",4),("OX",4), ("AI",4),("IR",4),("AB",4),("AG",4),("AC",4) OK AT+CPWD="SC","1234","2345" OK</pre> | <p>Check the setting range. Return the list of parameters;</p> <p>Change password of SIM card</p> |
| Parameters | <p>Fac: "SC" SIM card; "AO" all outgoing calls barring; "OI" Outgoing international calls barring; "OX" Outgoing international calls barring except for local; "AI" all incoming calls barring; "IR" Incoming roaming barring; "AB" all services barring; "AG" barring of all outgoing calls; "AC" barring of all incoming calls; "FD" Fixed dial;</p> <p>Passwd: password or operation code, character string type "****".</p> <p>newpasswd: new password or operation code, character string type "****".</p> <p>Length: password length supported by fac.</p> | |

2.1.28+CGMI: inquire manufacturer's information

| | | |
|-------------|---|------------------------------------|
| Description | This command is used to inquire manufacturer's information. | |
| Syntax | AT+CGMI | |
| Example | <pre>AT+CGMI +CGMI: ZTE Mobile LTD OK</pre> | Inquire manufacturer's information |

2.1.29ATZ: reset

| | | |
|-------------|--|--------------------------------|
| Description | This command is used to read the parameter in NVRAM and set it as the current parameter. | |
| Syntax | ATZ<n> | |
| Example | <pre>ATZ0 OK</pre> | Reset the parameter correctly. |

2.1.30 +CSCS: character set selection

| | | |
|-------------|---|--|
| Description | This command is used to select the type of languages; | |
| Syntax | AT+CSCS=<string> | |

| | | |
|------------|---|--|
| Example | <pre>AT+CSCS=? +CSCS: "IRA", "GSM", "HEX", "PCCP437", "8859-1", "UCS2", "UCS2_0X81" OK AT+CSCS="IRA" OK AT+CSCS? +CSCS: "IRA" OK</pre> | |
| Parameters | <p>String: a type of string, selecting IRA, GSM, etc. "IRA" International Reference Alphabet (refer to ITU-T T.50[13]), excluding some special alphabets. "GSM" GSM default symbols (refer to section 6.2.1 in GSM 03.38) . "UCS2" 16bit (ISO/IEC10646[32]); UCS2 string converts to hexadecimal number ranging from 0000 to FFFF;</p> | |

2.1.31 +CLCC: check call status

| | | |
|-------------|---|--|
| Description | <p>This command is used to check the status of current calls or each call;</p> | |
| Syntax | <pre>AT+CLCC +CLCC:<id1>,<dir>,<stat>,<mode>,<mpty>,[,<number>,<type> [,<alpha>[,<priority>]]] +CLCC:<id2>,<dir>,<stat>,<mode>,<mpty>,[,<number>,<type> [,<alpha>[,<priority>]]] OK</pre> | |
| Example | <pre>AT+CLCC OK ATD10086; OK AT+CLCC +CLCC: 1,0,2,0,0,"10086",129 OK</pre> | |

| | |
|------------|--|
| Parameters | <p><idx>: caller ID</p> <p><dir>: call direction, taking the following value:</p> <ul style="list-style-type: none">0: MO1: MT <p><stat> call status, taking the following value:</p> <ul style="list-style-type: none">0: activated1: call held status2: call originated, dialing3: call originated, ringing4: Incoming call ring status5: call waiting <p><mode>: call type, taking the following value:</p> <ul style="list-style-type: none">0: voice call1: data call2: fax <p><mpty>:multi-party call, taking the following value:</p> <ul style="list-style-type: none">0: Non multi-party call1: Multi-party call <p><number>: call number, ASCII code</p> <p><type>: call number type;</p> <p><alpha>: the text information corresponding to the call number in the phonebook (don't support temporarily, reserve the string)</p> <p><priority>: do not support string temporarily</p> |
|------------|--|

2.2

2.3 DTMF Command

2.3.1 +VTS: send DTMF

| | | |
|-------------|---|-----------------------|
| Description | This command is used to send DTMF. | |
| Syntax | AT+VTS=<string> | |
| Example | AT+VTS=? +VTS:(0-9,*#,A,B,C,D),(1-255) OK | Check +VTS parameter |
| | ATD*****; AT+VTS="3, 6, 9" AT+VTS=3 AT+VTS=6 AT+VTS=9 | Dial Send 369 DTMF |
| Parameters | String is a combination of characters, separated by comma. The character ranges from 0 to 9,* , #, A-D. | |

2.4 Network Service Command

2.4.1 +CREG: network registration and roaming

| | | |
|-------------|--|---|
| Description | This command is used to check the module's network registration and roaming status. Note: Need AT&W to save the result when setting 0 or 1. | |
| Syntax | AT+CREG=<mode> +CREG :<mode>,<stat> return code | |
| Example | AT+CREG=0 OK | Disabled network registration and provide result code |
| | AT+CREG? +CREG: 0,1 | Display the module's registration status |
| | AT+CREG=? +CREG: (0-2) OK | Check status range |
| Parameter | <mode>: 0 Disabled network registration and provide result code (default) 1 Enabled network registration and provide result code: +CREG: <stat> 2 Enabled network registration and provide the location information. <stat>: 0: Not logged on the network yet, currently not searching for new operator 1: Already logged on the local network. 2: Not logged on the network, currently searching for the BS 4: unknown code 5: Already logged on the network, under roaming status | |

2.4.2 +COPS: network selection

| | | |
|-------------|--|--|
| Description | This command is used for network selection. | |
| Syntax | AT+COPS=[<mode>[,<syntax>[,<oper>]]] | |
| Example | AT+COPS? +COPS=<mode>[,<syntax>,<oper>] OK | Return current network's registration mode and network |
| | AT+COPS=[<mode>[,<syntax>[,<oper>]]] OK | Select and register network |

| | |
|-----------|--|
| Parameter | <p><mode></p> <p>0 auto select, omit <syntax> <oper></p> <p>1 manual select, need <syntax><oper></p> <p>3 not involve network registration, this command is used to set syntax only; at this point, need <syntax></p> <p>4 manual/auto; If manual registration fails, auto register</p> <p><syntax></p> <p>0 syntax of long character <oper></p> <p>1 ormat of short character <oper></p> <p>2 number syntax <oper></p> <p><syntax>:</p> <p>0 long syntax alpha <oper>,up to 16 character</p> <p>1 short <oper>, up to 8 character</p> <p>2 numeric <oper> (MCC+MNC), default</p> <p><stat></p> <p>0 unknown</p> <p>2 current registered network</p> <p>3 forbidden registered network</p> |
|-----------|--|

2.5 Mobile Device Control and Status Report

2.5.1 +CPAS: check module's status

| | | |
|-------------|--|---|
| Description | This command is used to check the module's work status. | |
| Syntax | AT+CPAS | |
| Example | AT+CPAS +CPAS: 2 OK | Check the module's current work status. |
| Parameter | <p><pas></p> <p>0: Ready to receive AT command</p> <p>2: Unknown status (default)</p> <p>3: Incoming call (ring)</p> <p>4: In a call</p> <p><pas>:</p> <p><pas>:</p> <p>0: ready to receive AT command;</p> <p>1: Not ready to receive AT command;</p> <p>2: Unrecognized status;</p> <p>3: Incoming call (Ring);</p> <p>4: can receive AT command, but in a call;</p> <p>5: In low power consumption mode, can't normally receive AT command.</p> | |

2.5.2 +CFUN: set module's function

| | | |
|-------------|--|--|
| Description | This command is used to enable/disable some functions of the module. | |
| Syntax | AT+CFUN=<func>,<rst> | |
| Example | AT+CFUN=? +CFUN(1,4),(0-1) OK | Check the setting range |
| | AT+CFUN=1,0 | Settings validate, invalid after reset |
| | AT+CFUN=1,1 | Settings valid after reset |
| Parameter | <p><fun></p> <p>1 Full function (default)</p> <p>4 Disable RF Tx. and Rx. Function</p> <p><rst></p> <p>0 valid after settings</p> <p>1 valid after restart</p> | |

2.5.3 +CMEE: mobile equipment errors

| | |
|-------------|---|
| Description | This command is used for mobile equipment's error report. |
| Syntax | AT+CMEE=<n> |

| | | |
|-----------|---|--|
| Example | AT+CMEE? | +CMEE:<n> OK Check current error report method |
| | AT+CMEE=<n> | OK Select error report method |
| Parameter | <n> 0 Only ERROR 1 Provide error's specific number 2 Provide error's specific number and detailed prompt | |

2.5.4 +ZPWROFF: power off

| | | |
|-------------|---|----------------------|
| Description | This command is used to power off the module. | |
| Syntax | AT+ZPWROFF | |
| Example | AT+ZPWROFF OK | Power off the module |

2.5.5 +CPIN: input PIN

| | | |
|-------------|---|---|
| Description | This command is used to check PIN status and input PIN. The functions can be used only after the correct PIN is entered. | |
| Syntax | AT+CPIN= | |
| Example | AT+CPIN? +CPIN:READY OK | check PIN status No need to input new PIN |
| | AT+CPIN? +CPIN:SIM PIN AT+CPIN="*****" OK | check PIN status Need input PIN Enter correct PIN |
| Parameter | AT+CPIN?: check if what passwords need to be entered. +CPIN: READY: don't need to enter any password. +CPIN: SIM PIN: need enter PIN. +CPIN: SIM PUK: PIN unlock password +CPIN: PH-SIM PIN: SIM card bundle password +CPIN: SIM PIN2: PIN2 password +CPIN: SIM PUK2: PIN2 unlock password +CPIN: PH-NET PIN: network password Pin: string value. | |

2.5.6 +CSQ: check signal strength

| | |
|-------------|---|
| Description | This command is used to check received signal strength indicator(rssi) and bit error rate (ber) |
|-------------|---|

| | | |
|------------|--|--|
| Syntax | AT+CSQ | |
| Example | AT+CSQ +CSQ:<rsssi>,<ber> | |
| parameters | <rsssi>: 0-113dbm 1-111dbm 2..30-109..-53dbm 31-51dbm 99: network unavailable <ber>: 0~7: normal 99: network unavailable | |

2.5.7 +CCLK: clock management

| | | |
|-------------|---|--|
| Description | This command is used to set and check the date/time of real-time clock. | |
| Syntax | AT+CCLK=<time> | |
| Example | AT+CCLK? +CCLK: "04/02/09,17:34:23" | Check current time and date Current network time and date |
| parameters | AT+CCLK="04/02/09,18:34:23" | Set current date and time |
| | Time string syntax: "yy/mm/dd, hh: mm: ss " | |

2.6 Message Service Command

2.6.1 +CSCA: SMS center number

| | | |
|-------------|---|--|
| Description | This command is used to set SMS center number. | |
| Syntax | AT+CSCA=<sca>[,<tosca>] | |
| Example | AT+CSCA="+861380****500" OK AT+CSCA? +CSCA: "8613800755500", 145 OK | Set SMS center number Check SMS center number |
| Parameters | <sca>: SMS center address <tosca>: SMS center syntax | |

2.6.2 +CNMA: message acknowledgement

| | | |
|-------------|--|--|
| Description | This command is used for message acknowledgement. | |
| Syntax | AT+CNMA | |
| Example | at+cnmi=2,2,0,0,0 OK at+csms=1 +CSMS: 1,1,1 OK +CMT:,60 AT+CNMA OK | Set message indication syntax Set message service syntax Message acknowledgement |
| Parameters | Valid when setting+CNMI=2,2,0,0,0 and +CSMS=1,1,1,1 | |

2.6.3 +CMGF: SMS mode

| | | |
|-------------|---|---|
| Description | This command is used to set SMS input method. | |
| Syntax | AT+CMGF=<num> | |
| Example | AT+CMGF=1 OK AT+CMGF? +CMGF: 1 AT+CMGF=? +CMGF=(0-1) OK | Set the text mode Check current input method Current settings as text mode Check current setting range |
| Parameters | 0: PDU mode 1: Text mode | |

2.6.4 +CNMI: message indication

| | | |
|------------------|---|--|
| Description | This command is used to set new message indication. | |
| Syntax | AT+CNMI=<mode>,<mt>,<bm>,<ds>,<bfr> | |
| Example | AT+CNMI=? +CNMI: (0-3),(0-3),(0,2,3),(0,1),(0,1) OK | Check current setting range |
| | AT+CNMI=3,1,0,0,0 OK +CMTI: "SM",19 | Set message receiving mode as +CMTI: men, index Receive new messages |
| | AT+CNMI=3,2,0,0,0 OK AT+CMGF=1 OK +CMT: "+86130*****",",", "07/02/14, 10:29:04+32" text | Set message receiving mode Set as TEXT mode Received a message TEXT from 130***** |
| Returned results | +CMTI:<mem>,<index> : receive new message +CMT:,<length><CR><LF><pdu> : directly output message (PDU mode) +CBM:<length><CR><LF><pdu> : directly output cell broadcast message (PDU mode) | |

| | |
|------------|---|
| Parameters | <p><mode>: control the processing of message alert code.</p> <p>0: message alert code cached in TA; if TA is full, the alert code may be saved in other place or the oldest code might be abandoned and replaced by the latest code.</p> <p>1: when the connection of TA-TE is held, abandon the saved message alert code and reject the new alert code; in other cases, directly display the alert code on the terminal;</p> <p>2: when the connection of TA-TE is held, the message alert code is cached in TA, as the connection is released, directly display the alert code on the terminal;; in other cases, directly display the alert code on the terminal;</p> <p>3: directly display the alert code on the terminal;</p> <p><mt>: set the syntax of new message alert code.</p> <p>0: save received messages to default memory (including class 3), do not notify TE.</p> <p>1: The syntax of new message alert code is +CMTI: "MT",<index>, message contents saved but not directly displayed;</p> <p>2: The syntax of New message alert code is: (Text mode) +CMT :<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dc> <sca>,<tosca>,<length><CR><LF><data>, message contents directly displayed but not saved;</p> <p>(PDU mode) +CMT:[<alpha>],<length><CR><LF><pdu></p> <p>3: For class 3 messages, directly send to TE just as <mt>=2. For other class, the same goes to <mt>=1.</p> <p><bm>: Indication method upon the receipt of broadcast message.</p> <p>0: No CBM alert sent to TE.</p> <p>2: Send new CBM directly to TE.</p> <p>(text mode) +CBM :<sn>,<mid>,<dc>,<page>,<pages> <CR><LF><data>(text mode), cell broadcast contents directly displayed but not saved;</p> <p>(PDU mode) +CBM:<length><CR><LF><pdu></p> <p>3: Class 3 CBM uses the result code (defined in <mt>=2) and directly sends to TE.</p> <p><ds>: message status report</p> <p>0: no message status report sent to TE.</p> <p>1: send message status report to TE: +CDS: <length><CR><LF><pdu> (PDU mode) +CDS: <fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> (TEXT mode)</p> <p><bfr>:</p> <p>0: as <mode> is set as 1..3, the code saved in TA will be sent to TE (return OK prior to transmitting the code).</p> <p>1: as <mode> is set as 1..3, the code saved in TA will be erased.</p> |
|------------|---|

2.6.5 +CMGR: message read

| | | |
|------------------|---|--|
| Description | This command is used to read the received message. | |
| Syntax | AT+CMGR=? | |
| Example | <pre>AT+CMGF=1 AT+CMGR=1 +CMGR:"REC UNREAD","133*****",, "04/02/25,12 :58 :04 +04" ABCD OK</pre> | <pre>+CMTI: "MT": 1 Receive the message, saved at index 1 Set TEXT syntax Read the first TEXT message</pre> |
| | <pre>AT+CMGF=0 AT+CMGR=1 +CMGR: 1,,127 0891683108705505F00408A1705581 060008701091905564236E5C0A656C 76845BA26237FF0C60A85DF27ECF62 10529F5F00901A4E86003100300030 51430047005000520053595799104F 1860E04E1A52A1FF0C4ECE00320030 003000375E74003000326708003000 3165E55F0059CB751F654830028C22 8C22FF016DF1573379FB52A8 516C53F8</pre> | <pre>Set PDU mode Read first PDU message</pre> |
| Returned results | <p>AT+CMGR=<index></p> <p>Return syntax:</p> <p>The terminal adaptor would return the message of index saved in mem1</p> <ul style="list-style-type: none"> -if select text mode (+CMGF=1): +CMGR :<stat>,<oa>,[<alpha>],<scts>[,<toa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>] <CR><LF> <data> (used to read received message) +CMGR :<stat>,<da>,[<alpha>][,<toda>,<fo>,<pid>,<dcs>,[<vp>],<sca>,<tosca>,<length>] <CR><LF> <data> (used to read transmitted message) --if select PDU mode (+CMGF=0): +CMGR: <stat>,[<alpha>],<lenth>,<CR>,<LF>,<pdu> OK -if error occurs, prompt: +CMS ERROR:<err> <p>Note: after reading message, the status will change from "REC UNREAD" to "REC READ".</p> | |

| | |
|-----------|--|
| Parameter | <p><alpha>: the name of corresponding <da> or <oa> on the terminal.</p> <p><stat>: the message status in memory.</p> <p><oa>: message original number string</p> <p><da>: message target string</p> <p><scts>: message service center time string</p> <p><lenth>: length of message body <data></p> <p><pdu>: ME/TA hex value</p> <p><stat>:</p> <p>0:“REC UNREAD” received unread message.</p> <p>1:“REC READ” received read message.</p> <p>2:“STO UNSENT” saved unread message.</p> <p>3:“STO SENT” saved read message</p> <p>4: “All” all messages</p> |
|-----------|--|

2.6.6 +CMGW: message write

| | | |
|-------------|--|--|
| Description | This command is used to save the messages into <mem2>. | |
| Syntax | <p>TEXT mode: (AT+CMGF=1)</p> <p>AT+CMGW=<phone number></p> <p>>string<ctrl-Z></p> <p>PDU mode:(AT+CMGF=0)</p> <p>AT+CMGW=<string len></p> <p>>pdu string<ctrl-Z></p> | |
| Example | <pre>AT+CMGF=1 OK AT+CMGW="13714393404" > AT+CMGW="13714393404"<ctrl-Z> +CMGW: 41 OK AT+CMGF=0 OK AT+CMGW=17 >0891683108705505f011000b813120 882624f700f1ff0361f118<ctrl-Z> +CMGW: 42 OK</pre> | <p>Write messages under Text mode</p> <p>Write messages under PDU mode</p> |
| Parameters | <p>phone number:</p> <p>string len: length of PDU string</p> | |

2.6.7 +CSMS: select SMS service

| | |
|-------------|--|
| Description | The command is used to select SMS <service>. Send (SMS-MO), receive (SMS-MT), cell broadcast SMS-CB. |
| Syntax | AT+CSMS = <service> |

| | | |
|-----------|--|--|
| Example | AT+CSMS? +CSMS:0,1,1,1 OK | Check the current SMS service Support receive/transmit message and cell broadcast |
| | AT+CSMS=0 +CSMS: 1,1,1 OK AT+CSMS? +CSMS:0,1,1,1 OK | Set current SMS service as GSM Phase 2 Support receive/transmit message and cell broadcast Check the settings Succeed |
| Parameter | <service> 0: compatible with GSM07.05 Phase 2 version 4.7.0 1: compatible with GSM07.05 Phase 2+ version <mo> 1: support send message <mt> 1: support receive message <bm> 1: support cell broadcast | |

2.6.8 +CMGS: message send

| | | |
|-------------|--|--|
| Description | This command is used to send the message from the terminal to the network. Return the parameter to the terminal after the message is sent. Note: there is error prompt as the message is sent to illegal number. | |
| Syntax | Text mode (AT+CMGF=1) AT+CMGS=<de><CR> <data><Ctrl-Z/ESC> PDU mode(AT+CMGF=0) AT+CMGS=<length><CR> <pdu><Ctrl-Z/ESC> | |
| Example | AT+CMGF=1 OK | Set as text mode |
| | AT+CMGS="13316538879"<CR> ABC<ctrl/Z> OK AT+CMGF=0 OK | Send a "ABC" message to 13316538879 Set as PDU mode |
| | AT+CMGS=17<CR> 0891683108705505f011000b81312 0882624f700f1ff0361f118<Ctrl-Z> +CMGS:2 OK | Send a "ABC" message to 13028862427 |

| | |
|-----------|--|
| Parameter | <p><de>: message sending number under text mode</p> <p><length>: length of bytes in TPDU under PDU mode</p> <p><data>: message under text mode</p> |
|-----------|--|

2.6.9 +CPMS: preferred message storage

| | | |
|-------------|---|--|
| Description | This command is used for preferred message storage. | |
| Syntax | <p>AT+CPMS=<mem1>[,<mem2>[<mem3>]]</p> <p>+CPMS=<used1>,<total></p> | |
| Example | <pre>AT+CPMS="SM","SM","SM" +CPMS:4,50,4,50,4,50 OK at+cpms=? +CPMS: ("SM", "ME", "SM_P", "ME_P", "MT"), ("SM", "ME", "SM_P", "ME_P", "MT"), ("SM", "ME", "SM_P", "ME_P", "MT") OK at+cpms? +CPMS: "SM", 4, 50, "SM", 4, 50, "SM", 4, 50 OK at+cpms="me","me","me" +CPMS: 0, 450, 0, 450, 0, 450 OK at+cpms? +CPMS: "ME", 0, 450, "ME", 0, 450, "ME", 0, 450 OK</pre> | <p>Check message storage in SIM card</p> <p>mem1 total capacity 50 entries, 4 used</p> <p>mem2 total capacity 50 entries, 4 used</p> <p>mem3 total capacity 50 entries, 4 used</p> |

| | |
|------------|--|
| Parameters | <p><mem1>: used to read, delete message in SIM card</p> <p><mem2>: used to write and send message in SIM card</p> <p><mem3>: used for messages not saved to PC in SIM card</p> <p><used>: used entries</p> <p><total>: total number of memory</p> <p>SM: SIM card</p> <p>ME: NVRAM</p> |
|------------|--|

2.6.10+CMGD: message delete

| | | |
|-------------|--|---|
| Description | This command is used to delete a message from selected memory. | |
| Syntax | AT+CMGD=<Index> | |
| Example | <pre> AT+CMGF=1 AT+CMGL="all" +CMGL:1,"REC READ","130*****","", abcdefg +CMGL:2,"REC READ","131*****","", abcdef +CMGL:3,"STO SENT","1331*****","" opqrxt OK AT+CMGD=2 OK </pre> | <p>Set as text mode</p> <p>List all messages</p> <p>Delete the second message</p> |

| | | |
|------------|--|--|
| | <p>AT+CMGF=0 AT+CMGL=4 +CMGL: 1,3,,21 0891683108705505F0010F0B813 120882624F700 0808738B54084F1F5927 +CMGL: 2,3,,21 0891683108705505F001100B813 120882624F700 0808738B54084F1F5927 +CMGL: 3,3,,21 0891683108705505F001110B8131 20882624F700 0808738B54084F1F5927</p> <p>OK AT+CMGD=1 OK</p> <p>at+cmgd=1,1 OK at+cmgd=1,2 OK at+cmgd=1,3 OK at+cmgd=1,4 OK</p> | <p>Set as PDU mode List all messages</p> <p>Delete the first message</p> <p>Delete all read messages</p> <p>Delete all read and sent messages</p> <p>Delete all read, sent and unsent messages</p> <p>Delete all messages</p> |
| Parameters | <p><start_Index>: index of saved messages <mode>: delete marks 0: delete the message at the designated index 1: delete all read messages 2: Delete all read and sent messages 3: Delete all read, sent and unsent messages 4: Delete all messages: delete the message at the designated index</p> | |

2.6.11+CMGL: message list

| | |
|-------------|--|
| Description | The command is used to read a kind of messages saved in the selected memory via +CPMS command. |
| Syntax | AT+CMGL=<stat> |

| | | |
|------------------------|---|--|
| <p>Example</p> | <pre>AT+CMGF=1 OK AT+CMGL="ALL" +CMGL:1,"REC READ","130*****",",", abcdefg +CMGL:2,"REC READ","131*****",",", abcdef +CMGL:3,"STO SENT","1331*****",",", opqrx OK</pre> | <p>Set as text mode</p> <p>Use text mode</p> <p>Check all messages</p> |
| <p>Returned syntax</p> | <p>1) text mode as below:</p> <pre>+CMGL :<index>,<stat>,<da/oa>,<[alpha]>,<[scts]>,<[tooa/toda>,<length> <CR><LF><data><CR><LF> +CMGL :<index>,<stat>,<da/oa>,<[alpha]>,<[scts]>,<[tooa/toda>,<length> <CR><LF><data> [...] (Received/transmitted message list) OK</pre> <p>2)PDU mode as below:</p> <pre>+CMGL:<index>,<stat>,<[alpha]>,<length><CR><LF><pdu></pre> | |
| <p>Parameters</p> | <p>1. text mode(+CMGF=1)</p> <pre><stat> REC UNREAD: receive unread message REC READ: receive read message STO UNSENT: store unsent message STO SENT: store sent message ALL: all messages</pre> <p>2.PDU Mode (+CMGF=0)</p> <pre><stat> <stat>: 0: received unread message 1: received read message 2: saved unsent message 3: saved unsent message 4: All messages</pre> <pre><index>: message index <length>: TPDU length in PDU mode <pdu>: binary system in PDU mode <data>: message text in text mode</pre> | |

2.6.12+CMSS: messages saved in SIM card

| | | |
|-------------|--|--|
| Description | This command is used to send the messages saved in SIM card. | |
| Syntax | AT+CMSS=<index>[,<da> [,<toda>]] Return syntax: +CMSS : <mr> 或+CMS ERROR: <err> If the new target number is designated, the new number will replace the number saved in the message. | |
| Example | AT+CMGF=1 AT+CMGW="1331653****"<CR> ABC<ctrl-Z> +CMGW:2 OK | Set as text mode Write a message and send it to 1331653**** The message will be saved in index 2 |
| | AT+CMSS=2 +CMSS:0 OK | Send the messages saved in index 2 Message sent CMSS return initial value 0 |
| | AT+CMSS=2 +CMSS:1 OK | As the message is saved Do not designate the number to send the message Message sent, (send to the address used to save the message CMSS return value 1 |
| | AT+CMSS=2,"1302755****" +CMSS:2 OK | Use number 1302755**** to replace the original number 1331653****, and send a message to new number |

2.6.13+ZSMGS: message full indication

| | | |
|-------------|---|-------------------|
| Description | This command is used to indicate the message full status. | |
| Syntax | +ZSMGS:<status> | |
| Example | +ZSMGS:FULL OK | +ZSMGS:FULL OK |
| Parameters | <status>: messages status full | |

2.7 Phonebook Command

2.7.1 +CPBS: phonebook storage

| | | |
|-------------|---|--|
| Description | This command is used to select phonebook memory. | |
| Syntax | AT+CPBS=<type> | |
| Example | AT+CPBS? +CPBS: "SM",1,250 OK | Check current phonebook settings Select SIM card as current phonebook |
| | AT+CPBR=1 +CPBR=1,"130*****",129,"" OK | Check phonebook storage memory |
| | AT+CPBS=? +CPBS: ("ME", "SM", "LD", "MC", "RC","FD","DC","ON") OK | Select the phonebook saved in SIM card |
| Parameters | Type: "SM" SIM card "FD" Fixed dial "LD" Last dial "MC" Missed calls "ME" Module memory "DC" Dialed calls "RC" Received calls "ON": number list in SIM card (or ME) | |

2.7.2 +CPBR: phonebook read

| | | |
|-------------|---|---|
| Description | This command is used to read the phonebook information. | |
| Syntax | AT+CPBR=<index1>,[<index2>] +CPBR:<index>,<number>,<type>,<text> | |
| Example | AT+CPBR=? +CPBR: (1-10),40,13 OK | Check current phonebook information |
| | AT+CPBR=1 +CPBR=1,"130*****",129,"" OK | Read the first number of currently selected phonebook |

| | | |
|------------|--|---|
| | <pre>AT+CPBS="SM" OK AT+CPBR=? +CPBR: (1-10),40,13 AT+CPBR=1,3 +CPBR: 1,"8151****",129,"" +CPBR: 2,"8636****",129,"" +CPBR: 3,"8604****",129,""</pre> | <p>Select SIM card phonebook</p> <p>Check SIM card phonebook information</p> <p>Read the contacts information from 1 to 3</p> |
| Parameters | <p>index1: read phonebook index</p> <p>index2: read the contacts information from index1 to index2</p> <p>index: index</p> <p>number: phone number</p> <p>type: phone type</p> <p>129: domestic</p> <p>145: international</p> <p>text: number's corresponding name</p> | |

2.7.3 +CPBW: phonebook write

| | | |
|-------------|--|--|
| Description | This command is used to write information into the phonebook. | |
| Syntax | <pre>AT+CPBW= <index>,<number>,<type>,<name> +CPBW:(<index>),<length>,<type>,<tlength></pre> | |
| Example | <pre>AT+CPBW=? +CPBW: (1-250),40,(129,145),14 OK</pre> | <pre>AT+CPBW=? +CPBW: (1-250),40,(129,145),14 OK</pre> |
| | <pre>AT+CPBS="SM" OK AT+CPBW=1,"130*****",129, "john" OK AT+CPBR=1 +CPBR:1,"130*****",129, "john" OK AT+CPBW=1 OK</pre> | <p>Select SIM card memory</p> <p>Write the number and number at Index 1 in the phonebook</p> <p>Read the first name and number in phonebook</p> <p>Delete the first entry in phonebook</p> |

| | |
|------------|---|
| Parameters | Index: index length: number length type: phone type 129: domestic 145: international tlength: length of contact's name Number: phone number Name: name corresponding to the number |
| Remarks | For Chinese name, the limit length of Chinese name is not 14 because the Chinese string is ended with "\0\0". |

2.7.4 +CPBF: phonebook find

| | | |
|-------------|--|---|
| Description | This command is used to find the information in phonebook. | |
| Syntax | AT+CPBF= <name> +CPBF: <index>,<number>,<type>,<name> +CPBF:<nlength>,<tlength> | |
| Example | AT+CPBF=? +CPBF:40,14 OK | Check current phonebook information Phone number length 40 Name length 14 |
| | AT+CPBS="SM" OK AT+CPBW=1,"130*****",129, "john" OK AT+CPBR=1 +CPBR:1,"130*****",129, "john" OK AT+CPBF="john" +CPBF: 1,"130*****",129,"john" OK | Select phonebook Write phone information in the first field of current phonebook Read relevant information Search the contacts with the name John |
| Parameter | index: index nlength: number length type: phone type 129: domestic 145: international tlength: length of contact's name Number: phone number Name: name corresponding to the number | |
| Remarks | Only find in "SM","ME", can't find in "LD", "MC", "RC","FD","DC","ON". | |

2.7.5 +CNUM: owner's number

| | | |
|-------------|--|-------------------------|
| Description | This command is used to read the owner's number. | |
| Syntax | AT+CNUM | |
| Example | AT+CNUM +CNUM: "","130*****",129,7,4 OK | Read the owner's number |
| Parameter | The owner's number can be written into SIM card through AT+CPBS="ON" ;AT+CPBW command and read through AT+CNUM command. | |

2.8 Data Compression Command

2.8.1 +IFC: flow control

| | | |
|-------------|--|---|
| Description | This command is used to set the flow control between TE-TA. | |
| Syntax | AT+IFC=[<mode1 >[,<mode2>]] | |
| Example | AT+IFC=2,2 OK | Set mode1 of TE-TA flow control as RTS, mode2 as CTS |
| Parameter | mode1: 0: no flow control 1: XON/XOFF, don't transmit data; 2: RTS; 3: XON/XOFF, transmit data. mode2: 0: no flow control 1: XON/XOFF; 2: CTS; | |

2.8.2 &D: set DTR mode

| | | |
|-------------|---|-----------------|
| Description | This command is used to set DTR mode; | |
| Syntax | AT&D[<value>] | |
| Example | AT&D0 OK | Omit DTR signal |
| Parameter | value: 0: Omit DTR signal; 1: DTR from OFF to ON; 2: DTR from ON to OFF; | |

2.8.3 &C: set DCD mode

| | | |
|-------------|--|----------------------------|
| Description | This command is used to set DCD mode; | |
| Syntax | AT&C[<value>] | |
| Example | AT&C0 OK | DCD signal is always valid |
| Parameter | value: 0: DCD signal is always valid; 1: DCD signal is valid if there is data; | |

2.8.4 +IPR: set module's baud rate

| | | |
|-------------|--|--|
| Description | This command is used to set the module's baud rate and automatically save the current baud rate. | |
| Syntax | AT+IPR=<baud rate> | |

| | | |
|---------|--|----------------------------------|
| Example | AT+IPR? +IPR: 115200 OK | Check current module's baud rate |
| | AT+IPR=? | Check supported baud rate |
| | AT+IPR=115200 OK | Set the baud rate as 115200 |
| Remarks | The default is the saved setting of baud rate. | |

2.8.5 &F: restore factory settings

| | | |
|-------------|---|--------------------------|
| Description | This command is used to restore factory settings. | |
| Syntax | AT&F | |
| Example | AT&F | Restore factory settings |
| Remarks | <p>AT&F command's parameters include ATS, ATQ & ATE. AT&F basic parameters can't be validated from the echo of AT commands.</p> <p>Reference validation method: after turning on the module, firstly input AT&V, obtain basic parameters; use the set parameters such as ATS, CREG; after setting, use AT&F to obtain the basic parameters. Compare these parameters and check if they are identical.</p> | |

2.8.6 &W: save settings

| | | |
|-------------|--|--------------------------------------|
| Description | This command is used to save the current parameter settings. | |
| Syntax | AT&W | |
| Example | AT&W | Save the current parameter settings. |
| Remarks | <p>AT&W command's parameters used to save include ATE, ATQ and ATS. The user parameters saved by AT&W can't be validated from the echo of AT commands.</p> <p>Reference validation method: firstly use the set parameters such as ATE, ATQ & ATS, use AT&V to read the user information, and then input AT&W; after restarting the module, use ATZ1 to read NV and use AT&V to read the user information. Compare to the parameters before restarting and check if they are identical.</p> | |

2.9 GPRS Command

2.9.1 +CGDCONT: set PDP

| | | |
|-------------|--|--|
| Description | This command is used to set GPRS PDP syntax; | |
| Syntax | AT + CGDCONT=<cid>, <type>, <APN>[,<PDP_ADDR>] | |
| Example | At + CGDCONT=1, "IP", "CMNET" ATD*99# Connect | |
| Parameters | cid: used to mark the number of PDP, minimum 1; type: a type of PDP package; IP: use TCP/IP package; APN: access point network PDP_ADDR: user designated IP address (optional) | |

2.9.2 +CGACT: activate/deactivate PDP

| | | |
|-------------|---|--|
| Description | This command is used to activate/deactivate PDP settings. | |
| Syntax | AT+CGACT= [<state> [, <cid> [, <cid> [,...]]]] | |
| Example | At + CGDCONT=1,"IP","CMNET" OK AT+CGACT=1,1 OK | |
| Parameters | cid: used to mark PDP parameter; state: used to indicate PDP status; 0: deactivate; 1: activate; | |

2.9.3 +CGATT: set GPRS

| | | |
|-------------|---|--|
| Description | This command is used to set GPRS service. | |
| Syntax | AT+CGATT=[<state>] | |
| Example | AT+CGATT? +CGATT:0 OK AT+CGATT=1 OK | Check GPRS service status Set GPRS service status |
| Parameter | state: 0: detach 1: attach | |

2.9.4 +CGCLASS : GPRS device class

| | |
|-------------|---|
| Description | This command is used to check GPRS device levels. |
| Syntax | AT+CGCLASS=[<class>] |

| | | |
|-----------|--|---------------------------|
| Example | AT+CGCLASS? +CGCLASS:"B" OK | Check GPRS device levels. |
| Parameter | class: B: support Class B CG :support GPRS only CC: support circuit exchange only | |

2.10 ZTE Exclusive Commands

2.10.1 +ZGPIO: read/write GPIO

| | |
|-------------|---|
| Description | This command is used to set input/output interface and read/write GPIO value. |
|-------------|---|

| | | |
|-----------|---|--|
| Syntax | AT+ZGPIO=<flag>,<index>,<value> | |
| Example | AT+ZGPIO=0,5 (read) | |
| | +ZGPIO: 0 OK | |
| Parameter | AT+ZGPIO=1,22,1 (write) | |
| | OK | |
| Remarks | Only GPIO5, GPIO22 provided to users for operation. | |

2.10.2+ZSTR: check module's status

| | | |
|-------------|--|------------------------------|
| Description | This command is used to check the module's operation status; | |
| Syntax | AT+ZSTR=<status> +ZSTR: <status>,<value> | |
| Example | AT+ZSTR=1 | Check initialization status |
| | AT+ZSTR=2 | Check network status |
| | AT+ZSTR=? | Check the list of parameters |
| Parameters | <status> 1:No meaning, input AT+ZSTR=1, and display ZSTR: 1,2。 2: network status. <value> 0:network unavailable; 1:network available; 2: no meaning. | |

2.10.3+ZGETICCID: set ICCID

| | | |
|---------------------------------|---|---|
| Description | Read ICCID in SIM card | |
| Syntax | AT+ZGETICCID | |
| Example | No parameter | |
| Descriptions of returned values | +ZGETICCID:89860042190733578148 OK | Description: ICCID value as 89860042190733578148 |

2.10.4+ZCSQ: set auto display CSQ

| | | |
|-------------|---|---------------------|
| Description | <p>This command can be used to set a threshold value <NUM>. As the RSSI is larger than the threshold value, the module will send +CSQ at the COM port.</p> <p>Note: Note: the threshold value <NUM> does not refer to the RSSI. The threshold value is identical to the <rssI> displayed by the command AT+CSQ. Besides, the command would affect RI status. Please pay attention and avoid mixing with incoming call indication.</p> | |
| Syntax | AT+ZCSQ=<NUM> | |
| Example | AT+ZCSQ=5 | +CSQ: 24,0 OK |
| | AT+ZCSQ? | 5 OK |
| | AT+ZCSQ=? | +ZCSQ: (0-32) OK |
| Parameter | <NUM> range: 0~32 | |
| Remarks | <p>As the RSSI is larger than the threshold value <NUM>, the module would pull RI pin (ME3000 Pin15) down 50ms and display the current RSSI value in the syntax of "+CSQ: <rssI>,<ber>" while restoring RI pin's high level.</p> <p>If the threshold value <NUM> is equal to 0, stop reporting the signal quality.</p> <p>If the threshold value <NUM> default value is 0, the module will auto restore to the default settings after restart.</p> <p>When checking RSSI, if return "+CSQ:99,99"; 99 doesn't represent the actual <rssI> value, but the valid <rssI> value which is not yet obtained.</p> | |

2.10.5+ZEDT: set DTR inspection mode

| | | |
|-------------|--|--------------------|
| Description | <p>This command is used to set the inspection mode for DTR pin.</p> <p>There are two inspection modes: A) the module reads DTR pin's level; as DTR pin is at low level, the module think DTR signal is valid, namely the module is effectively connected with DTE device; otherwise, the module is disconnected with DTE device; B) the module doesn't read DTR pin's level; and the DTR signal would be always valid, namely the module will be always connected with DTE device effectively.</p> | |
| Syntax | AT+ZEDT=<NUM> | |
| Example | AT+ZEDT=1 | OK |
| | AT+ZEDT? | +ZEDT: 1 OK |
| | AT+ZEDT=? | +ZEDT: (0,1) OK |
| Parameter | <NUM> range: 0~1 | |

| | |
|---------|---|
| Remarks | <p>The command “+ZEDT” is mainly used to set the module at low power consumption mode; under low power consumption mode; the module could intermittently turn off the RF components, besides, the MCU、DSP、PLL , external clock at digital baseband part can enter dormant mode, and 26MHz main crystal oscillator would enable/disable regularly to reduce the module’s power consumption.</p> <p>Whether or not the module can enter low power consumption mode depends on the following factors: 1) Key (including ON/OFF key) event and exception/external interruption; 2) whether or not receive valid DTR signal; 3) OTA event (e.g., receive text message, incoming call, etc.)</p> <p>In order to make the module enter low power consumption mode, please use the command “AT+ZEDT? ” to check the module’s current settings after start-up; if returning with “+ZEDT: 0”, please use the command “AT+ZEDT=1” to change the settings; If you ever use the ON/OFF jumper cap, remove it. Disconnect the COM port---including AT port and debugging port. The module would enter the low power consumption mode after a while (1~3 minutes).</p> <p>The default value of the setting value <NUM> is 0.</p> <p>Besides, the command “+ZEDT” would effect the status LED. After setting AT+ZEDT=1, the status LED would not flash. The status LED will restore normally after changing the settings through the command AT+ZEDT=0 and restarting the module.</p> |
|---------|---|

2.10.6+ZDSLEEP: 32KHz Deep sleep mode

| | | |
|-------------|---|--------------------|
| Description | This command is used to enable/disable 32KHz sleep mode. | |
| Syntax | AT+ZDSLEEP=<mode> | |
| Example | AT+ZDSLEEP=1 | Enable sleep mode |
| | AT+ZDSLEEP=0 | Disable sleep mode |
| Parameter | <mode> 0: disable sleep mode 1: enable sleep mode | |
| Remarks | After entering sleep mode, awaken through DTR. Valid at high level. | |

2.10.7+CUSD: send USSD data

| | |
|-------------|---|
| Description | Send USSD data (ASCII code) |
| Syntax | AT+CUSD=n,0,"str",dcs |
| Parameter | 1. <n> : ➤ 0 disable result code presentation in the TA ➤ 1 enable result code presentation in the TA ➤ 2 cancel session 2. <str> |

| | | |
|--------------------------------|---|--|
| | string type: USSD string (see 3GPP 27.007 for use)。 Please use ASCII code. 3. <dc> integer type: 3GPP 23.038 Cell Broadcast Data Coding Scheme。 Recommended to use 15. | |
| Descriptions of returned value | +CUSD: <m>[,<str>,<dc>] OK Among: <m> 0 no further user action required 1 further user action required 2 USSD terminated by network 3 other local client has responded 4 operation not supported 5 network time out | |
| Example | AT + CUSD=1,0,"*100#",15 +CUSD: 1,"6b228fce4f7f75285e7f4e1c79fb52a85feb4fe1003100300030ff01000a003165b095fb59296c14000a003280a17968884c60c5000a00334f1195f29a7f7ad9000a00346c11751f67e58be2000a00357ecf51786d4b8bd5000a0036621176845feb4fe1000a00374f7f75285e2e52a9000a",72 OK | Connect *100#, and returned information is within", and the encoding method is UCS2. |
| Note | The second parameter must be 0. | |

| | | |
|--------------------------------|--|--|
| Description | Send USSD data (binary) | |
| Syntax | AT+CUSD==n, len, dcs | |
| Parameter | 1. <n> : > 0 disable result code presentation in the TA > 1 enable result code presentation in the TA > 2 cancel session 2. <len> The length of binary data required, unit: byte 3. <dc> integer type: 3GPP 23.038 Cell Broadcast Data Coding Scheme; Recommended to use 15. | |
| Descriptions of returned value | +CUSD: <m>[,<str>,<dc>] OK Among: <m> 0 no further user action required 1 further user action required 2 USSD terminated by network | |

| | | |
|---------|--|---|
| | 3 other local client has responded 4 operation not supported 5 network time out | |
| Example | at+cUSD=1,5,15 > OK +CUSD: 1,"6b228fce4f7f75285e7f4e1c79fb52a85feb4fe1003 100300030ff01000a003165b095fb59296c14000a00 3280a17968884c60c5000a00334f1195f29a7f7ad00a 00346c11751f67e58be2000a00357ecf51786d4b8bd 5000a0036621176845feb4fe1000a00374f7f75285e2 e52a9000a",72 | 1. Connect *100#, and returned information is within "", and the encoding method is UCS2. 2. After > appears, you can input any data stream in binary mode, but there is no display. |
| Note | 1. The second parameter must be larger than 0. 2. There is no data display. | |

2.10.8+ZRINGPINMODE: set RING PIN signal mode

| | | |
|---------------------------------|--|---------------------------------|
| Description | This command is used to set RING PIN signal mode. | |
| Syntax | AT+ZRINGPINMODE=<N> | |
| Parameters | <N> ➤ 0: RING PIN is at original signal mode; the pin is at low level upon incoming call; and is at high level during other time. No change (remaining to be at high level) upon the receipt of text message. ➤ 1: RING Pin is at new signal mode; The PIN generates 1s low level and 4s high level upon an incoming call, until the call is ended or terminated; and is at high level during other time. Generate 1s low level pulse upon the receipt of new messages; maintain high level during other time. | |
| Example | AT+ZRINGPINMODE = 0 | Set RING pin as original mode |
| | AT+ZRINGPINMODE = 1 | Set RING pin as new signal mode |
| Descriptions of returned values | No returned value | |

2.11 Network Parameter Commands

2.11.1+ZPNUM: set APN, username and password

| | | |
|-------------|--|-------------------------------------|
| Description | This command is used to set the operator's APN, username and password. | |
| Syntax | AT+ZPNUM=<APN>,<USER>,<PWD> | |
| Example | AT+ZPNUM="cmnet", "user", "pwd" OK | |
| | AT+ZPNUM? | Check current APN,USER,PWD settings |
| Parameter | APN:GPRS APN provided by operator; USER: username PWD: password APN: USER, PWD is a kind of character "string". | |

2.11.2+ZPPPOPEN: open GPRS connection

| | | |
|-------------|--|--|
| Description | This command is used to open GPRS connection. | |
| Syntax | AT+ZPPPOPEN | |
| Example | AT+ZPNUM="cmnet", "user", "pwd" OK AT+ZPPPOPEN +ZPPPOPEN:CONNECTED OK AT+ZPPPOPEN +ZPPPOPEN: ESTABLISHED OK | |

2.11.3+ZPPPCLOSE: close GPRS connection

| | | |
|-------------|--|--|
| Description | This command is used to close GPRS connection. | |
| Syntax | AT+ZPPPCLOSE | |
| Example | AT+ZPPPCLOSE OK | |
| | AT+ZPPPCLOSE +ZPPPCLOSE: DISCONNECTED OK | |

2.11.4+ZIPGETIP: check current IP address

| | | |
|-------------|--|--------------------------------|
| Description | This command is used to obtain the IP address. | |
| Syntax | AT+ZIPGETIP | |
| Example | AT+ZIPGETIP +ZIPGETIP: *.*.* OK | Obtain the module's IP address |

| | |
|-----------|--------------------------|
| Parameter | * is a value from 0~255; |
|-----------|--------------------------|

2.11.5 +ZDNSSERV: set DNS IP address

| | | |
|-------------|--|--|
| Description | This command is used to set the IP address of the DNS. | |
| Syntax | AT+ZDNSSERV=<IP1>, <IP2> | |
| Parameter | <IP1>: the IP address of main DNS; <IP2>: the IP address of sub DNS; | |
| Example | <pre>AT+ZDNSSERV="211.136.20.203","211.136.18.171" OK AT+ZDNSSERV="211.136.20.203","" OK AT+ZDNSSERV? 211.136.20.203 211.136.18.171 OK</pre> | <p>Set DNS IP address</p> <p>Check DNS IP address</p> |
| Remarks | When setting the server, you must mandatorily set the main DNS server and selectively set the secondary DNS server. For IP settings, the parameter can't exceed 255. | |

2.11.6 +ZDNSGETIP: obtain Internet Domain name's IP address

| | | |
|-------------|--|--------------------------|
| Description | This command is used to obtain Internet Domain name's IP address. | |
| Syntax | AT+ZDNSGETIP=<domain name> | |
| Parameter | <domain name>: Internet domain name; | |
| Example | <pre>AT+ZDNSGETIP="WWW.163.COM" 202.108.09.32 202.108.09.33 OK</pre> | <p>Obtain IP address</p> |

2.12 TCP Link Commands

2.12.1 +ZIPSETUP: Set up TCP server link

| | | |
|-------------|--|------------------------|
| Description | This command is used to send data to a bundled TCP server. | |
| Syntax | AT+ZIPSETUP=<N>,<IP>,<M> | |
| Example | AT+ZIPSETUP=1,61.144.216.219,2332 +ZIPSETUP:CONNECTED OK | Connect to TCP server. |
| Parameter | N: the channel No. of TCP links, ranging from 0 to 4; support 5 TCP links with 5 different IP addresses and ports; IP: IP value of one target address, *.*.*.* range: 0~255. M: port number; | |
| Remarks | MTK only supports 6 sockets online at the same time. The total number of TCP and UDP links can't exceed 6 when establishing the links. | |

2.12.2 +ZIPSEND: send TCP data to target address

| | | |
|-------------|--|---|
| Description | This command is used to connect the target server. | |
| Syntax | AT+ZIPSEND= port, length<CR> Send data after prompt with '>' | |
| Example | AT+ZIPSEND=1,10 >abcdefghij +ZIPSNEED:OK OK | Send data to TCP server after successfully connecting the server. Send 10 bytes: abcdefghij |
| Parameter | port: the channel number of TCP links; length: data length (support up to 1000 bytes, and support 0x00~0xff transmitting). | |

2.12.3 +ZPPPSTATUS: check GPRS connection status

| | | |
|-------------|--|------------------------|
| Description | This command is used to check GPRS link status. | |
| Syntax | AT+ZPPPSTATUS | |
| Example | AT+ZPPPSTATUS +ZPPPSTATUS: ESTABLISHED OK | Check GPRS link status |
| | AT+ZPPPSTATUS +ZPPPSTATUS: DISCONNECTED OK | Check GPRS link status |

2.12.4 +ZIPCLOSE: close TCP link

| | |
|-------------|---|
| Description | This command is used to close TCP link. |
| Syntax | AT+ZIPCLOSE=<N> |

| | | |
|-----------|--|-----------------|
| Example | AT+ZIPCLOSE=1 +ZIPCLOSE:OK OK | Close TCP link. |
| Parameter | N: the number of TCP links and the value is 1; | |

2.12.5+ZIPSTATUS: check current TCP link status

| | | |
|-------------|--|-----------------------------------|
| Description | This command is used to check the status of current TCP link. | |
| Syntax | AT+ZIPSTATUS=<N> | |
| Example | AT+ZIPSTATUS=1 +ZIPSTATUS: ESTABLISHED OK | Check the current TCP link status |
| Parameter | ESTABLISHED: TCP link established. DISCONNECTED: TCP link disconnected. | |

2.12.6 +ZIPRECV: receive data from current data link

| | | |
|-------------|--|--|
| Description | This command is used to receive data asynchronously. | |
| Syntax | +ZIPRECV:N,LEN,<DATA> | |
| Example | +ZIPRECV:1,5,abcde | Received 5 data abcde from No.1 TCP data link |
| Parameter | N: the number of TCP links and the value is 1; LEN: length of received data; DATA: received data | |

2.13 UDP Link Commands

2.13.1+ZIPSETUPU: set up UDP server link

| | | |
|-------------|--|--|
| Description | This command is used to bundle with the UDP server link. | |
| Syntax | AT+ZIPSETUPU=<N>,<IP>,<M> | |
| Example | AT+ZIPSETUPU=1,61.144.216.219,2332 OK | The UDP server's bundled address is 61.144.216.219, with the port no. 2332. Return with bundling succeeded. |
| Parameter | N: the channel No. of UDP links, ranging from 0 to 4; support 5 UDP links with 5 different IP addresses and ports; IP: IP address of target server; *.*.*.* ranges from 0~255. M: port number. | |
| Remarks | MTK only supports 6 sockets online at the same time. The total number of TCP and UDP links can't exceed 6 when establishing the links. | |

2.13.2+ZIPSENDU: send data to UDP server

| | | |
|-------------|---|---|
| Description | This command is used to send data to the bundled UDP server. | |
| Syntax | AT+ZIPSENDU= port, length<CR> Send data after prompt with '>'. | |
| Example | AT+ZIPSENDU=1,10 >abcdefghij +ZIPSENDU:OK OK | Send data to UDP server after successfully connecting the server. Send 10 bytes: abcdefghij |
| Parameter | port: the channel number of UDP links; length: data length (support up to 1000 bytes, and support 0x00~0xff transmitting). | |

2.13.3+ZIPSTATUSU: check UDP status

| | | |
|-------------|--|---|
| Description | This command is used to check current UDP link status. | |
| Syntax | AT+ZIPSTATUSU=<N> | |
| Example | AT+ZIPSTATUSU=1 +ZIPSTATUSU: ESTABLISHED OK | Check the No. 1 UDP status The No. 1 UDP is in use |
| Parameter | ESTABLISHED: UDP already ESTABLISHED. DISCONNECTED:UDP already disconnected | |

2.13.4+ZIPCLOSEU: close UDP link

| | | |
|-------------|--|--|
| Description | This command is used to close the designated UDP link. | |
| Syntax | AT+ZIPCLOSEU=<N> | |

| | | |
|-----------|--|--|
| Example | AT+ZIPCLOSEU=1 +ZIPCLOSE:OK OK | Successfully close the No. 1 UDP link Prompt that the No.1 UDP link closed. |
| Parameter | N: the channel number of UDP links; representing the channels to be closed, ranging from 0 to 4. | |

2.13.5+ZIPRECVU: receive UDP data

| | | |
|-------------|---|--|
| Description | This command is used to receive UDP data from UDP server. | |
| Syntax | +ZIPRECVU:N,LEN,<DATA> | |
| Example | +ZIPRECVU:1,5,abcde | Received 5 data abcde from the No.1 UDP data link |
| Parameter | N: the channel number of UDP links, ranging from 0 to 4; LEN: received data length; DATA: received data; (The size of each UDP package shall not exceed 1500 bytes, otherwise, error occurs) | |

2.14 Server Commands

2.14.1 +ZTCPLISTEN: set port monitoring

| | | |
|-------------|--|---|
| Description | This command is used to enable/disable port monitoring function. | |
| Syntax | AT+ZTCPLISTEN=<on/off>,<portNum> AT+ZTCPLISTEN? | |
| Parameter | On/off 1:start listening 2:stop listening portNum the listening port num If <on/off> is 2, please set this parameter as 0. | |
| Example | AT+ZTCPLISTEN=1,1174 OK | Monitoring port 1174 |
| | at+ztcpisten? +ZTCPLISTEN:1,1174 OK | Check monitoring status |
| | AT+ZTCPLISTEN=2, 0 OK | Stop monitoring |
| | +ZTCP(P): INCOMING CONNECT ACCEPTED | Indicating one monitoring to one external connection, and the connection is accepted. |
| Note | <ol style="list-style-type: none"> One port can be monitored currently, and only two connections are allowed on each port; Prior to the monitoring, please firstly use AT+ZPPPOPEN to open the PPP link; | |

2.14.2 +ZTCPSENDP: send data through passively opened link

| | | |
|--------------------------------|--|--|
| Description | This command is used to send data through (monitored) passively opened link. | |
| Syntax | AT+ZTCPSENDP=<channel>,<n> | |
| Parameter | <channel>: the sign of connected client ends; <n>: the length of data to send | |
| Descriptions of returned value | Input AT command according to the above syntax, press carriage return to display ">". In this case, you can input the data to transmit. When inputting (size+1) data (it can be any data, 0x0d recommended), it will trigger the transmitting process. | |
| Example | AT+ZTCPSENDP=10 >1234567890 +ZTCPSEND(P):OK OK | Send 10 characters through the monitored link. |
| Note | Prior to the use of this command, the monitored connection must be established. | |

2.14.3 +ZTCPCLOSEP: close monitored connection

| | | |
|--------------------------------|---|-------------------------------------|
| Description | This command is used to close the monitored connection. | |
| Syntax | AT+ZTCPCLOSEP=<channel> | |
| Descriptions of returned value | OK: connection closed ERROR: link not existed or other error | |
| Example | at+ztcpclosep +ZTCPCLOSEP:OK OK | Close the No.1 connection monitored |
| Note | Prior to the use of this command, the monitored connection must be established. | |

2.14.4 +ZTCPRECV(P): receive data report

| | | |
|-------------|---|--------------------------|
| Description | This command is used to receive data report | |
| Syntax | +ZTCPRECV(P):<channel>,<dataLength>,data | |
| Parameter | Channel: upon multiple connections, mark the connection through which transmits the data. dataLength: the length of received data Data: received data | |
| Example | +ZTCPRECV(P):1050, 789012345678901234567890123456789012345678901234 567890123456780123456789012345678901234567890123 456789012345678901234567890123456789012345678901 234567890123456780123456789012345678901234567890 123456789012345678901234567890123456789012345678 901234567890123456780123456789012345678901234567 890123456789012345678901234567890123456789012345 678901234567890123456780123456789012345678901234 567890123456789012345678901234567890123456789012 345678901234567890123456780123456789012345678901 234567890123456789012345678901234567890123456789 012345678901234567890123456780123456789012345678 901234567890123456789012345678901234567890123456 789012345678901234567890123456780123456789012345 678901234567890123456789012345678901234567890123 45678901234567890123456789012345678012345678012 345678901234567890123456789012345678901234567890 123456789012345678901234567890123456789012345678 012345678901234567890123456789012345678901234567 890123456789012345678901234567890123456789012345 678012345678901234567890123456789012345678901234 567890123456789012345678901234567890123456789012 | 1050 characters received |

| | | |
|--|---|--|
| | 345678012345678901234567890123456789012345678901 234567890123456789012345678901234567890123456789 012345678012345678901234567890123456789012345678 901234567890123456789012345678901234567890123456 789012345678012345678901234567890123456789012345 67890123456789012345678 | |
|--|---|--|

2.14.5 +ZTCPSTATUSP: check passively opened link

| | | |
|--------------------------------|---|--|
| Description | This command is used to check if there is any passively opened link. | |
| Syntax | AT+ZTCPSTATUSP=<channel> | |
| Descriptions of returned value | +ZTCPSTATUS(P):DISCONNECT +ZTCPSTATUS(P):CONNECT | One passively link not existed One passively link existed |
| Example | <pre>at+ztcpstatusp=0 +ZTCPSTATUS(P):DISCONNECT OK at+ztcpstatusp +ZTCPSTATUS(P):DISCONNECT OK</pre> | <p>No passively opened link</p> <p>The current monitoring port does not start working.</p> |

2.14.6 +ZIPTIMEOUT: set the timeout for connecting the server & sending data

| | | |
|--------------------------------|--|--|
| Description | This command is used to set the timeout for connecting the server and sending data as the module works as the client end. | |
| Syntax | AT+ZIPTIMEOUT=<connect_timeout>,<send_data_timeout> | |
| Description of parameters | connect_timeout: connection timeout; send_data_timeout: sending data timeout. If the module does not send out the data within the specified time, it might think that there is something wrong with the server or network and close the connection. (The module works as the server and client end) | |
| Descriptions of returned value | OK setting succeeded ERROR setting failed | |
| Example | <pre>AT+ZIPTIMEOUT=? +ZIPTIMEOUT:(5-120),(5-18000) OK AT+ZIPTIMEOUT=30,60 OK at+ziptimeout? +ZIPTIMEOUT:30,60 OK</pre> | <p>Check the range of timeout value</p> <p>Set the timeout</p> <p>Check the range of current timeout</p> |

2.14.7 +ZTCPTIMEOUT: set the timeout for receiving data

| | | |
|--------------------------------|---|--|
| Description | This command is used to set the timeout for receiving data. | |
| Syntax | AT+ZTCPTIMEOUT=<recv_data_timeout> | |
| Description of parameters | If the module does not receive the data within the specified time, it will close the connection, otherwise, the number of connections exceeds the limit, other client-ends can't be connected. The default value is 0 and it means the timeout is no needed. | |
| Descriptions of returned value | OK Succeeded ERROR Failed | |
| Example | <pre>at+ztctimeout=? +ZTCPTIMEOUT:(0-18000) OK at+ztctimeout=30 OK at+ztctimeout? +ZTCPTIMEOUT:30 OK</pre> | <p>Check the range of timeout value</p> <p>Set the timeout</p> <p>Check the range of current timeout</p> |

2.15 FTP Commands

2.15.1 ZFTPLOGIN: log in FTP server

| | | |
|---------------------------|---|---|
| Description | This command is used to log in the FPT server. | |
| Syntax | AT+ZFTPLOGIN=<IP>,<PORT>,<Username>,<Password> | |
| Description of parameters | IP: server's IP address; PORT: server's FTP port number, 21 by default (Note: according to RFC959, it's advised to set the port number as 21) Username: username used to log in FTP server Password: password used to log in FTP server | |
| Example | at+zftplogin=183.37.36.5,21,test,test OK +ZFTPLOGIN:OK at+zftplogin=218.18.232.161,21,test,test FTP IS LOGIN | Logged in FTP server successfully Already logged in, prompt with logged in |
| | at+zftplogin=183.37.36.5,21,test,test OK +ZFTPLOGIN: CONNECT FAIL | Log in FTP server, connection timeout |
| Remarks | 1. As long as the syntax of command is correct, return OK. However, this doesn't mean logged-in successfully. The log-in is successful only after +ZFTPLOGIN: OK is returned. 2. Prior to logging in FTP server, you must open PPP. | |

2.15.2 ZFTPTYPE: set FTP file type

| | | |
|---------------------------|---|--------------------------------|
| Description | This command is used to set the type of FTP file. | |
| Syntax | AT+ZFTPTYPE=<TYPE> | |
| Description of parameters | TYPE: file type 1: ASCII 2: Binary | |
| Example | at+zftptype=1 OK +ZFTPTYPE:OK | Set the file type as text mode |
| | at+zftptype? | Check the settings of file |

| | | |
|---------|--|------|
| | +ZFTPTYPE:1 | type |
| Remarks | If you upload or download the files for the first time, you have to set the file type and perform relevant operation. If you need not change the file type, you can ignore the settings. | |

2.15.3 ZFTPUPLOAD: upload files

| | | |
|---------------------------|---|---|
| Description | This command is used to upload files to FTP server. | |
| Syntax | AT+ZFTPUPLOAD=<dir&filename>,<put_mode>,<size> | |
| Description of parameters | dir&filename: file directory or file name put_mode: Upload operation mode: 1: STOR mode: create the file on the server and write the data. If the file exists already, cover the original file. 2: APPE mode: if the file doesn't exist on the server, create it. If it exists, attach the data at the end of the file. Size: size of file; | |
| Example | at+zftpupload=test1.txt,2,511 > OK +ZFTPUPLOAD:OK | Upload a txt file to the server with the file's name test1.txt and size of 511 bytes. |
| Remarks | The data length sent each time does not exceed 4K byte. If you want to write a large file, use STOR mode and then APPE mode; Prior to the uploading, you'd better set the file type. | |

2.15.4 ZFTPDNLOAD: download files

| | | |
|---------------------------|---|--|
| Description | This command is used to download files from FTP server. | |
| Syntax | AT+ZFTPDNLOAD=<dir&filename>,<Content or Info>,<output_interval> | |
| Description of parameters | dir&filename: file directory or file name Content or Info: specify what you want to obtain is Content or Info: 1: obtain file contents 2: obtain file or designated directory information output_interval: interval (1500 byte each time) as the module outputs through COM port. Take the value from 0~10, with the unit of second. 0 represents the default value 20ms. | |

| | | |
|----------------|---|--|
| <p>Example</p> | <pre>at+zftpdnload=test1.txt,1,4 OK +ZFTPDNLOAD:Recv Start 12345678901234567890123456789012345678901234 56789012345678901234567890123456789012345678 90123456789012345678901234567890123456789012 34567890123456789012345678901234567890123456 78901234567890123456789012345678901234567890 12345678901234567890123456789012345678901234 56789012345678901234567890123456789012345678 90123456789012345678901234567890123456789012 34567890123456789012345678901234567890123456 78901234567890123456789012345678901234567890 12345678901234567890123456789012345678901234 567890123456789012345678901 +ZFTPDNLOAD:Recv End</pre> | <p>Download a txt file from the server with the file's name test1.txt and size of 511 bytes.</p> |
| <p>Example</p> | <pre>at+zftpdnload=test1.txt,2,4 OK +ZFTPDNLOAD:Recv Start -rw-r--r-- 1 ftp ftp 511 Jun 08 16:28 test1.txt +ZFTPDNLOAD:Recv End</pre> | <p>Obtain the relevant information of test1; output at the interval of 4s.</p> |
| <p>Remarks</p> | <ol style="list-style-type: none"> 1. This command is only used to read the file not larger than 10K; if the file is larger than 10K, the data might be lost. 2. Pay attention to the setting of output_interval. As you download larger files, the data might be lost if you set a smaller value of output_interval. Generally select a value from 5 to 10. For large files, select 10. 3. As you download larger files, data echo might be displayed in sections; The file information would generally not be packaged; 4. Prior to the downloading, you'd better set the file type. 5. If there is no command operation or data transmitting within a certain period of time, the FTP server may initiatively close. Therefore, during the process of data echo, the timeout prompt might appear. | |

2.15.5 ZFTPDEL: delete files

| | |
|----------------------------------|--|
| <p>Description</p> | <p>This command is used to delete the files on the FTP server.</p> |
| <p>Syntax</p> | <p>AT+ZFTPDEL=<dir&filename></p> |
| <p>Description of parameters</p> | <p>dir&filename: file directory or file name</p> |

| | | |
|---------|---|--|
| Example | at+zftpdel=test1.txt OK +ZFTPDEL:OK | Delete the file test1.txt on the FTP server. |
| Remarks | None | |

2.15.6 ZFTPQUIT: quit FTP

| | | |
|---------------------------|--|---|
| Description | This command is used to quit the FTP server. | |
| Syntax | AT+ZFTPQUIT | |
| Description of parameters | None | |
| Example | at+zftpquit OK +ZFTPQUIT:OK | Quit the FTP server |
| | at+zftpquit FTP IS NOT LOGIN | Quitted FTP server already, execute the delay command |
| Remarks | None | |

2.16 Transparent Transfer Command

+ZTRANSFER: Transparent transfer

| | |
|---------------------------|--|
| Description | Transparent transmission |
| Syntax | AT+ZTRANSFER=<net_channel>,<mode>,<cfgt>,<cfgp> |
| Description of parameters | net_channel: socket connection channel number; mode: socket connection mode; value: 1 or 2; 1: UDP; 2: TCP。 cfgt: used for transparent transfer; the time spent while waiting for each package to transmit: 50-65535ms |

| | | |
|-------------------------------|---|---|
| | cfgp: the size of each package is 536-1460 during transparent transfer; | |
| Description of returned value | +ZTRANSFER:<net_channel> OK | |
| Example | <p>1. TCP example:</p> <pre> at+zppopen +ZPPPOPEN:CONNECTED OK at+zipsetup=1,183.37.41.143,6800 +ZIPSETUP:CONNECTED OK at+ztransfer=1,2,3000,1000 +ZTRANSFER:1 OK ATO Enter into data mode, please input data: OK abcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabc +++ Enter into cmd mode, please input AT command: at OK 2. UDP example: at+zppopen +ZPPPOPEN:CONNECTED OK at+zipsetupu=1,183.37.32.104,7000 </pre> | <pre> //open PDP connection / //establish TCP connection //execute transparent transfer //enter data mode //transmitted data //enter command mode // open PDP connection // establish UDP connection </pre> |

2.17 Relevant Audio Commands

2.17.1 +ZCALLTONE: set pick-up tone

| | | |
|--------------------------------|--|--|
| Description | Play/pause the pick-up tone. | |
| Syntax | AT+ZCALLTONE=<n> AT+ZCALLTONE=? AT+ZCALLTONE? | |
| Parameter | <n> 0: pause the pick-up tone 1: play 400Hz pick-up tone 2: play 400Hz/25Hz pick-up tone 3: play 400Hz/50Hz pick-up tone | |
| Descriptions of returned value | OK +ZCALLTONE:<n> OK | |
| Example | AT+ZCALLTONE=2 OK at+zcalltone? +ZCALLTONE:2 OK AT+ZCALLTONE=0 OK at+zcalltone? +ZCALLTONE:0 OK | Play pickup tone Stop pickup tone |

2.17.2 +ZDTMFTONE: set ZDTMF tone

| | | |
|-----------------|--|--|
| Description | Set the pick-up tone. | |
| Syntax | AT+ZDTMFTONE=<n>,<Duration> AT+ZDTMFTONE =? AT+ZDTMFTONE? | |
| Parameter | <n> 0~9: play DTMF tone from 0 to 9; 10~13: play DTMF tone from A to D; 14: play * DTMF tone; 15: play # DTMF tone; 16: stop playing DTMF tone ; <Duration> DTMF playing duration, unit: 20ms. Value range: 0-1000. Set as 0, continue to play | |
| Descriptions of | OK | |

| | | |
|----------------|--|---|
| returned value | +ZDTMFONE:<n>, <Duration> OK | |
| Example | AT+ZDTMFONE=1,0 OK AT+ZDTMFONE? +ZDTMFONE:1,0 OK | Continue to play DTMF tone of number key 1; |
| | AT+ZDTMFONE=16,0 OK AT+ZDTMFONE? +ZDTMFONE:16,0 OK | Stop playing DTMF tone |
| | AT+ZDTMFONE=2,100 OK | Play DTMF tone of number key 2 for 2s; |

2.17.3+SPEAKER: audio channel switch command

| | | |
|-------------|--|----------------------|
| Description | This command is used to switch between the microphone and headset. | |
| Syntax | AT+SPEAKER=<mode> | |
| Example | AT+SPEAKER=0 OK | Switch to microphone |
| | AT+SPEAKER=1 OK | Switch to headset |
| | AT+SPEAKER=? +SPEAKER:(0-1) OK | Check status |
| Parameters | <mode> 0: microphone(default) 1: headset | |

2.17.4 +ZMICGB: set MIC audio parameters

| | | |
|-------------|---|----------------------------------|
| Description | This command is used to change MIC input channel's audio parameters. | |
| Syntax | AT+ZMICGB=<Gain>,<Bias>,<PGA> | //set parameters |
| | AT+ZMICGB=? | //check parameter setting syntax |
| | AT+ZMICGB? | //check current parameters |
| Parameter | Refer to the definitions of three parameters in MIC output circuit in figure 1. 1. Gain:0~7. refer to the corresponding relationship between the parameter and the gain; typedef enum L1BbcMicGainTag | |

| | | |
|--------------------------------|---|---------------|
| | <pre> { MIC_GAIN_0 = 0, MIC_GAIN_1, MIC_GAIN_2, MIC_GAIN_3, MIC_GAIN_4, MIC_GAIN_5, MIC_GAIN_6, MIC_GAIN_7 } L1BbcMicGain; </pre> | |
| Descriptions of returned value | OK: parameter settings succeeded; ERROR: incorrect parameter syntax | |
| Example | AT+ZMICGB=0 | Note: Gain=0; |

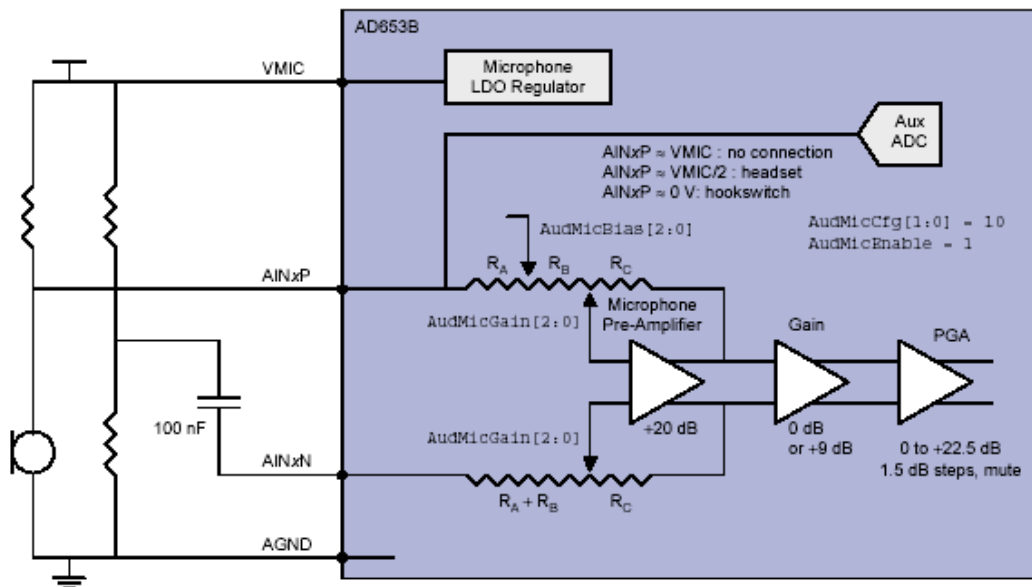


Figure 1

3 Application Cases and Precautions

3.1 SMS Application Case

Note: The inputs are marked in red:

```
at+cmgf=1
```

```
OK
```

——Set the message's input mode as text mode.

```
at+cmgs="13360504647"<CR>
```

```
hallo<ctrl/Z>
```

```
+CMGS: 1
```

```
OK
```

——Send one message. "13360504647" is the number of message recipient, and hallo is the message text.

```
at+cmgw="13360504647"<CR>
```

```
goodbye<ctrl/Z>
```

```
+CMGW: 1
```

```
OK
```

——write a message in "SM". "13360504647" is the number of message recipient, and goodbye is the message text. From the returned information +CMGW, we could see that the message is saved to the index 1.

```
at+cpms?
```

```
+CPMS: "SM",1,50,"SM",1,50,"SM",1,50
```

```
OK
```

——Check the current memory. From +CPMS, we know there is a message in "SM", which is the newly composed message.

```
at+cmgr=1
```

```
+CMGR: "STO UNSENT","13360504647",
```

```
goodbye
```

```
OK
```

——Read this message with the index No. From the returned information +CMGR, we know that the message is not sent. (" STO UNSENT ").

```
at+cmss=1
```

```
+CMSS: 1
```

```
OK
```

——Send the saved message.

at+cmgr=1

+CMGR: "STO SENT","13360504647",
goodbye

OK

——Read this message with the index No. From the returned information +CMGR, we know that the message has been sent. (" STO SENT ")

at+cnmi=3,2,0,0,0

OK

——Set the status of newly received message as "Directly display but not save"

+CMT: "+8615986672056","OK","07/08/27,13:23:56+32"

WESDDR

——Receive a new message, which is directly displayed but not saved. "+8615986672056" is the number of message recipient, "07/08/27,13:23:56+32" is the sending time and WESDDR is the message text.

at+cnmi=3,1,0,0,0

OK

——" Set the status of newly received message as "Save but not display"

+CMTI: "SM", 28

——Receive a new message, which is saved but not displayed. From +CMTI, we know that the message is saved in the index 28 in "SM".

at+cmgr=28

+CMGR: "REC UNREAD","15986672056","07/08/27,13:36:48+32"

CDFD

OK

——Read this message with the index No. "REC UNREAD" is the status of the message.

"15986672056" is the number of message recipient, "07/08/27, 13:36:48+32" is the sending time and CDFD is the message text.

3.2 Phonebook Application Case

Note: The inputs are marked in red:

at+cpbs?

+CPBS:"SM",0,200

OK

——Check the current memory. The default phonebook memory is " SM ". From +CPMS, we know that the current phone memory "SM" is empty.

at+cpbw= 1,"13086672098",129,"john"

OK

——Write a phone entry into current phonebook memory "SM". "1" represents save by auto searching space. "13086672098" is the telephone number, 120 is the type of phone number, and john is the name.

at+cpbs?

+CPBS:"SM",1,200

OK

——Check the current memory. From +CPMS, we know that the entry has been stored at the index 1 in the current phone memory "SM".

at+cpbr=1

+CPBR: 1,"13086672098",129,"john"

OK

——Read the phonebook entry.

atd>1;

OK

——Dial the index number in the current phonebook.

atd>"john";

OK

——Dial the name from the current phonebook.

ath

OK

——Use ATH to hang up the call.

at+cpbs=" ME "

OK

——Select "ME" phonebook memory.

at+cpbs?

+CPBS: "ME",0,18

OK

——Check the current memory. From +CPMS, we know that the current phone memory "ME" is empty.

at+cpbw= 1,"13086672098",129,"john"

OK

——Write a phone entry into the current phonebook memory "ME". "1" represents save by auto searching space. "13086672098" is the telephone number, 129 is the type of phone number, and john is the name.

at+cpbs?

+CPBS:"ME ",1,18

OK

——Check the current memory. From +CPMS, we know that the entry has been stored at the index 1 in the current phone memory “ME”

`at+cpbr=1`

+CPBR: 1,"13086672098",129,"john"

OK

——Read this phonebook entry.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Mobile Development Tools](#) category:

Click to view products by [SparkFun](#) manufacturer:

Other Similar products are found below :

[MIKROE-2535](#) [1946](#) [ADRV-DPD1/PCBZ](#) [TEL0089](#) [EVK-N211-02B](#) [1963](#) [2687](#) [2691](#) [MAX7036EVKIT-315+](#) [MAX7036EVKIT-433+](#)
[MIKROE-3350](#) [MIKROE-3351](#) [MIKROE-3757](#) [MIKROE-3885](#) [MIKROE-4034](#) [MIKROE-1298](#) [MIKROE-1375](#) [MIKROE-1428](#) [MIKROE-1720](#) [MIKROE-3072](#) [MIKROE-3294](#) [MIKROE-497](#) [VZ120Q-STK](#) [109030001](#) [109030002](#) [CEL-13120](#) [CEL-14997](#) [EVK-R510M8S-0](#)
[EVK-R510S-0](#)