



CONNECTION

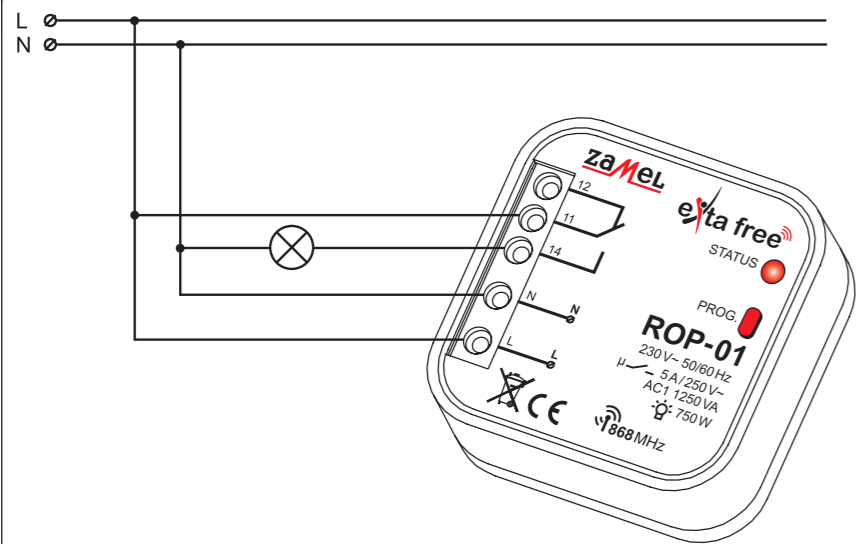


MOUNTING

1. Disconnect power supply by the phase fuse, the circuit-breaker or the switch-disconnector combined to the proper circuit.
2. Check if there is no voltage on connection cables by means of a special measure equipment.
3. Connect the cables with the terminals in accordance with the installing diagram.
4. Install ROP-01 device in installation cable box.
5. Switch on the power supply from the mains.

CAPACITY

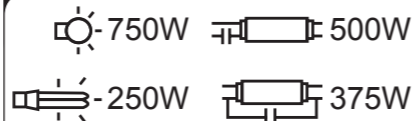

APPLICATION

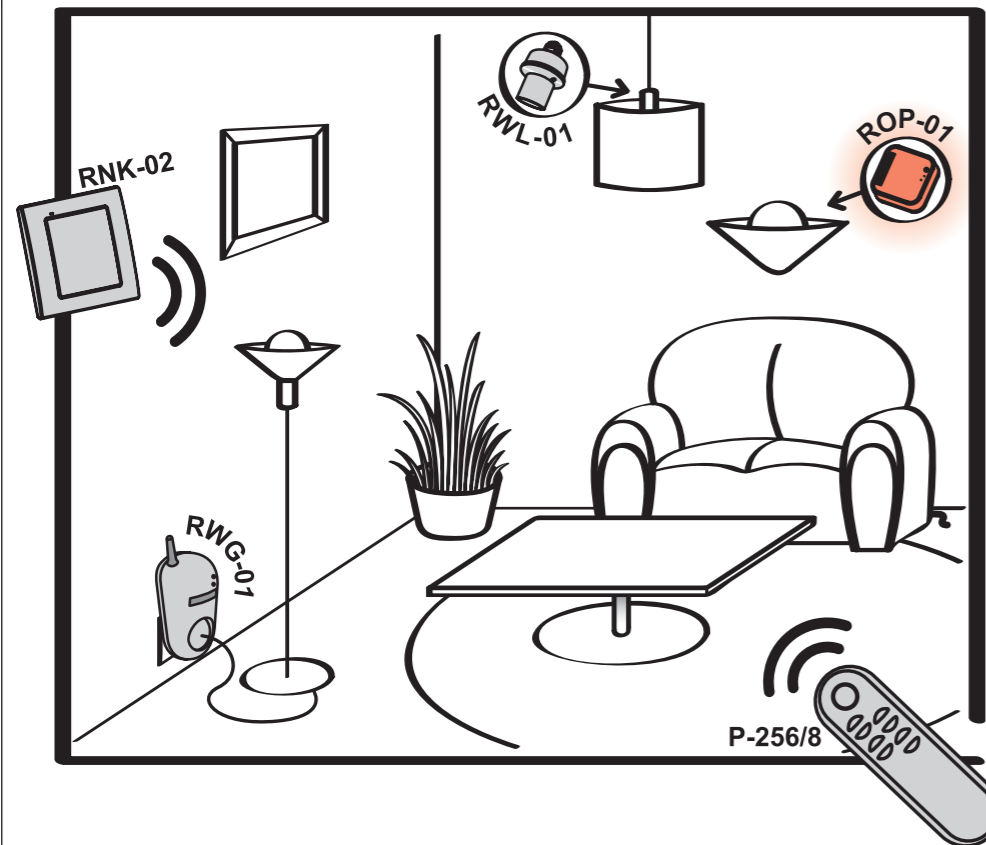

1-channel radio receiver ROP-01 operates as a receiver of 8-channel remote controller P-256/8 and of 2-channel button radio transmitter RNK-02 (light sources switch on/switch off control).

The above mentioned transmitters can also control operation of radio lighting switch RWL-01 and remote control socket RWG-01.



The ZAMEL company devices which are characterised with this sign can cooperate with each other.

WARRANTY CARD

There is 24 months guarantee on the product

1. ZAMEL provides a two-year warranty for its products.
2. The ZAMEL warranty does not cover: a) mechanical defects resulting from transport, loading / unloading or other circumstances; b) defects resulting from incorrect installation or operation of ZAMEL products; c) defects resulting from any changes made by CUSTOMERS or third parties, to products sold or equipment necessary for the correct operation of products sold; d) defects resulting from force majeure or other aleatory events for which ZAMEL is not liable; e) power supply (batteries) to be equipped with a device in the moment of sale (if they appear);
3. All complaints in relation to the warranty must be provided by the CUSTOMER in writing to the retailer after discovering a defect.;
4. ZAMEL will review complaints in accordance with existing regulations.;
5. The way a complaint is settled, e.g. replacement of the product, repair or refund, is left to the discretion of ZAMEL.
6. Guarantee does not exclude, does not limit, nor does it suspend the rights of the PURCHASER resulting from the discrepancy between the goods and the contract.

Salesman stamp and signature, date of sale

1-CHANNEL RADIO RECEIVER ROP-01

MANUAL INSTRUCTION



ZAMEL Sp. z o.o.

zameL

ul. Zielona 27, 43-200 Pszczyna, Poland
tel. +48 (32) 210 46 65, fax +48 (32) 210 80 04
www.zamelcet.com, e-mail: marketing@zamel.pl

DESCRIPTION

Radio receivers are used both as elements in mounting in flush and surface installation cable boxes and as an actuator built directly in lighting fittings and other receivers. ROP-01 enables operation in 5 different modes (switching on, switching off, monostable mode, bistable mode, time mode.)

FEATURES

- cooperation with wireless EXTA FREE control system transmitters,
- 1 NO/OC output relay (dry contacts),
- lighting, heating operation control,
- easy junction box Ø 60 mm installation,
- 5 operation modes: switching on, switching off, monostable mode, bistable mode, time mode (switch off delay),
- wide operation range (up to 230 m),
- operation is optically signalled,
- low current consumption, possibility of constant operation,
- possibility of increasing operation range by means of RTN-01 retransmitter.



CAUTION

The device is designed for single-phase installation and must be installed in accordance with standards valid in a particular country. The device should be connected according to the details included in this operating manual. Installation, connection and control should be carried out by a qualified electrician staff, who act in accordance with the service manual and the device functions. Disassembling of the device is equal with a loss of guarantee and can cause electric shock. Before installation make sure the connection cables are not under voltage. The cruciform head screwdriver 3,5 mm should be used to install the device. Improper transport, storage, and use of the device influence its wrong functioning. It is not advisable to install the device in the following cases: if any device part is missing or the device is damaged or deformed. In case of improper functioning of the device contact the producer.



The symbol means selective collecting of electrical and electronic equipment. It is forbidden to put the used equipment together with other waste.

TECHNICAL DATA


ROP-01	
Input (supply) terminals:	L, N
Input rated voltage:	230 V AC
Input voltage tolerance:	-15 + +10 %
Nominal frequency:	50 / 60 Hz
Nominal power consumption:	0,29 W
Number of operation modes:	5
Number of channels:	1
Transmission:	radio 868,32 MHz
Transmission way:	unidirectional
Coding:	addressing transmission
Maximum number of transmitters:	32
Range:	up to 230 m in the open air
Time adjustment:	1 second + 18 hours (every second)
Optical signalling of transmitter's operation:	red LED diode
Relay output clamps:	12, 11, 14
Relay contacts parameters:	1NO/NC 5A / 250V~ AC1 1250 VA
Number of terminal clamps:	5
Section of connecting cables:	up to 2,5 mm ²
Ambient temperature range:	-10 + +55 °C
Operating position:	free
Casing mounting:	junction box Ø 60 mm
Casing protection degree:	IP20 (EN 60529)
Protection level:	II
Overvoltage category:	II
Pollution degree:	2
Surge voltage:	1 kV (EN 61000-4-5)
Dimensions:	47,5 x 47,5 x 20 mm
Weight:	0,043 kg
Reference standard:	EN 60669, EN 60950, EN 61000

APPEARANCE

Relay output terminals (12, 11, 14)

Input (supply) terminals (L, N)

Optical signalling of receiver's operation
Programming buttons

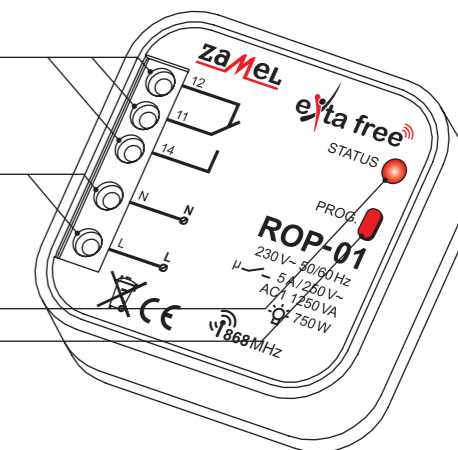

OPERATION

The device can operate in five modes:

<p>ON MONOSTABLE the relay operates only while pressing transmitter's push-button.</p>	<p>ON/OFF BISTABLE (one push-button) the device changes relay status cyclically always after pressing the same push-button.</p>	<p>ON SWITCH ON the device switches on after pressing the push-button.</p> <p>OFF SWITCH OFF the device switches off after pressing the push-button.</p>	<p>ON TIME the device switches on according to the adjusted time (tp), but it may be switched off before adjusted time finishes. Default settings - 15 seconds.</p> <p>CAUTION! Adjusted time can not be deleted.</p>
--	---	--	--

RADIO TRANSMITTERS PROGRAMMING

MONOSTABLE mode:

- 1 Press transmitter's push-button for a longer time.
- 2 Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- 3 Release transmitter's push-button. LED red diode switches on (first signal pulsates, next the signal is constant).
- 4 Press the same transmitter's push-button and release it. LED red diode switches on (the signal pulsates) and next it switches off - THE TRANSMITTER IS ADDED.

BISTABLE mode:

- 1 Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- 2 Press the transmitter's push-button for a longer time. LED red diode switches on (first signal pulsates, next the signal is constant).
- 3 Release transmitter's push-button. LED red diode switches on (the signal pulsates), next the LED red diode switches off - it means THE TRANSMITTER IS ADDED.

SWITCH ON/SWITCH OFF mode (two push-buttons):

- 1 Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- 2 Press and release transmitter's push-button. LED red diode switches on (first signal pulsates, next the signal is constant).
- 3 Press and release the same transmitter's push-button. LED red diode switches on (the signal pulsates) and next it switches off - THE TRANSMITTER IS ADDED.

TIME mode (one push-button)

- 1 Press PROG push-button of ROP-01 device for a longer time till LED red diode switches on (constant signal). Next release PROG push-button.
- 2 Press and release transmitter's push-button. LED red diode switches on (the signal pulsates, next the signal is constant).
- 3 Press and release the same transmitter's push-button. LED red diode switches on (the signal pulsates) and next it switches off - THE TRANSMITTER IS ADDED.

An exemplary programming procedure with the use of P-257/2 remote controller. The procedure for the rest of radio EXTA FREE transmitters is analogous.

CAUTION: Every transmitter can cooperate with ROP-01 in a different mode, depending on how they were added to the device. One transmitter can be added during one programming cycle. Full memory is signalled with pulsating LED red diode.

TIME PROGRAMMING

- 1 Press PROG push-button of ROP-01 device for a longer time till LED red diode switches on (constant signal). Next release PROG push-button. Wait (for about 5 seconds) till LED red diode switches on (first signal pulsates, next the signal is constant).
- 2 Press PROG push-button of ROP-01 device and then release it. LED red diode switches off and then switches on (signal pulsates). Every LED diode pulse equals 1 second.
- 3 After the adjusted time is finished (the number of LED red diode flashes) press PROG push-button and then release it - TIME IS ADDED.

Maximum time is 18 hours.

RADIO TRANSMITTERS DELETION

- 1 Press PROG push-button of ROP-01 device for a longer time.
- 2 After 5 seconds LED red diode switches on (signal pulsates) and then it switches off.
- 3 Release the push-button in ROP-01 - MEMORY IS DELETED.

COOPERATION AND OPERATION RANGE

Symbol	ROP-01	ROP-02	ROB-01	SRP-02	SRP-03	RWG-01	RWL-01	ROM-01	ROM-10	RDP-01	RTN-01
RNK-02	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
RNK-04	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
P-256/8	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m
P-257/4 (2)	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
RNM-10	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m
RNP-01	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RNP-02	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RNL-01	160 m	180 m	180 m	lack*	lack*	200 m	160 m	200 m	200 m	160 m	200 m
RTN-01	200 m	200 m	200 m	200 m	200 m	250 m	200 m	250 m	250 m	200 m	250 m
RCR-01	160 m	180 m	180 m	lack*	lack*	200 m	160 m	200 m	200 m	160 m	200 m
RTI-01	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RXM-01	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m

* - 1-channel transmitters do not cooperate with roller blinds controllers.

CAUTION: The given range concerns open area - an ideal condition without any natural or artificial obstacles. If there are some obstacles between a transmitter and a receiver, it is advisable to decrease the range according to: wood and plaster - from 5 to 20%, bricks - from 10 to 40%, reinforced concrete - from 40 to 80%, metal - from 90 to 100%, glass - from 10 to 20%. Over- and underground medium and high electrical power lines, radio and television transmitters, GSM transmitters set close to a device system have also a negative influence on the range.

TRANSMITTERS		RECEIVERS	
RNK-02 2-channel button radio transmitter		RNL-01 Radio foot transmitter	
RNK-04 4-channel button radio transmitter		RTI-01 IR/EXTA FREE transceiver	
P-256/8 8-channel remote controller		RNM-10 4-channel radio modular transmitter	
P-257/4 4-channel remote controller		RNP-01 4-channel radio transmitter	
P-257/2 2-channel remote controller		RNP-02 4-channel radio transmitter	
RCR-01 Radio motion sensor		RXM-01 Translator RS-485/EXTA FREE	
ROP-01 1-channel radio receiver		RWL-01 Radio lighting switch	
ROP-02 2-channel radio receiver		RWG-01 Remote control socket	
RDP-01 1-channel radio dimmer		SRP-02 Radio roller blinds controller	
ROB-01/12-24V Radio gate controller		SRP-03 Central radio roller blinds controller	
ROM-01 1-channel radio modular receiver		ROM-10 2-channel radio modular receiver	
ACCESSORIES			
ANT-01 External antenna		RTN-01 Retransmitter	

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Power Management IC Development Tools](#) category:

Click to view products by [Zamel](#) manufacturer:

Other Similar products are found below :

[EVAL6482H-DISC](#) [EVAL-AD5522EBUZ](#) [EVAL-ADM1060EBZ](#) [EVAL-ADM1073MEBZ](#) [EVAL-ADM1166TQEBZ](#) [EVAL-ADM1168LQEBZ](#) [EVAL-ADM1171EBZ](#) [EVAL-ADM1276EBZ](#) [EVB-EN5319QI](#) [EVB-EN5365QI](#) [EVB-EN6347QI](#) [EVB-EP5348UI](#) [MIC23158YML EV](#) [MIC23451-AAAYFL EV](#) [MIC5281YMME EV](#) [124352-HMC860LP3E](#) [ADM00513](#) [ADM8611-EVALZ](#) [ADM8612-EVALZ](#) [ADM8613-EVALZ](#) [ADM8615-EVALZ](#) [ADP1046ADC1-EVALZ](#) [ADP1055-EVALZ](#) [ADP122-3.3-EVALZ](#) [ADP130-0.8-EVALZ](#) [ADP130-1.2-EVALZ](#) [ADP130-1.5-EVALZ](#) [ADP130-1.8-EVALZ](#) [ADP160UJZ-REDYKIT](#) [ADP166UJ-EVALZ](#) [ADP1712-3.3-EVALZ](#) [ADP1714-3.3-EVALZ](#) [ADP1715-3.3-EVALZ](#) [ADP1716-2.5-EVALZ](#) [ADP1740-1.5-EVALZ](#) [ADP1752-1.5-EVALZ](#) [ADP1754-1.5-EVALZ](#) [ADP1828LC-EVALZ](#) [ADP1870-0.3-EVALZ](#) [ADP1871-0.6-EVALZ](#) [ADP1873-0.6-EVALZ](#) [ADP1874-0.3-EVALZ](#) [ADP1876-EVALZ](#) [ADP1879-1.0-EVALZ](#) [ADP1882-1.0-EVALZ](#) [ADP1883-0.6-EVALZ](#) [ADP197CB-EVALZ](#) [ADP199CB-EVALZ](#) [ADP2102-1.25-EVALZ](#) [ADP2102-1.2-EVALZ](#)