



# Installation and Configuration

## Dry Contact I/O SmartSlot Card

AP9613



---

This manual is available in English on the enclosed CD.

# Contents

---

## **Safety Overview 1**

**Important Safety Information** ..... 1

## **Product Overview 2**

**Introduction** ..... 2

Product description 2

Hardware and software requirements and tools needed 3

**Showing the product detail** ..... 4

Itemizing the features of the Dry Contact I/O SmartSlot Card 4

Itemizing the input contact and output relay terminal blocks 6

## **Configuring the Dip Switches 7**

**Location of dip switches** ..... 7

**Dip switches: input and outputs** ..... 8

## **Installing 9**

**Planning your installation** ..... 9

Operating considerations 9

Connection strategies 11

**Installation steps** ..... 12

**Connecting to the configuration utility** ..... 14

## **Specifications 16**

Electrical, physical, environmental, and approval specifications 16

Ratings for input contacts and output relays 17

## **Warranty 18**

**Two-Year Factory Warranty** ..... 18

Terms of warranty 18

Non-transferable warranty 18

Exclusions 18

Warranty claims 19

**Disclaimer 20**

APC Worldwide Customer Support 32

# Safety Overview

---

## Important Safety Information

Follow all applicable electrical codes for your installation area.

Read the instructions carefully to become familiar with the equipment before trying to install, operate, service or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, **will result in death or serious injury**.

### **WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **can result in death or serious injury**.

### **CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **can result in minor or moderate injury**.

### **NOTICE**

**NOTICE** addresses practices not related to physical injury including certain environmental hazards, potential damage or loss of data.

# Product Overview

---

## Introduction

The Schneider Electric™ Dry Contact I/O SmartSlot Card (AP9613) is a management product that provides the following features:

- **UPS status information** presented through 6 fully isolated output relays. This is expandable to 8 using universal input/output ports and optional Dry Contact I/O Accessory (AP9810)
- **UPS control and testing** by using 4 opto-isolated input contacts. An additional 4 input contacts (non opto-isolated) may be added using universal input/output ports and an optional Dry Contact I/O Accessory (AP9810)
- **UPS control and testing based on environmental conditions** using universal input/output ports and an optional Environmental Sensor (AP9335T or AP9335TH)
- **screw terminal connectors** for easy integration into various management systems
- a **Configuration Utility user interface** to customize your setup, see “Connecting to the configuration utility” on page 14

For more details, see “Showing the product detail” on page 4, “Configuring the Dip Switches” on page 7, “Installing” on page 9, “Specifications” on page 16.

## Product description

The Schneider Electric Dry Contact I/O SmartSlot Card consists of a printed circuit board assembly. It installs in the SmartSlot of the UPS host device. The product contents are:

- the Dry Contact I/O SmartSlot Card
- the USB A to Mini B cable (to access the Configuration Utility, see “Connecting to the configuration utility” )
- this printed manual

## Hardware and software requirements and tools needed

The Dry Contact I/O SmartSlot Card works with most APC by Schneider Electric UPS devices with an output rated less than or equal to 160kVA and an available SmartSlot.

While most devices meet this requirement; verify the compatibility of your device by locating it on the APC website, [www.apc.com](http://www.apc.com), and checking for compatible accessories.


You need the following tools:

- #1 Phillips screwdriver for screw terminals
- #2 Phillips screwdriver for SmartSlot screws
- a wrench of size 1" or 25.4 mm, or adjustable, to tighten the grommet

For the Configuration Utility, you need: Windows (XP, 2003, 2008, Vista, or 7) and Internet Explorer browser v7 or higher.

# Showing the product detail

## Itemizing the features of the Dry Contact I/O SmartSlot Card

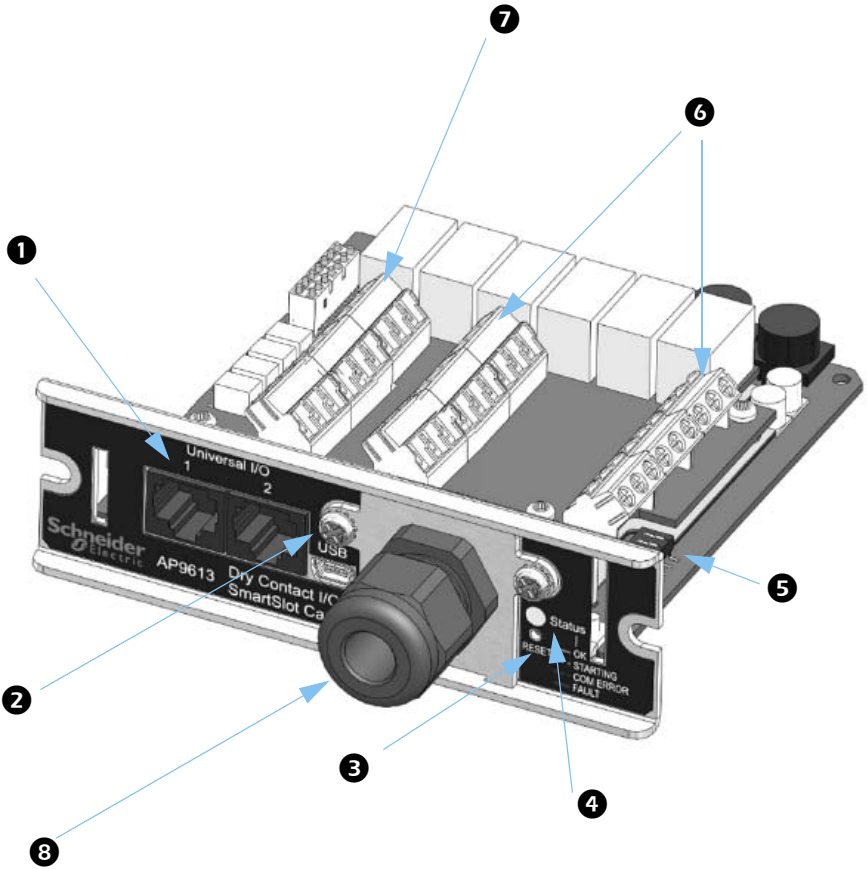




Item	Name	Description
1	Universal I/O ports 1 and 2	These support the AP9335T/ TH and AP9810 dry contact accessories
2	USB cable connector	Connecting this to your PC enables usage of the Configuration Utility.
3	Reset button	Use an appropriately sized, non-metallic tool to press the Reset button. There are two options: <ul style="list-style-type: none"> <li>• Press and hold button [LED turns off], release <i>in less than 20 seconds</i> [Card reboots with NO reset].</li> <li>• Press and hold button [LED turns off], <i>continue holding for 20 seconds</i> [LED turns red, card resets to factory settings and reboots].</li> </ul>
4	Status indicator	SOLID GREEN indicates communications and operations are fine. FLASHING GREEN indicates the Card is initializing. FLASHING RED indicates a communication fault. SOLID RED indicates a non-operational fault with the UPS, not the Card: see <a href="#">KBase</a> , # FA174931.
5	Dip switches	These are located near the back of the front panel on the right-hand side. See “Configuring the Dip Switches” .
6	Output relay terminals	Connections for alarm outputs. See “Itemizing the input contact and output relay terminal blocks” and “Ratings for input contacts and output relays” .
7	Input contact terminals	Connections for control inputs. See “Itemizing the input contact and output relay terminal blocks” and “Ratings for input contacts and output relays” .
8	Cord grip	Supports the cabling that is used to control external devices, or to connect up external switches. The bare wires connect to the terminal blocks on the Card.  The cord grip is plastic and can secure a single cord with a diameter range of 5.8 – 10mm. This limits the number of conductors (inside the cord) and the power ratings.

## Itemizing the input contact and output relay terminal blocks

Number of positions on each terminal block	9
Tightening torque	0.35 N.m
Tightening torque max	0.4 N.m
Wire stripping length	5 mm
Minimum wire gauge	0.14 mm <sup>2</sup> (26 AWG)
Maximum wire gauge	2.5 mm <sup>2</sup> (14 AWG)

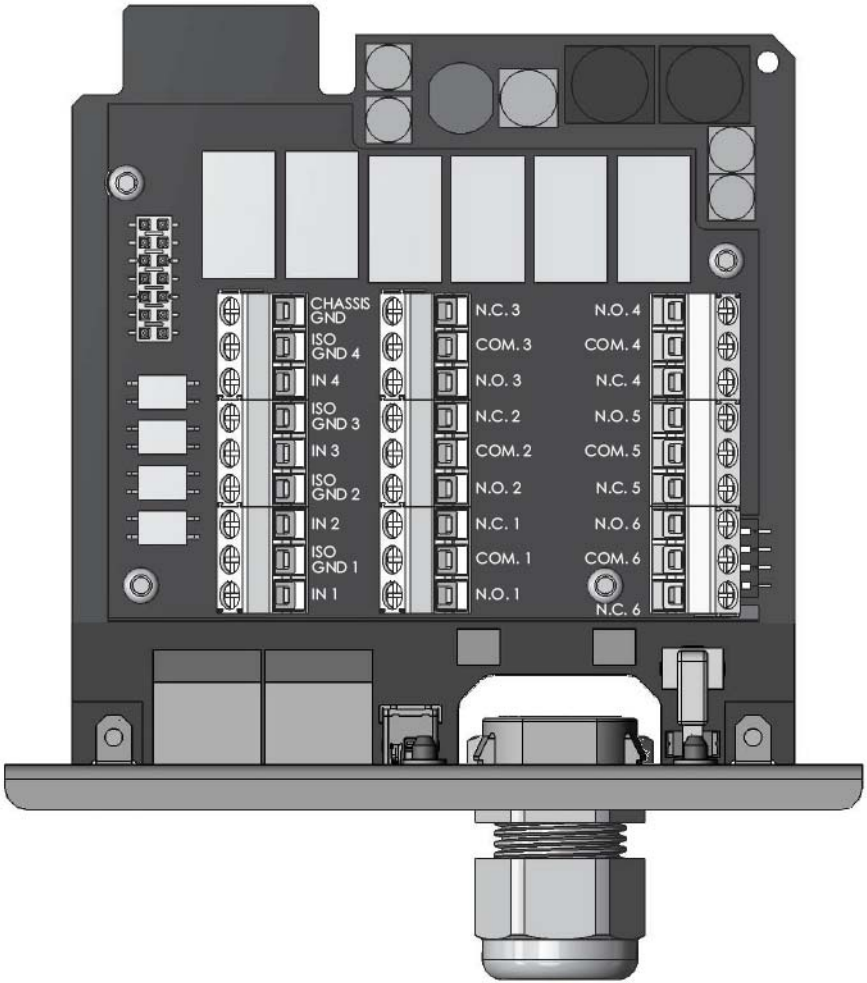

# Configuring the Dip Switches


The Dry Contact I/O SmartSlot Card requires configuration before testing, final installation, and use.

See “Location of dip switches” directly below and “Dip switches: input and outputs” .

## Location of dip switches

The “callout” below points to the location of the dip switches on the card, and shows one possible configuration: ON-OFF-OFF-ON.

See the other possible configurations at “Dip switches: input and outputs”

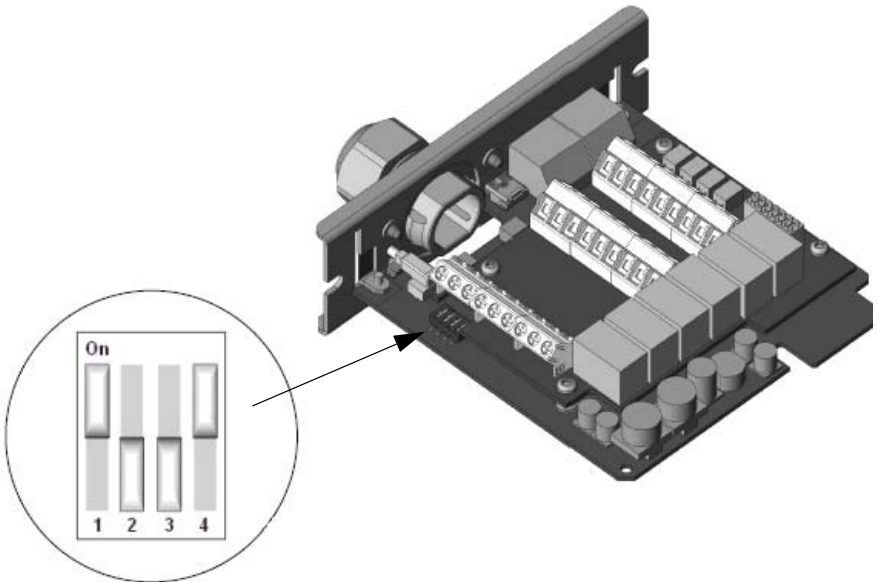

# Dip switches: input and outputs

The table below lists the four possible configurations, with their corresponding inputs and outputs.

	Configuration 1	Configuration 2	Configuration 3	Configuration 4*
	<p>OFF-OFF-OFF-ON</p>	<p>ON-OFF-OFF-ON</p>	<p>OFF-ON-OFF-ON</p>	<p>ON-ON-OFF-ON</p>
<b>Inputs</b>	<b>Device Actions</b>			
1	Turn the UPS on.			See Configuration Utility
2	Turn the UPS off.		Turn the UPS off safely.	
3	Start UPS self-test.			
4	Shut down the UPS when on battery except for self-test or runtime calibration.	Put the UPS in bypass, if bypass is available on the UPS.	Shut down the UPS when on battery except for self-test or runtime calibration.	
<b>Outputs</b>	<b>Device State</b>			
1	The UPS is on-battery (e.g., during a power failure, self-test, or runtime calibration).			See Configuration Utility
2	The UPS has a low battery.			
3	The protected load is not receiving power from the UPS or communication between the UPS and the Relay I/O Card has been lost.			
4	Replace the UPS battery.		UPS commanded to turn on (echo of Input 1).	
5	The UPS is overloaded.	The UPS is in bypass by selection from software, front panel, or rear panel.	UPS commanded to turn off gracefully (echo of Input 2).	
6	Any UPS fault or self-test failure.	Any UPS fault, self-test failure, or overload.	Any UPS fault, self-test failure, overload, or replace battery	

\* With this setup (the factory default), the Configuration Utility is used automatically.

# Installing

See “Planning your installation” directly below, “Installation steps” on page 12, and “Connecting to the configuration utility” on page 14.

## Planning your installation

### Operating considerations

#### **⚠ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**



Read and understand this manual and the manuals of the UPS before installing this card.  
Installation must be performed by qualified personnel.  
The user is responsible for compliance with all international and national electric code requirements.

**Failure to follow these instructions will result in death or serious injury.**

Note the following characteristics of the Dry Contact I/O SmartSlot Card when making decisions regarding system integration:

- The coils for all output relays are normally energized. The Card will generate all possible alarms in case of a system fault, such as cable failure, removal of the Dry Contact I/O SmartSlot Card, severe UPS battery discharge, or catastrophic hardware failure on the Card.
- All output relays are isolated from each other and from the UPS system ground.
- All input contacts are isolated from the UPS system ground but are common to each other
- Control inputs are driven by user-supplied dry contact outputs. The dry contact closure sensing voltage available on these inputs is nominally 5 VDC at less than 1 mA. All control inputs are referenced to the UPS system ground.
- All control inputs must be stable for a minimum of one second to be considered valid. Longer delays can be set through the Configuration Utility. Control inputs can be asserted indefinitely.
- Be careful to assert just a single input to a device. Avoid initiating simultaneous, conflicting actions, e.g. input #1 (turn the UPS on) and input #2 (turn the UPS off).
- Control inputs are acted upon immediately after validation. However, there are several UPS conditions that can cause an input to be ineffective, such as self-test or runtime calibration. For confirmation of

inputs, we recommend that an output be configured and monitored appropriately to determine the effectiveness of an input.

- Do not wire this Dry Contact I/O SmartSlot Card when the power is on.
- The installation of this Dry Contact I/O SmartSlot Card must follow applicable building and electrical codes.
- Do not use this card to control voltage exceeding 30 VAC or VDC.
- For proper operation, ensure that the UPS is grounded and the Dry Contact I/O Card is secured with two screws to the UPS.
- Use only a single cord with the plastic cord grip.




See “Ratings for input contacts and output relays” on page 17 in “Specifications” .

## Connection strategies


You can connect the alarm outputs of the Dry Contact I/O SmartSlot Card in several ways to meet the requirements of your management systems or switched load. Both normally open (N.O.) and normally closed (N.C.) systems are accommodated in any combination of AND or OR configurations.

You can combine Dry Contact I/O SmartSlot Card alarm outputs to form compound outputs, such as “replace battery OR fault” or “on-battery AND low battery.”


### N. O. AND

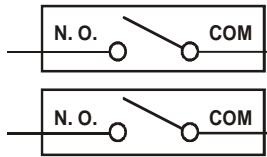


### N. O. OR

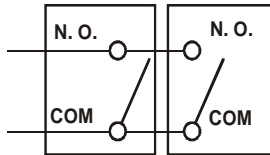

### N. C. AND

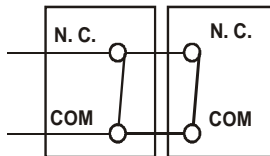

### N. C. OR

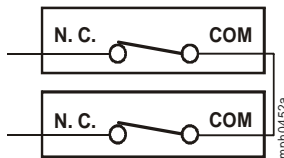

# Installation steps




**Warning:** After installation, it is strongly recommended that you fully test your configuration before putting it into a production environment.

1. Make all connections to the Dry Contact I/O SmartSlot Card to support your configuration before continuing. See “Itemizing the input contact and output relay terminal blocks” on page 6 for information on making the connections.




**Electrostatic discharge:** The Dry Contact I/O SmartSlot Card is sensitive to static electricity. Handle the Card by the end plate only. Do not touch the exposed printed circuit board.

2. Use a #2 Phillips-head screwdriver to remove the two screws retaining the slot cover on the host device. Keep the screws for use later. Keep the slot cover for future use.

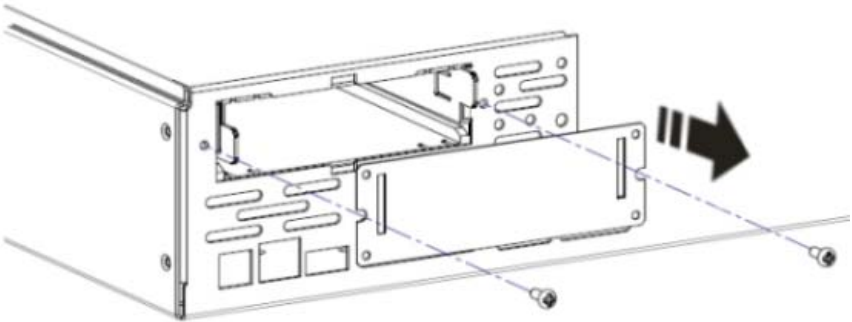



3. Orient the Card to fit in the Card slot as shown. Slide the Card all the way into the slot until the end plate is flush with the back panel of the host device.

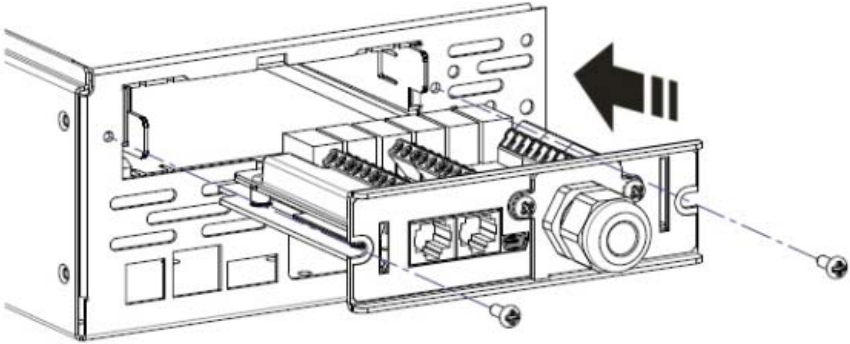

Trying to install the Card upside down may damage it. Observe the correct orientation of the Card. The sides of the printed circuit board align with the guides in the sides of the Card slot. The slot may be oriented horizontally or vertically in the host device, which must be off.

4. Secure the Card with the screws removed in step 3.



In order to provide proper grounding, the SmartSlot screws must be installed, the metal clamp must be securely tightened, and the UPS must be properly grounded.

5. Ensure the status LED is illuminated (see “Showing the product detail” on page 4).

See “Connecting to the configuration utility” on the following page.


# Connecting to the configuration utility

The Configuration Utility does not need to be installed, it runs off the Card. With the Utility, you can:

- review the **status** of your AP9613 Dry Contact I/O SmartSlot Card and Universal I/O ports
- perform **actions** in response to a status change in an input port or to some UPS event
- **change the status of an output relay port** in response to a condition occurring in a device such as your UPS or an environmental monitor
- upgrade the **firmware** on your AP9613 Dry Contact SmartSlot I/O Card

To launch the Configuration Utility user interface, use the USB cable to connect your PC to the port indicated by item #2 on your Dry Contact I/O front panel (see “Itemizing the features of the Dry Contact I/O SmartSlot Card” on page 4).

When the Card is connected to the host PC, it displays as a drive letter on your PC, see drive E in the graphic below for example.

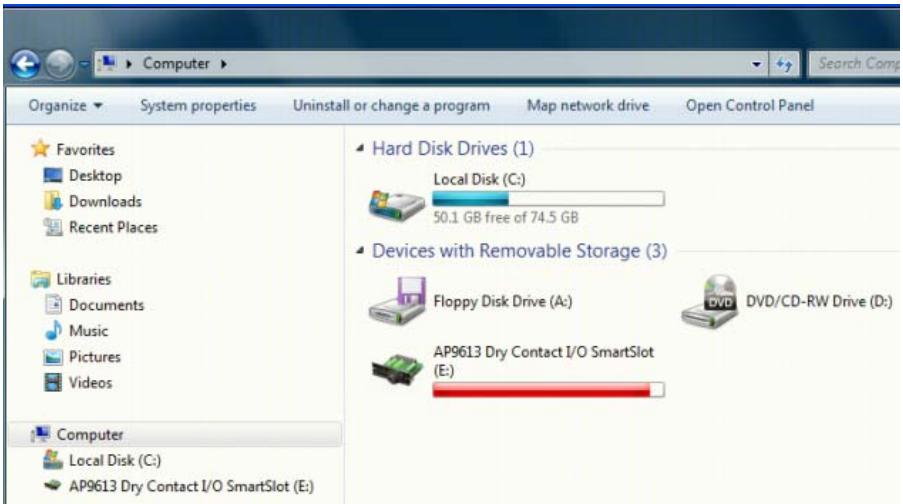

To run the Utility, launch the `runme.hta` file located in the root of the drive. For information on using the Configuration Utility user interface, refer to its online help.

When you connect your Card with your PC using the USB cable, the Configuration Utility reads a file called `config.lua` on the Card. Each time you save a new configuration using the Utility, this file is overwritten. It is also possible to edit `config.lua` directly using a text editor like Notepad or Microsoft Word.

See the section in the Configuration Utility online help called “Copying your Configuration” for information on copying your configuration to another installation of the Card by copying the `config.lua` file.

# Specifications



For all specifications, when there is a difference between the VDE and UL approval standards, use the lower rating.

## Electrical, physical, environmental, and approval specifications

Item	Specification
<b>Electrical</b>	
Nominal switching capacity	3A@ 30 VAC or VDC
Rated voltage	24 VDC
Rated current	200 mA
Input Contact (#1–4) and Output Relay (#1–6)	See “Ratings for input contacts and output relays” on page 17
<b>Physical</b>	
Size (height × width × depth)	38.00 x 121.00 x 108.00 mm 1.50 x 4.75 x 4.25 in
Shipping size (height × width × depth)	73.00 x 165.00 x 234.95 mm 2.86 x 6.50 x 9.25 in
Weight	0.14 kg 0.30 lb
Shipping weight	0.45 kg 1.00 lb
<b>Environmental</b>	
Elevation Operating Storage	0 to 3000 m (0 to 10,000 ft) 0 to 15 000 m (0 to 50,000 ft)
Temperature Operating Storage	0 to 40°C (32 to 104°F) -15 to 65°C (5 to 149°F)

<b>Item</b>	<b>Specification</b>
Relative Humidity Operating Storage	0 to 95% 0 to 95%
<b>Approvals</b>	
Emissions and Immunity Verification:	FCC Part 15 Class A, EN 55022 Class A, EN 55024, EN 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-8, EN 61000-4-11

## Ratings for input contacts and output relays

	<b>Voltage Rating</b>	<b>Current Rating (Max.)</b>
Input Contact (#1–4)	0–30 VDC Minimum for active: 4.5 V Maximum for inactive: 0.5 V	N/A
Output Relay (#1–6)	0–30 VAC or VDC	3 A per relay (16 A Total Max)

# Warranty

---

## Two-Year Factory Warranty

This warranty applies only to the products you purchase for your use in accordance with this manual.

### Terms of warranty

APC warrants its products to be free from defects in materials and workmanship for a period of two years from the date of purchase. APC will repair or replace defective products covered by this warranty. This warranty does not apply to equipment that has been damaged by accident, negligence or misapplication or has been altered or modified in any way. Repair or replacement of a defective product or part thereof does not extend the original warranty period. Any parts furnished under this warranty may be new or factory-remanufactured.

### Non-transferable warranty

This warranty extends only to the original purchaser who must have properly registered the product. The product may be registered at the APC Web site, [www.apc.com](http://www.apc.com).

### Exclusions

APC shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by end user's or any third person's misuse, negligence, improper installation or testing. Further, APC shall not be liable under the warranty for unauthorized attempts to repair or modify wrong or inadequate electrical voltage or connection, inappropriate on-site operation conditions, corrosive atmosphere, repair, installation, exposure to the elements, Acts of God, fire, theft, or installation contrary to APC recommendations or specifications or in any event if the APC serial number has been altered, defaced, or removed, or any other cause beyond the range of the intended use.

**THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, OF PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HERewith. APC DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE. APC EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, APC RENDERING OF TECHNICAL OR**

**OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE APC'S SOLE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. APC WARRANTIES EXTEND ONLY TO PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.**

**IN NO EVENT SHALL APC, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION, OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER APC HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SPECIFICALLY, APC IS NOT LIABLE FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUENTS, CLAIMS BY THIRD PARTIES, OR OTHERWISE.**

**NO SALESMAN, EMPLOYEE OR AGENT OF APC IS AUTHORIZED TO ADD TO OR VARY THE TERMS OF THIS WARRANTY. WARRANTY TERMS MAY BE MODIFIED, IF AT ALL, ONLY IN WRITING SIGNED BY AN APC OFFICER AND LEGAL DEPARTMENT.**

## **Warranty claims**

Customers with warranty claims issues may access the APC customer support network through the Support page of the APC Web site, **[www.apc.com/support](http://www.apc.com/support)**. Select your country from the country selection pull-down menu at the top of the Web page. Select the Support tab to obtain contact information for customer support in your region.

# Disclaimer

---

The information presented in this manual is not warranted by Schneider Electric to be authoritative, error free, or complete. Schneider Electric assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this publication.

The information contained in this publication is provided as is. This publication has been compiled in good faith by Schneider Electric. However, no representation is made or warranty given, either express or implied, as to the completeness or accuracy of the information this publication contains.

**IN NO EVENT SHALL SCHNEIDER ELECTRIC, OR ANY AFFILIATE OR SUBSIDIARY COMPANY OF SCHNEIDER ELECTRIC OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, CONTRACT, REVENUE, DATA, INFORMATION, OR BUSINESS INTERRUPTION) RESULTING FROM, ARISING OUT OF, OR IN CONNECTION WITH THE USE OF, OR INABILITY TO USE THIS PUBLICATION OR THE CONTENT, EVEN IF SCHNEIDER ELECTRIC HAS BEEN EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SCHNEIDER ELECTRIC RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES WITH RESPECT TO OR IN THE CONTENT OF THE PUBLICATION OR THE FORMAT THEREOF AT ANY TIME WITHOUT NOTICE.**

Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with Schneider Electric or its licensors. All rights in the content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

This publication shall not be for resale in whole or in part.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

















# APC Worldwide Customer Support

Customer support for this or any other product is available at no charge in any of the following ways:

- Visit the APC Web site to access documents in the APC Knowledge Base and to submit customer support requests.
  - **www.apc.com** (Corporate Headquarters)  
Connect to localized APC Web sites for specific countries, each of which provides customer support information.
  - **www.apc.com/support/**  
Global support searching APC Knowledge Base and using e-support.
- Contact the APC Customer Support Center by telephone or e-mail.
  - Local, country-specific centers: go to **www.apc.com/support/contact** for contact information.

For information on how to obtain local customer support, contact the representative or other distributors from whom you purchased your product.

© 2013 APC by Schneider Electric. APC, the APC logo, and TRADE MARK NAMES are owned by Schneider Electric Industries S.A.S., American Power Conversion Corporation, or their affiliated companies. All other trademarks are property of their respective owners.



## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [apc manufacturer](#):*

Other Similar products are found below :

[AP9631](#) [RBC32](#) [AP9613](#) [APCRBC123](#) [APCRBC124](#)