

Autonics PANEL METER MT4N SERIES

M A N U A L



Upgrade feature



Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- * Please keep these instructions and review them before using this unit.
 - * Please observe the cautions that follow.
 - Warning** Serious injury may result if instructions are not followed.
 - Caution** Product may be damaged, or injury may result if instructions are not followed.
 - * The following is an explanation of the symbols used in the operation manual.
 - Caution:** Injury or danger may occur under special conditions.
- Warning**
- In case of using this unit with machinery (Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc.), it is required to install fail-safe device.** It may cause a fire, human injury or property loss.
 - It must be mounted on panel.** It may give an electric shock.
 - Do not connect, inspect or repair terminals when it is power on.** It may give an electric shock.
 - Do not disassemble or modify this unit. If needs, please contact us.** It may cause a fire and give an electric shock.
 - Please check the number of terminal when connecting power or measured input.** It may cause a fire.

Caution

- This unit shall not be used outdoors.** It might shorten the life cycle of the product or give an electric shock. Use this product indoors only. Do not use the product outdoors or at locations subject to the temperatures or humidity outside. (Example: rain, dirt, frost, sunlight, condensation, etc.)
- When connecting wire, use AWG 20(0.50mm) be used and tighten screw bolt on terminal block with 0.74 to 0.90N·m strength.** It may cause a malfunction or fire due to contact failure.
- Please observe the rated specification.** It might shorten the life cycle of the product and cause a fire.
- Do not use beyond of the rated switching capacity of relay contact.** It may cause insulation failure, contact melt, contact failure, relay broken and fire etc.
- In cleaning the unit, do not use water or an oil-based detergent.** It may cause a fire and give an electric shock.
- Do not use this unit in place where flammable or explosive gas, humidity, direct ray of the light, radiant heat, vibration or impact, etc. exists.** It may cause a fire or explosion.
- Do not inflow dust or wire dregs into the unit.** It may cause a fire or mechanical malfunction.
- Please wire properly after checking the polarity of measuring terminals.** It may cause a fire or explosion.


Ordering information

MT	4	N	-	DV	-	E	N
----	---	---	---	----	---	---	---


Control output
Power supply
Input
Size
Digit
Item

N	Without output function
0	Relay output (2 Contacts)
DA	NPN Open collector output (OUT1, GO, OUT2)
2	PNP Open collector output (OUT1, GO, OUT2)
3	Relay (OUT1)+PV transmission (DC4-20mA) output
4	Relay (OUT2)+RS485 communication output
E	12-24VDC/AC
4	100-240VAC
DV	DC Volt
DA	DC Ampere
AV	AC Volt
AA	AC Ampere
N	DIN W48 x H24mm
4	9999 (4 Digit)
MT	Multi Meter


Front panel identification

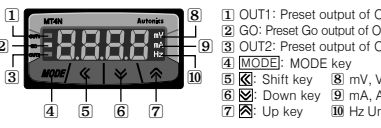

Panel cut-out

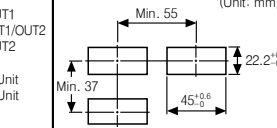

Terminal connection

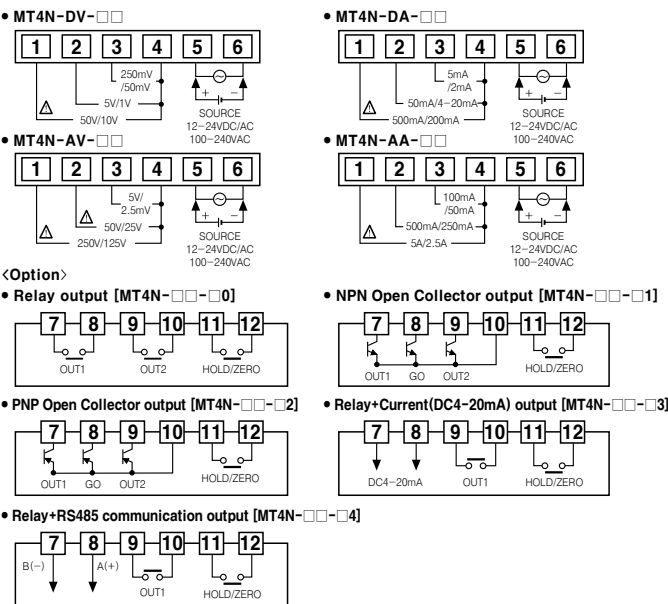


Prescale function [PA1: H-5C / L-5C mode]

This function is to display setting (-1999 to 9999) of particular High/Low-limit value in order to display High/Low-limit value of measured input. If measured inputs are 'a' and 'b' and particular values are 'A' and 'B', it will display a=A, b=B as below graphs.

Error display function

Display	Description
HHHH	Flashes when measured input is exceeded the max. allowable input (110%).
LLLL	Flashes when measured input is exceeded the min. allowable input (-10%).
d-HH	Flashes when display input is exceeded H-5C setting value
d-LH	Flashes when display input is exceeded L-5C setting value
F-HH	Flashes when input frequency is exceeded the max. display value of measuring range.
oUr	Flashes when it exceeds zero range (±99).

Initialization function

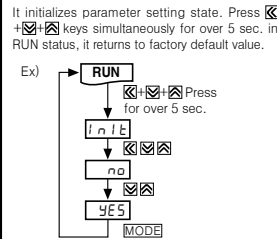

Display cycle delay function [PA2: d1 5L mode]

In some applications the measured input may fluctuate which in turn causes the display to fluctuate. By adjusting the display cycle delay function time in the d1 5L mode in parameter 2, the operator can adjust the display cycle time within a range of 0.1 sec to 5 sec. For example, if the operator sets the display cycle time to 4.0 sec., the display value displayed will be the average input value over 4 sec. and also will show any changes if any every 4 sec.

Startup compensation timer function [PA2: 5cRE mode]

This time function limits the operation of an output until the measured input (overvoltage or inrush current) is stable at moment of power on. All outputs are off during startup compensation time setting after power is applied. Setting range: 0.0 to 99.9 (Unit: sec.) Factory default: 0.0

Specifications

Model	MT4N	
Power supply	12-24 VDC/AC	100-240 VAC
Power consumption	DC: 3W, AC: 5VA	5VA
Display method	7 Segment LCD Display, Character height: 9mm	
Display accuracy	23°C ± 5°C ⇒ DC Type: F.S. ± 0.1% rdg ± 2digit / AC Type: F.S. ± 0.3% rdg ± 3digit 10°C to 50°C ⇒ DC/AC Type: Within F.S. ± 0.3% rdg ± 3digit only for Current 5A terminal DC/AC Type: F.S. ± 0.5% rdg ± 3digit	
Input	DC Voltage/Current, AC Voltage/Current, AC Frequency	
Max. allowable input	110% F.S. for input spec.	
A/D conversion method	Practical oversampling using successive approximation ADC	
Sampling cycle	50ms (DC), 16.6ms (AC) (1/12,000)	
Max. display range	-1999 to 9999 (4 Digit)	
Preset output	<ul style="list-style-type: none"> Relay output ⇒ Contact capacity: 125VAC 0.3A, 30VDC 1A/Contact composition: N/O(1a) NPN/PNP Open Collector output ⇒ 12-24VDC ±2V 50mA Max. (Load resistance) 	
Sub output (Transmission output)	<ul style="list-style-type: none"> RS485 communication output ⇒ Baud rate: 1200/2400/4800/9600, Transmission method: 2 wires half duplex, Tuning method: Sub-synchronization, Protocol: Modbus type DC4-20mA output ⇒ Resolution: 12,000 division (Load resistance max. 600Ω) 	
AC measuring function	Selectable RMS or AVG	
Frequency measuring function	Measurement range: 0.100 to 9999Hz (Differ according to decimal point position)	
Hold function*	Includes (Outer hold function)	
Insulation resistance	Min. 20MΩ (at 500VDC megger)	
Dielectric strength	1000VAC for 1 minute (Between external terminal and case) / 2000VAC for 1 minute (Between external terminal and case)	
Noise strength	±2KV the square wave noise (pulse width: 1µs) by the noise simulator	
Vibration	<ul style="list-style-type: none"> Mechanical: 0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z direction for 2 hours Malfunction: 0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes 	
Shock	<ul style="list-style-type: none"> Mechanical: 100m/s² (Approx. 10G) in X, Y, Z directions for 3 times Malfunction: 300m/s² (Approx. 30G) in X, Y, Z directions for 3 times 	
Environment	<ul style="list-style-type: none"> Ambient temperature: -10 to 50°C, Storage: -20 to 60°C Storage humidity: 35 to 85%RH, Storage: 35 to 85%RH 	
Insulation type**	35	
Approval	CE	
Unit weight	Approx. 64g	

* 1: Mark indicated that equipment protected throughout by double insulation or reinforced insulation.
* 2: The indicator has no Hold function.
* Environment resistance is rated at no freezing or condensation.

Specification of measured input and range


Type	Measured input and range	Input impedance	Standard [Stnd]	Prescale [ScrL]
			Display rang [Fixed]	Display range [Variable]
DC Volt	0-50V [50V]	434.35kΩ	0.00 to 50.00 (Fixed)	
	0-10V [10V]	434.35kΩ	0.00 to 10.00 (Fixed)	
	0-5V [5V]	43.35kΩ	0.000 to 5.000 (Fixed)	
	0-1V [1V]	43.35kΩ	0.000 to 1.000 (Fixed)	-1999 to 9999 (Variable)
	0-250mV [250mV]	2.15kΩ	0.0 to 250.0 (Fixed)	-199.9 to 999.9 (Variable)
	0-50mV [50mV]	2.15kΩ	0.00 to 50.00 (Fixed)	-19.99 to 99.99 (Variable)
DC Ampere	0-500mA [500mA]	0.1Ω	0.0 to 500.0 (Fixed)	-1.999 to 9.999 (Variable)
	0-200mA [200mA]	0.1Ω	0.0 to 200.0 (Fixed)	
	0-50mA [50mA]	1.1Ω	0.00 to 50.00 (Fixed)	
	4-20mA [4-20mA]	1.1Ω	4.00 to 20.00 (Fixed)	
	0-5mA [5mA]	11.1Ω	0.000 to 5.000 (Fixed)	
	0-2mA [2mA]	11.1Ω	0.000 to 2.000 (Fixed)	
AC Volt	0-250V [250V]	1.109MΩ	0.0 to 250.0 (Fixed)	
	0-125V [125V]	1.109MΩ	0.0 to 125.0 (Fixed)	
	0-50V [50V]	222kΩ	0.00 to 50.00 (Fixed)	
	0-25V [25V]	222kΩ	0.00 to 25.00 (Fixed)	
	0-5V [5V]	22kΩ	0.000 to 5.000 (Fixed)	
	0-2.5V [2.5V]	22kΩ	0.000 to 2.500 (Fixed)	
AC Ampere	0-5A [5A]	0.01Ω	0.000 to 5.000 (Fixed)	
	0-2.5A [2.5A]	0.01Ω	0.000 to 2.500 (Fixed)	
	0-500mA [500mA]	0.1Ω	0.0 to 500.0 (Fixed)	
	0-250mA [250mA]	0.1Ω	0.0 to 250.0 (Fixed)	
	0-100mA [100mA]	0.5Ω	0.0 to 100.0 (Fixed)	
	0-50mA [50mA]	0.5Ω	0.00 to 50.00 (Fixed)	

(Display position will be different depending on decimal point position.)
* Please wire proper terminal to its max. input voltage within 30 to 100% of input terminal. When it is higher than input voltage, it may cause breakdown of terminal and over display range and the accuracy is decreased when it is connected to the terminal under 30%.

Monitoring peak display value function [PA 0: HPEL / LPEL mode, PA 2: PEL mode]

It monitors Max./Min. value of display value based on current display value and then display the data in HPEL mode and LPEL mode of parameter 0. Set delay time (0 to 30 sec.) in PEL mode of parameter 2 in order to avoid caused by initial occurrence or overvoltage, when monitoring the peak value. Delay time is 0 to 30 sec., and it starts to monitor the peak value after set time. When HPEL / LPEL keys are pressed at HPEL / LPEL mode of parameter 0, it will be initialized. * Monitoring function is not indicated when setting the PEL of parameter 2 as "0".

Current output (DC4-20mA) Scale adjustment function [PA 2: F5-H / F5-L mode]

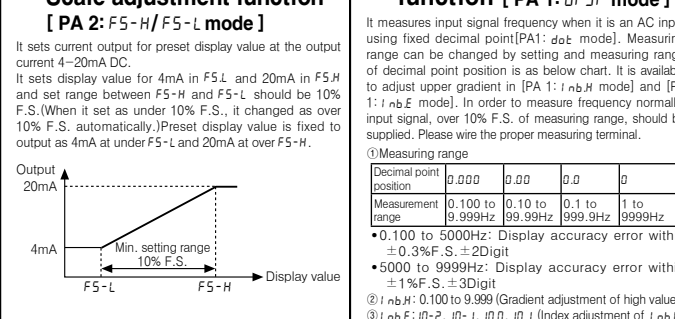

Measuring AC frequency function [PA 1: d1 5P mode]

It measures input signal frequency when it is an AC input using fixed decimal point (PA1: dot mode). Measuring range can be changed by setting and measuring range of decimal point position is as below chart. It is available to adjust upper gradient in (PA 1: nbH mode) and (PA 1: nbE mode). In order to measure frequency normally, input signal, over 10% F.S. of measuring range, should be supplied. Please wire the proper measuring terminal.

Decimal point position	0.000	0.00	0.0	0
Measurement	0.100 to 0.10 to 9.999Hz	0.10 to 0.10 to 99.99Hz	0.10 to 0.10 to 999.9Hz	0.10 to 0.10 to 9999Hz

- * 0.100 to 5000Hz: Display accuracy error within ±0.3% F.S. ±2Digit
- * 5000 to 9999Hz: Display accuracy error within ±1% F.S. ±3Digit
- * nbH: 0.100 to 9.999 (Gradient adjustment of high value)
- * nbE: 0-2, 0-1, 0-0, 0-1 (Index adjustment of nbH)

Error correction function [PA 1: nbH / nbL mode]

It corrects display value of measured input. nbL ±99 (Adjust deviation of low value)
nbH: 5.000 to 0.100 (Correct gradient (%) of high value)
Display value = (Measured value × nbH) + nbL
Ex) Low value correction
When there is an application where there is a residual voltage of 1.2V, but a 0V display is desired, then it is possible by adjusting the nbL parameter setting to 12 (offset correcting value or equal to 1.2V without decimal) that the desired display value of 0 can be achieved.
Ex) High value correction
When there is an application where the high actual value of display is 501 and exceeds the 500V display range, then it is possible by adjusting the nbH parameter setting to 0.998 (calculated by desired value of 500/actual value of 501), that the desired value can be achieved.
* The offset correction range of nbL is within -99 to 99 for D°, D' digit regardless of decimal point.

Zero adjustment function

It adjusts the display value of the optional configured input value as zero by force, zero point error can be adjusted with 3 ways as below.
When zero point adjustment with front key and Hold terminal is finished normally, zero point of measuring terminal is displayed and the adjusted value is saved in nbL automatically.

Operation	Input correction value	Front key	Input external signal
PR1: Direct input correction value	Method at nbL mode	Press both Go keys for 3 sec. at the measuring mode.	Short-circuit external terminal no. 11, 12 over min. 50m. *It is enable to use in option mode.

* Refer to description [Error correction function], [Error indication function] and [Parameter 2] for function and error.

Gradient correction function [PA 1: nbH mode]

It corrects a gradient of prescale value and display value. (Figure 1) Display value Y can be adjusted as α, β times against X input value by correction function [nbH] and used as correction factor of max. display value [H-5C]. Adjustment range is 0.100 to 5.000 and multiply current gradient by the value.
Ex) To display "3.000" in DC 200mV input for measured input specification as 0 to 1V, (Select 0-1VDC for measured input in Parameter 1) (Standard specification in input: 0-1VDC and 1.000 therefore it has to be 15.000 (H-5C) for 1VDC (input) in order to display 3.000 for 200mVDC (input). But it is unable due to setting range is 9.999.
In this case, please check below chart. Please set as nbH × H-5C = 15.000

Setting method	H-5C	L-5C	nbH	Remark
①	Unavailable	0.000	1.000	In this case, any setting methods display same display value.
②	7.500	0.000	2.000	
③	5.000	0.000	3.000	
④	3.750	0.000	4.000	
⑤	3.000	0.000	5.000	

Preset output mode [PA 2: oU1L / oU2L mode]


Mode	Output operation	Operation
oFF	OUT1 output No output	No output
Hi	OUT1.H OUT1 output	Period ON: Display value ≥ OUT1.L Period OFF: Display value ≤ OUT1.H - Hys
Lo	OUT1.L OUT1 output	Period ON: Display value ≤ OUT1.L Period OFF: Display value ≥ OUT1.L + Hys
HL	OUT1.H OUT1.L OUT1 output	Period ON: Display value ≤ OUT1.L or Display value ≥ OUT1.H Period OFF: Display value ≥ OUT1.L + Hys or Display value ≤ OUT1.H - Hys
HL-G	OUT1.H OUT1.L OUT1 output	Period ON: OUT1.L ≤ Display value ≤ OUT1.H + Hys Period OFF: Display value ≤ OUT1.L + Hys or Display value ≥ OUT1.H - Hys

* Set output mode separately for each OUT1/OUT2.
* OUT1/OUT2 are operated individually depending on output operation mode.
* Setting value mode of parameter group 0 is displayed depending on output operation mode.
* GO outputs when the period both OUT1/OUT2 are off. (NPN/PNP Open collector output type)

Parameter

Parameter	Display	Function	Note
PR1 (Parameter 1)	Input type	Selectable RMS/AVG in AC type	Available AC type only.
	Input range	Input range selection	Selectable: Stnd / ScrL / FrEr
	Display	Display type selection	Selectable: Stnd / ScrL / FrEr
	Standard scale range	Standard scale range	Display max. display value of Stnd
	Frequency	Frequency display	Available AC type only.
	Scale	Scale range	Selectable: Stnd / ScrL / FrEr
	H-High scale	Set max. value of display range	These are displayed in 5CrL only and set max/min. display value (-1999 to 9999).
	L-Low scale	Set min. value of display range	These are displayed in 5CrL only and set the position.
	dot	Set decimal point position	It is displayed in 5CrL, FrEr only and set the position.
	Disp/Unit	Select display unit	Set ranges: mV / V / mA / A / Hz / Off
	nbH	Input bias high	Correct High-limit gradient of display value Stnd / ScrL Correction range: 0.100 to 5.000 FrEr Correction range: 0.100 to 9.999
	nbL	Input bias low	Correct Low-limit gradient of display value Correction range: -99 to 99
PR2 (Parameter 2)	nbE	Input bias exponent	Set display index of frequency mode Set range: 10° / 10' / 10'' / 10'''
	OUT1 type	Select output mode of OUT1	oFF / Hi / Lo / HL / G
	OUT2 type	Select output mode of OUT2	oFF / Hi / Lo / HL / G
	OUT1 hysteresis	Select hysteresis of OUT1	Within 1 to F.S. 10% (Variable depending on set of input range and prescale.)
	OUT2 hysteresis	Select hysteresis of OUT2	Within 1 to F.S. 10% (Variable depending on set of input range and prescale.)
	Startup compensation time	Set startup compensation time	Set range: 0.0 to 99.9 sec.
	PEL	Peak time	Set monitoring delay time for peak value (sec) Set range: 00 to 30 sec.
	d1 5L	Display time	Set sampling time (sec) Set range: 0.1 to 5.0 sec. (Variable by 0.1 sec.)
	CoLr	Color	Select color FrEr: Enable/disable zero adjustment key Yes: Enable zero adjustment key
	ErO	Zero key	Enable zero adjustment key Yes: Enable zero adjustment key No: Use external terminal as Hold terminal Zero: Use external terminal as zero adjustment terminal * It is enable to use in option mode.
	Ev n	Event input	Set external terminal (11, 12) function No: Hold terminal as Hold terminal Zero: Use external terminal as zero adjustment terminal * It is enable to use in option mode.
	PR0 (Parameter 0)	F5-H	Full scale high
F5-L		Full scale low	Set Low-limit value output position of PV output Max. set range: Max. F.S. ±10%
Ad 5		Address	Set communication address Set range: 01 to 99
bPS		Bit per second	Set baud rate (bps) Selectable: 1200 / 2400 / 4800 / 9600
Pr2		Parity bit	Select parity bit Selectable: None / Even / Odd
Stp Wt		Response waiting time	Set response waiting time Set range: 5 to 99
LoLk		Lock	Enable lock status Selectable: oFF / LoLk / LoC3 / LoC33
oU1H		OUT1 high preset	Set value of OUT1 High-limit output Set the range within display range of Stnd / ScrL.
oU1L		OUT1 low preset	Set value of OUT1 Low-limit output Set the range within display range of Stnd / ScrL.
oU2H		OUT2 high preset	Set value of OUT2 High-limit output For MT4N-DV/DA Type, set range of oU1H/oU2H and oU1L/oU2L is within -5 to 110%.
oU2L		OUT2 low preset	Set value of OUT2 Low-limit output
HPEL		High peak	Max. value by data monitoring * Key is pressed, it will be returned to initial status.
LPEL	Low peak	Min. value by data monitoring * Key is pressed, it will be returned to initial status.	


Parameter setting

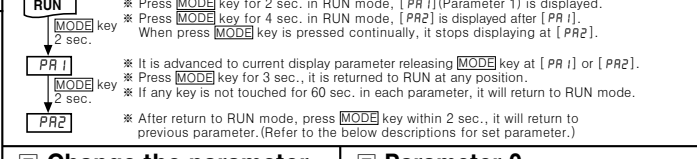


Change the parameter setting value

- Advance to the parameter to be changed when press **MODE** key continuously in RUN mode and release **MODE** key at the parameter. (Refer to "Parameter setting")
- When press **MODE** key in each parameter, the initial mode of the parameter is displayed. (Refer to the description of each parameter.)
- When press one of **Go**, **ErO** keys in display mode.
 - Ex) Mode: Setting value flashes every 0.5 sec.
 - Press one: Saved setting value
- Change the set value by **Go** or **ErO** key when setting value is flashed.
- When press **MODE** key to complete the change and it is advanced to the next mode after flashes 2 times.
- When press **MODE** key for 3 sec. after change, it returns to RUN mode.


Parameter 0

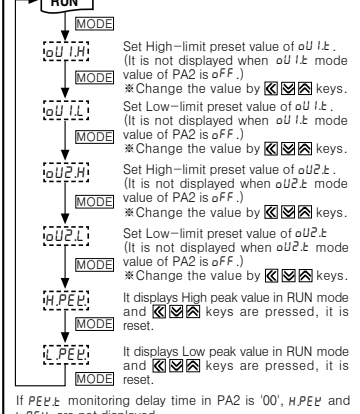

Parameter 1

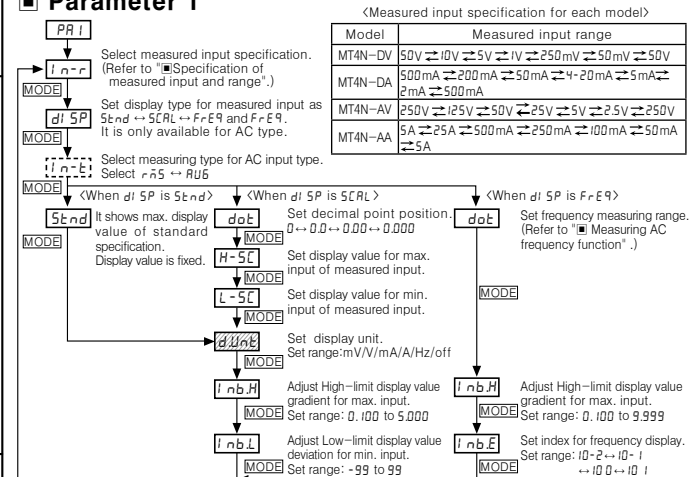

Parameter 2

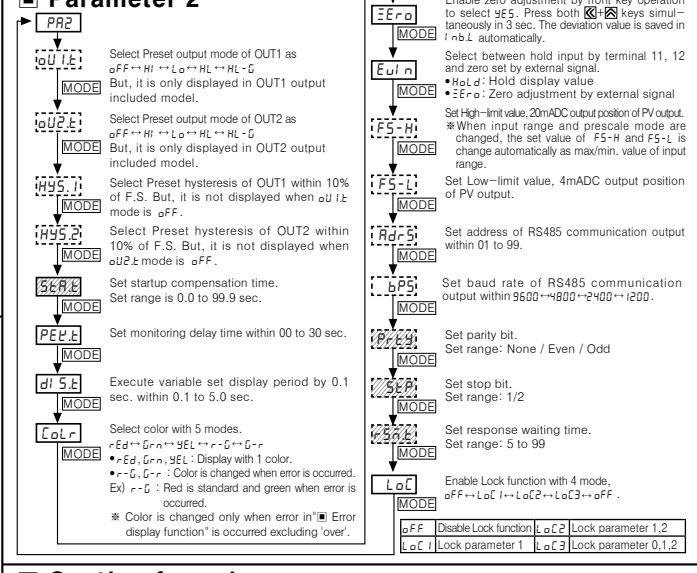

Caution for using

- Allowable installation environment
 - ① Shall be used indoor
 - ② Altitude Max. 2,000m
 - ③ Pollution Degree 3
 - ④ Installation Category II
- Use compression terminal (M3, Max. 6.0mm) to connect AC power.
- Separate from high-tension line, power line to avoid inductive noise.
- Install power switch or circuit breaker on / off the power at once.
- The switch or circuit breaker should be installed nearby users for safety.
- Avoid to use the unit nearby machinery with high frequency noise, such as high frequency welder / sewing machine and high capacity SCR controller.
- "HHH" or "LLL" is displayed, off the power and check lines.
 - Using line filter: Install it closely from DPM
 - Using varistor: Max. 0.6mm
- Noise inflowing from power line can cause serious problem for D.P.M. (Digital Panel Meter) of AC power. It is hard to install protection circuit in the small unit even there is condenser to avoid noise between lines at primary of power transformer. Use noise absorber circuit such as line filter, varistor at external lines when abnormal voltage is occurred by power relay, magnet switch, high frequency equipment are operated in same lines.
 - Using double shield wire
 - Using single shield wire
- Input line: Use shield wire when measured input line is extended or in a place with noise and open the non-used terminals.

Main products

- Proximity sensors
- Area sensors
- Photoelectric sensors
- Fiber optic sensors
- Door/Door sensor
- Rotary encoders
- Sensor controllers
- Temperature/Pulse(Rate) meters
- Temperature/Humidity transducers
- Switching power supplies
- Sleeping motor/driving motion controllers
- Field network devices
- Laser marking system (CO2, Nd:YAG)
- Laser welding/soldering system
- Counters
- Timers
- Display units
- Panel meters
- Pressure sensors
- Power controllers
- Graphic Logic panels
- Temperature controllers

Autonics Corporation
Autonics Corp. 41-3, Yongdang-dong, Yongsu-gu, Seoul, Korea
Autonics (Suzhou) Co., Ltd. 300808, Suzhou, Jiangsu, P.R. China
Autonics (Vietnam) Co., Ltd. 170000, Hanoi, Vietnam
Autonics (Thailand) Co., Ltd. 10110, Bangkok, Thailand
Autonics (Malaysia) Co., Ltd. 43000, Klang, Malaysia
Autonics (Indonesia) Co., Ltd. 12130, Jakarta, Indonesia
Autonics (Philippines) Co., Ltd. 1000, Manila, Philippines
Autonics (Singapore) Co., Ltd. 119221, Singapore

Autonics is ISO 9001 certified.
Autonics is ISO 14001 certified.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [autonics manufacturer](#):

Other Similar products are found below :

[E50S8-1000-3-T-24](#) [BC15-LDT-C](#) [BH4M-PDT](#) [BJ100-DDT-P](#) [BJ10M-TDT-C-P](#) [BJ15M-TDT-C-P](#) [BJ15M-TDT-P](#) [BJ1M-DDT-C-P](#) [BJ3M-PDT-P](#) [BJN100-NDT-P](#) [BL13-TDT-P](#) [BR200-DDTN-C-P](#) [BR200-DDTN-P](#) [BTF30-DDTD-P](#) [BUP-30-P](#) [LP-S070-T9D6-C5T](#) [PRDCML18-7DP](#) [PRFT30-10DO-V](#) [PRFWT12-2DO-IV](#) [PRFWT30-10DO-IV](#) [TC4H-14R](#) [TCN4S-22R](#) [TCN4S-24R-P](#) [TK4S-14SR](#) [BC15-LDT-C-P](#) [BEN5M-MFR](#) [BH1M-DDT](#) [BH20M-TDT](#) [BJ10M-TDT-P](#) [BTS30-LDTL-P](#) [BX700-DFR-T](#) [E40S6-3600-3-T-24](#) [PR08-1.5DP](#) [PR08-2DP](#) [TC4S-12R](#) [TMHA-42AE](#) [TMHE-82RE](#) [ASL-L01SP1-PY](#) [ASL-L04SP0-UY](#) [BFX-D1-N](#) [BFX-D1-P](#) [BJP100-BDT](#) [BJP100-BDT-P](#) [BJR100-DDT-C-P-F](#) [BJR100-DDT-P-F](#) [BJR10M-TDT-C-P-F](#) [BJR15M-TDT-C-P-F](#) [BJR15M-TDT-P-F](#) [BJR1M-DDT-C-P-F](#) [BJR3M-PDT-C-P-F](#)