


USB TC-08 Single-Channel Terminal Board

User's Guide

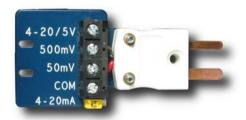

1 Safety notices

You **MUST** observe the following safety notices to prevent damage to equipment and personal injury.

DO NOT do not connect the terminal board to any voltage source exceeding the maximum input range printed on the board.

DO NOT connect the terminal board to a mains (line voltage) electrical supply. The high voltage will damage or destroy the equipment and may cause serious or fatal injury.

2 Overview

2.1 Introduction

The USB TC-08 Single-Channel Terminal Board is an accessory for the Pico Technology USB TC-08 8-Channel Thermocouple Data Logger. The screw terminals allow wires to be attached to the data logger without soldering and enable the USB TC-08 to measure voltages from 0 to \pm 5 V or 4-20 mA loop currents.

The terminal board is designed for use with the USB TC-08 and is not guaranteed to work with other thermocouple data loggers.

2.2 Specifications

Dimensions	57 x 27 x 14 mm (approx. 2.3 x 1.1 x 0.6 in.)	
Weight	12 g nominal (approx. 0.5 oz)	
Terminal wire size 1.5 mm ² solid, 1.0 mm ² stranded, 16-26 AWG		

2.3 Inputs and switch

Name	Function	
4-20/5V	Input for the positive side of a 4-20 mA loop or 0 to	
	5 V signal	
500mV	Input for the positive side of a 0 to 500 mV signal	
50mV	Input for the positive side of a 0 to 50 mV signal	
COM	Input for the negative side of any voltage or current	
	signal.	
4-20 mA	Set switch to "ON" for a 4-20 mA loop signal.	
	Set switch to "OFF" for all voltage signals.	

2 DO167-1

3 Measuring voltages and currents

- 1) Connect the negative side of your circuit to the COM terminal.
- 2) Connect the positive side of your circuit to the "5 V", "500 mV" or "50 mV" terminal depending on the voltage range of the signal. For a 4-20 mA loop signal, use the "5 V" input.
- For a 4-20 mA loop signal, set the switch to "ON". For a voltage signal, set the switch to "OFF".
- 4) Plug the terminal board into the USB TC-08.
- 5) Connect the USB TC-08 to the computer using the USB cable supplied with the logger.
- 6) Run PicoLog on the computer.
- 7) Go to File -> New Settings.
- 8) Set the converter type to USB TC-08.
- 9) Edit one of the USB TC-08 channels and set the "Thermocouple" control to "mV".
- PicoLog will display the voltage or current applied to the terminal board in the monitor window.




Figure 1: Example connection for measuring a 0 to 5 volt signal



Figure 2: The terminal board fitted to the USB TC-08

The voltage displayed in PicoLog corresponds to the input voltage as follows:

Input range	PicoLog voltage
0 – 5 V	0 – 50 mV
0 – 500 mV	0 – 50 mV
0 – 50 mV	0 – 50 mV
4 – 20 mA	9.6 – 48 mV

DO167-1 3

Issue history:

1) 14.9.09. New.

Pico Technology

James House Colmworth Business Park ST. NEOTS Cambridgeshire PE19 8YP United Kingdom

Tel: +44 1480 396395 Fax: +44 1480 396296

www.picotech.com

Copyright © 2009 Pico Technology Ltd. All rights reserved.



CE

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Pico manufacturer:

Other Similar products are found below:

PICOSCOPE 2205A MSO PICOSCOPE 2207B PICOSCOPE 2407B PICOSCOPE 3203D MSO PICOSCOPE 3204D PICOSCOPE 3406D

MSO PICOSCOPE 2206B MSO PICOSCOPE 3404D MSO PICOSCOPE 4224 PICOSCOPE 4262 PICOSCOPE 4224 KIT PICOSCOPE

3205D MSO PICOLOG 1216 TA041 TA044 USB PT-104 MI136 TA167 TA047 PICOSCOPE 3406D PICOLOG CM3 PICOLOG

CM3+3CC USB DRDAQ KIT USB DRDAQ PH PA149 PICOSCOPE 4444 1000V CAT III KIT PICOSCOPE 4444

PICOSCOPE5444DMSO SE050 SE055 SE056 SE057 SE058 PICOCONNECT 920 KIT PICOCONNECT 910 KIT PS011 PICOSCOPE

5242D PICOSCOPE 5243D PICOSCOPE 5442D MSO AS108 69320 81170 PICOSCOPE 2206B PICOSCOPE 3203D PICOSCOPE 3403D

PICOSCOPE 4424 PICOLOG 1012 PICOSCOPE 6404D PICOSCOPE 3405D MSO SE028