

# Phase Failure, Phase Sequence, Under Voltage plus Time Delay

Terminal Protection to IP20

43880

W. 17.5



Compact 17.5mm DIN rail housing

 $\Box$ Microprocessor based 

True R.M.S. monitoring measuring phase to phase (3-wire) or phase to neutral (4-wire) voltages

Selectable nominal voltages to suit most popular 3-wire or 4-wire supply voltages

 $\Box$ Monitors own supply and detects an Under voltage condition on one or more phases

Detects incorrect phase sequence, phase loss and neutral loss1 

Adjustment for Under voltage trip level 

Adjustment for Time delay

**DPDT relay output 5A** 

Green LED indication for supply status

Red LED indication for relay status  $\Box$ 

<sup>1</sup>Only when 4-wire monitoring selected

# **FUNCTION DIAGRAM** Monitored 3~ Supply 12 中 Ν Hyst | Td | | t | |<t|| t<sub>r</sub> | | t, | l Td

## **INSTALLATION AND SETTING**

Installation work must be carried out by qualified personnel.

BEFORE INSTALLATION, ISOLATE THE SUPPLY.

Connect the unit as required. The Connection Diagram below shows a typical installation, whereby the supply to a load is being monitored by the Phase monitoring relay. If a fault should occur (i.e. fuse blowing), the relay will de-energise and assuming control of the external Contactor, de-energise the Contactor as well.

Only connect the Neutral if available and 4-wire monitoring is required.

#### Applying power.

- Set the "Nominal (Un)" (1) voltage selector to match that of the voltage being monitored.
- Set the "Under %" adjustment to minimum. Set the "Delay (t)" to minimum.
- Apply power and the green "Power supply" **1** LED will illuminate. The red LED **2** will illuminate and relay energise after the short Power on delay (Td).
- Refer to the troubleshooting table if the unit fails to operate correctly


## Setting the unit (with power applied).


- Accurate setting can be achieved by adjusting the trip level "Under (%)" until the unit trips (relay de-energises) then by decreasing the trip level "Under (%)" until the relay re-energises. Close setting of the trip level ensures the unit will detect a phase loss even with a large percentage of re-generative voltage.
- In order to set the unit as previously described but without causing disruption to the equipment being controlled/monitored, set the "Delay (t)" to maximum. It will now be possible to establish the trip point when the red LED starts to flash. Decrease the trip level setting to stop the LED flashing. (Note: If the time delay is allowed to expire, the output relay will de-energise)
- If large supply variations are anticipated, the trip level should be set further from the nominal voltage
- Set the "Delay (t)" as required. (Note that the delay is only effective should the supply drop below the set trip level. However, if during an under voltage condition the supply drops below the 2<sup>nd</sup> under voltage trip level, any set time delay is automatically cancelled and the relays de-energise)


### Troubleshooting.


The table below shows the status of the unit during a particular fault condition

the table below shows the status of the unit during a particular radic condition.			
Supply fault	Green LED 1	Red LED 2	Relay
Phase or neutral missing	LED's flas	h alternately	De-energised
Phases reversed (no delay)	Flashing	Off	De-energised
Under voltage condition (during timing)	On	Flashing	Energised for delay (t)
Under voltage condition (after timing)	On	Off	De-energised
Phases < fixed under trip level [2]	On	Off	De-energised

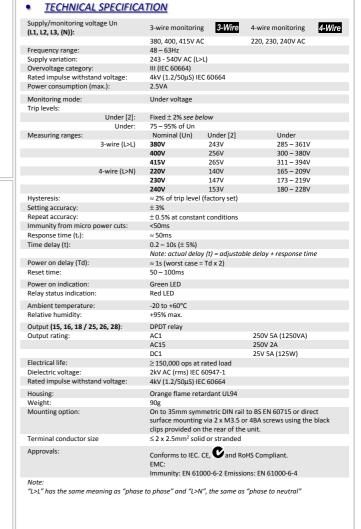

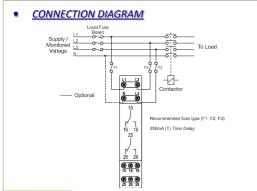

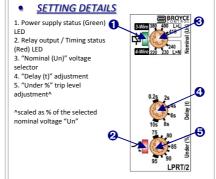

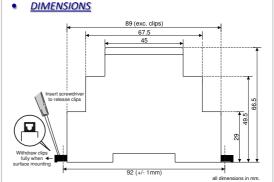



Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Broyce Control manufacturer:

Other Similar products are found below:

LART 12-230V AC/DC LXCVR 230V LBVR/A 12-24VDC LMCCR-10A LESW 12-230V AC/DC