

Phase Failure, Phase Sequence, Under and Over Voltage plus Time Delay

TECHNICAL SPECIFICATION

Terminal Protection to IP20

43880

W. 17.5



Compact 17.5mm DIN rail housing


 \Box Microprocessor based

- True R.M.S. monitoring measuring phase to phase (3-wire) or phase to neutral (4-wire) voltages
- Selectable nominal voltages to suit most popular 3-wire or 4-wire supply voltages
- \Box Monitors own supply and detects if one or more phases exceed the set Under or Over voltage trip levels
- Detects incorrect phase sequence, phase loss and neutral loss1
- Adjustments for Under and Over voltage trip levels
- Adjustment for Time delay
- Independent relay outputs - Under voltage monitoring (RLY2) / Over voltage monitoring (RLY1)
- 2 x SPDT relay output 5A
- Green LED indication for supply status \Box
- Individual Red LED indication for both relay statuses \Box

¹Only when 4-wire monitoring selected

FUNCTION DIAGRAM



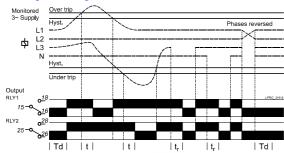

INSTALLATION AND SETTING

BEFORE INSTALLATION, ISOLATE THE SUPPLY.

Installation work must be carried out by qualified personnel.

- Connect the unit as required. The Connection Diagram below shows a typical installation, whereby the supply to a load is being monitored by the Phase monitoring relay. If a fault should occur (i.e. fuse blowing), the relay will
- de-energise and assuming control of the external Contactor, de-energise the Contactor as well. Only connect the Neutral if available and 4-wire monitoring is required.

Applying power.

- Set the "Nominal (Un)" 4 voltage selector to match that of the voltage being monitored.
- Set the Over " 5 adjustment to maximum and the "Under " adjustment to minimum. Set the "Delay (t)" 6 to minimum
- Apply power and the green "Power supply" 1 LED will illuminate. Both the red "RLY1" 2 / "RLY2" 3 LED's will illuminate and corresponding RLY1 and RLY2 relays energise after the short Power on delay (Td).
- Refer to the Troubleshooting table if the unit fails to operate correctly.

Setting the unit (with power applied).


- Set the "Over %" and the "Under %" adjustments to give the required monitoring range.
- If large supply variations are anticipated, the adjustments should be set further from the nominal voltage.
- Set the "Delay (t)" adjustment as required. (Note that the delay is only effective should the supply increase above or drop below the set trip levels. However, if during an under voltage condition the supply drops below the 2nd under voltage trip level, any set time delay is automatically cancelled and both relays de-energise

Troubleshooting.

The table below shows the status of the unit during a particular fault condition.

Supply fault	Green LED	Red LED	Red LED	Relay RLY1	Relay RLY2
Phase or neutral missing	Flashing ¹	Off	Flashing ¹	De-energised	De-energised
Phases reversed (no delay)	Flashing	Off	Off	De-energised	De-energised
Under voltage condition (during timing)	On	On	Flashing	Energised	En for delay (t)
Under voltage condition (after timing)	On	Off	Off	Energised	De-energised
Over voltage condition (during timing)	On	Flashing	On	En for delay (t)	Energised
Over voltage condition (after timing)	On	Off	On	De-energised	Energised
Phases < fixed under trip level [2]	On	Off	Off	De-energised	De-energised

¹ Green and Red LED's alternate in this fault condition

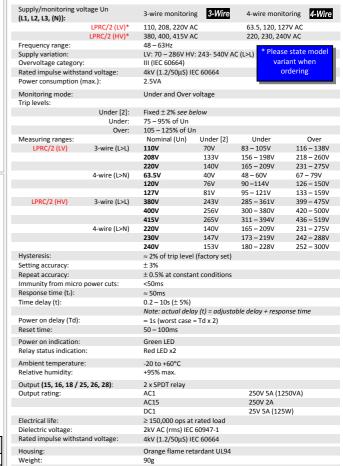

Note "L>L" has the same meaning as "phase to phase" and "L>N", the same as "phase to neutral"


90g


Mounting option:


Approvals

Terminal conductor size

CONNECTION DIAGRAM

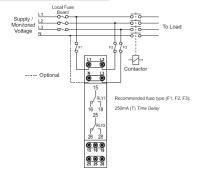

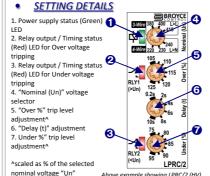

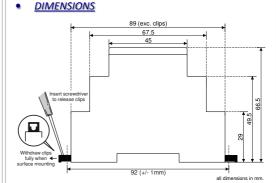

On to 35mm symmetric DIN rail to BS EN 60715 or direct

clips provided on the rear of the unit.

Conforms to IEC. CE, Cand RoHS Compliant. Immunity: EN 61000-6-2 Emissions: EN 61000-6-4

≤ 2 x 2.5mm² solid or stranded

surface mounting via 2 x M3.5 or 4BA screws using the black



Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Broyce Control manufacturer:

Other Similar products are found below:

LART 12-230V AC/DC LXCVR 230V LBVR/A 12-24VDC LMCCR-10A LESW 12-230V AC/DC