



CONNECTION



CAPACITY

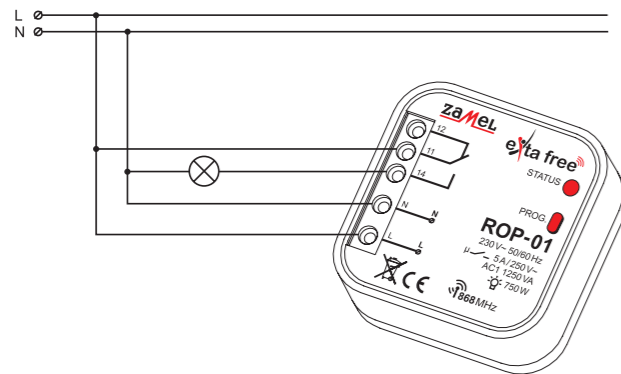

APPLICATION

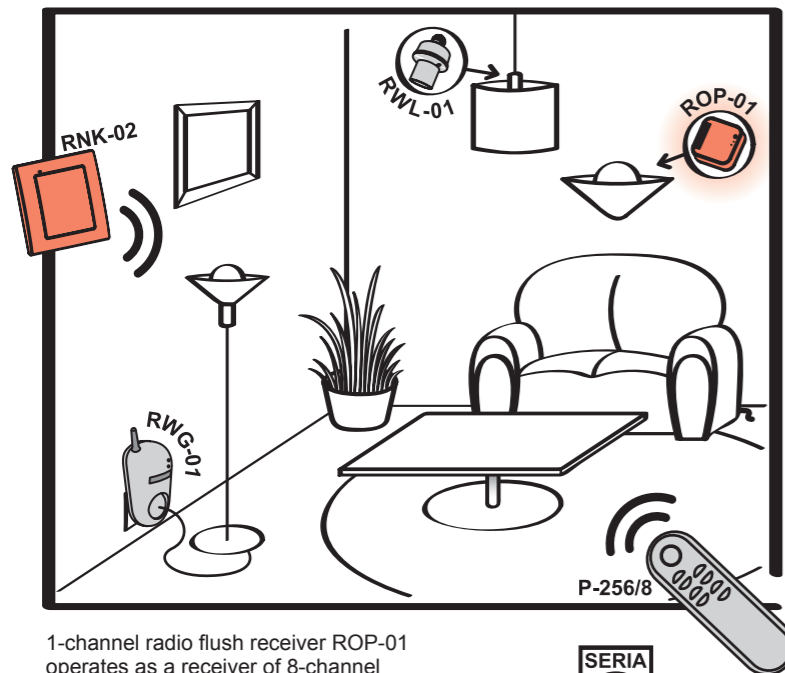

1-channel radio flush receiver ROP-01 operates as a receiver of 8-channel remote controller P-256/8 and of 2-channel button radio transmitter RNK-02 (light sources switch on/switch off control). The above mentioned transmitters can also control operation of radio lighting switch RWL-01 and remote control socket RWG-01.



WARRANTY CARD

There is 24 months guarantee on the product

- ZAMEL provides a two-year warranty for its products.
- The ZAMEL warranty does not cover: a) mechanical defects resulting from transport, loading / unloading or other circumstances b) defects resulting from incorrect installation or operation of ZAMEL products; c) defects resulting from any changes made by CUSTOMERS or third parties, to products sold or equipment necessary for the correct operation of products sold; d) defects resulting from force majeure or other aleatory events for which ZAMEL is not liable; e) power supply (batteries) to be equipped with a device in the moment of sale (if they appear);
- All complaints in relation to the warranty must be provided by the CUSTOMER in writing to the retailer after discovering a defect.;
- ZAMEL will review complaints in accordance with existing regulations.;
- The way a complaint is settled, e.g. replacement of the product, repair or refund, is left to the discretion of ZAMEL.
- Guarantee does not exclude, does not limit, nor does it suspend the rights of the PURCHASER resulting from the discrepancy between the goods and the contract.

Salesman stamp and signature, date of sale

MOUNTING

- Disconnect power supply by the phase fuse, the circuit-breaker or the switch-disconnector combined to the proper circuit.
- Check if there is no voltage on connection cables by means of a special measure equipment.
- Connect the cables with the terminals in accordance with the installing diagram.
- Install ROP-01 device in installation cable box.
- Switch on the power supply from the mains.

RNK-02 FUNCTIONING, MOUNTING

By pressing the button, the transmitter sends a signal with 868,32 MHz frequency which controls EXTA FREE receivers. **Device programming procedure (adding a transmitter to a receiver's memory) is described in particular EXTA FREE manual instructions.** The device range (up to 250 m depending on a receiver) can be increased by means of a re-transmitter or few RTN-01 retransmitters. The device can be mounted in any place by means of double-sided adhesive tape or wall plugs 5 x (3 x 30) mm.

Mounting by means of wall plugs:

- Remove the button - to do it press the button on one side, and on the other side put a screwdriver into a slot and lift up the button.
- Find a place on the wall to mount the transmitter, make two holes corresponding mounting holes from the transmitter's base.
- Set wall plugs in the holes.
- Fix the base by means of screwing screws into wall plugs.
- Place the button again.

BATTERY CHANGE
Battery discharge status is signalled by several LED red diode flashes during transmission time.

- Remove the button (as in point 1 of mounting).
- By means of a screwdriver lever up the printed-circuit board releasing the bottom latch (Fig. 2), and remove it from the base.
- Remove the battery from the latch.
- Mount a new battery. **Watch battery polarisation marked on the latch. Wrong battery mounting may cause device damage.**
- Put the removed printed-circuit board back in the base.
- Put back the button.

CAUTION: While changing the battery, it is suggested to press any of the buttons for about 5 seconds before putting it into a latch. Next press transmission button several times to check its operation. If the transmitter does not work properly repeat the battery change procedure.

RZB-01 WIRELESS CONTROL KIT - LIGHTING

MANUAL INSTRUCTION



ZAMEL Sp. z o.o.



ul. Zielona 27, 43-200 Pszczyna, Poland
tel. +48 (32) 210 46 65, fax +48 (32) 210 80 04
www.zamelcet.com, e-mail: marketing@zamel.pl

DESCRIPTION

RZB-01 set includes radio receiver ROP-01 used in flush and surface mounting and RNK-02 transmitter, battery powered, can be mounted in any place. The set gives comfortable solution used to control lighting and other receivers remotely.

FEATURES

- complete set of wireless control (2-channel button radio transmitter RNK-02 and 1-channel bistable radio receiver ROP-01),
- light operation control and other receivers control,
- receivers are easily installed in an electric-light fitting or in Ø60 mm junction box,
- five operation modes: switching on mode, switching off, monostable, bistable, time (switch off delay),
- wide range of operation (up to 180 m),
- operation is optically signalled,
- low current consumption, possibility of constant work,
- possibility of widening operation range by means of RTN-01 retransmitter.



CAUTION! The device is designed for single-phase installation and must be installed in accordance with standards valid in a particular country. The device should be connected according to the details included in this operating manual. Installation, connection and control should be carried out by a qualified electrician staff, who act in accordance with the service manual and the device functions. In case of casing dismantling an electric shock may occur, and the guarantee is lost then. Before installation make sure the connection cables are not under voltage. The cruciform head screwdriver 3,5 mm should be used to instal the device. Improper transport, storage, and use of the device influence its wrong functioning. It is not advisable to instal the device in the following cases: if any device part is missing or the device is damaged or deformed. In case of improper functioning of the device contact the producer.



The symbol means selective collecting of electrical and electronic equipment. It is forbidden to put the used equipment together with other waste.

TECHNICAL DATA

	RNK-02	ROP-01
Input (supply) terminals:	-	L, N
Input rated voltage:	3 V (CR2032 battery)	230 V AC
Battery life:	3 + 5 years	-
Input voltage tolerance:	-	-15 + 10 %
Nominal frequency:	-	50 / 60 Hz
Nominal power consumption:	-	0,29 W
Number of operation modes:	-	5
Number of channels:	2	1
Transmission:	radio 868,32 MHz	
Coding way:	unidirectional	
Coding:	addressing transmission	
Maximum number of transmitters:	-	32
Range:	up to 250 m in the open area	up to 230 m in the open area
Time adjustment:	-	1 s + 18 hours (every 1 sec.)
Optic signalling of transmitter's operation:	LED red diode	
Relay output clamps:	-	12, 11, 14
Relay contacts parameters:	-	1NO/NC 5A / 250V~ AC1 1250 VA
Number of terminal clamps:	-	5
Section of connecting cables:	-	do 2,5 mm ²
Ambient temperature range:	-10 + +55 °C	
Operating position:	free	
Casing mounting:	wall plugs, double-sided adhesive tape	installation cable box Ø60 mm
Casing protection degree:	IP20 (EN 60529)	
Protection level:	III	II
Overvoltage category:	-	II
Pollution degree:	2	
Surge voltage:	-	1 kV (EN 61000-4-5)
Dimensions:	90 x 80 x 11,5 mm	47,5 x 47,5 x 20 mm
Weight:	0,038 kg	0,043 kg
Reference standard:	ETSI EN 300 220-1 ETSI EN 300 220-2	EN 60669, EN 60950 EN 61000

APPEARANCE

Relay output terminals
(12, 11, 14)


Input (supply) terminals (L, N)

Optic signalling of receiver's operation

Programming buttons

Optic signalling of transmitter's operation

Push-button

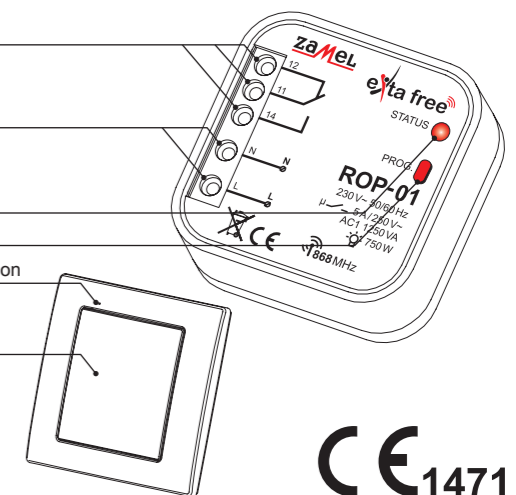

ROP-01 OPERATION

ROP-01 can operate in five modes:

<p>ON MONOSTABLE the relay operates only while pressing transmitter's push-button.</p>	<p>ON/OFF BISTABLE (one push-button) the device changes relay status cyclically always after pressing the same push-button.</p>	<p>ON SWITCH ON the device switches on after pressing the push-button. SWITCH OFF the device switches off after pressing the push-button.</p>	<p>ON TIME the device switches on according to the adjusted time (tp), but it may be switched off before adjusted time finishes. Default settings - 15 seconds. CAUTION! Adjusted time cannot be deleted.</p>
---	--	---	---

RADIO TRANSMITTERS PROGRAMMING

MONOSTABLE mode:

- Press transmitter's push-button for a longer time.
- Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- Release transmitter's push-button. LED red diode switches on (first signal pulsates, next the signal is constant).
- Press the same transmitter's push-button and release it. LED red diode switches on (the signal pulsates) and next it switches off - THE TRANSMITTER IS ADDED.

BISTABLE mode:

- Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- Press the transmitter's push-button for a longer time. LED red diode switches on (first signal pulsates, next the signal is constant).
- Release transmitter's push-button. LED red diode switches on (the signal pulsates), next the LED red diode switches off - it means the TRANSMITTER IS ADDED.

SWITCH ON/SWITCH OFF mode (two push-buttons):

- Press PROG push-button of ROP-01 device for a longer time until LED red diode switches on (constant signal). Next release PROG push-button.
- Press the transmitter's push-button for a longer time. LED red diode switches on (first signal pulsates, next the signal is constant).
- Release transmitter's push-button. LED red diode switches on (the signal pulsates), next the LED red diode switches off - it means the TRANSMITTER IS ADDED.

TIME mode (one push-button):

- Press PROG push-button of ROP-01 device for a longer time till LED red diode switches on (constant signal). Next release PROG push-button.
- Press PROG push-button of ROP-01 device and then release it. LED red diode switches on (first signal pulsates, next the signal is constant).
- Press and release the same transmitter's push-button. LED red diode switches on (signal pulsates) and then switches off - THE TRANSMITTER IS ADDED.

An exemplary programming procedure with the use of P-257/2 remote controller. The procedure for the rest of radio EXTA FREE transmitters is analogous. **CAUTION: Every transmitter can cooperate with ROP-01 in a different mode, depending on how they were added to the device. One transmitter can be added during one programming cycle. Full memory is signalled with pulsating LED red diode.**

TIME PROGRAMMING

- Press PROG push-button of ROP-01 device for a longer time till LED red diode switches on (constant signal). Next release PROG push-button. Wait (for about 5 seconds) till LED red diode switches on (first signal pulsates, next the signal is constant).
- Press PROG push-button of ROP-01 device and then release it. LED red diode switches off and then switches on (signal pulsates). Every LED diode pulse equals 1 second.
- After the adjusted time is finished (the number of LED red diode flashes) press PROG push-button and then release it - TIME IS ADDED.

Maximum time is 18 hours.

RADIO TRANSMITTERS DELETION

- Press PROG push-button of ROP-01 device for a longer time.
- After 5 seconds LED red diode switches on (signal pulsates) and then it switches off.
- Release the push-button in ROP-01 - MEMORY IS DELETED.

COOPERATION AND OPERATING RANGE

Symbol	ROP-01	ROP-02	ROB-01	SRP-02	SRP-03	RWG-01	RWL-01	ROM-01	ROM-10	RDP-01	RTN-01
RNK-02	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
RNK-04	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
P-256/8	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m
P-257/4 (2)	180 m	200 m	200 m	200 m	200 m	250 m	180 m	250 m	250 m	180 m	250 m
RNM-10	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m
RNP-01	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RNP-02	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RNL-01	160 m	180 m	180 m	lack*	lack*	200 m	160 m	200 m	200 m	160 m	200 m
RTN-01	200 m	200 m	200 m	200 m	200 m	250 m	200 m	250 m	250 m	200 m	250 m
RCR-01	160 m	180 m	180 m	lack*	lack*	200 m	160 m	200 m	200 m	160 m	200 m
RTI-01	160 m	180 m	180 m	180 m	180 m	200 m	160 m	200 m	200 m	160 m	200 m
RXM-01	230 m	250 m	250 m	250 m	250 m	300 m	200 m	300 m	300 m	230 m	300 m

* - 1-channel transmitters do not cooperate with roller blind controllers.

CAUTION: The given range concerns open area - an ideal condition without any natural or artificial obstacles. If there are some obstacles between a transmitter and a receiver, it is advisable to decrease the range according to: wood and plaster: from 5 to 20 %, bricks: from 10 to 40 %, reinforced concrete: from 40 to 80 %, metal: from 90 to 100 %, glass: from 10 to 20 %. Over- and underground medium and high electrical power lines, radio and television transmitters, GSM transmitters set close to a device system have also a negative influence on the range.

TRANSMITTERS			RECEIVERS		
RNK-02 2-channel button radio transmitter		RNL-01 Radio foot transmitter		ROP-01 1-channel radio receiver	
RNK-04 4-channel button radio transmitter		RTI-01 IR/EXTA FREE transceiver		ROP-02 2-channel radio receiver	
P-256/8 8-channel remote controller		RNM-10 4-channel radio modular transmitter		RDP-01 1-channel radio dimmer	
P-257/4 4-channel remote controller		RNP-01 4-channel radio transmitter		ROB-01/12-24V Radio gate controller	
P-257/2 2-channel remote controller		RNP-02 4-channel radio transmitter		ROM-01 1-channel radio modular receiver	
RCR-01 Radio motion sensor		RXM-01 Translator RS-485/EXTA FREE		ROM-10 2-channel radio modular receiver	
ACCESSORIES					
ANT-01 External antenna		RTN-01 Retransmitter			

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Power Management IC Development Tools](#) category:

Click to view products by [Zamel](#) manufacturer:

Other Similar products are found below :

[EVAL6482H-DISC](#) [EVAL-AD5522EBUZ](#) [EVAL-ADM1060EBZ](#) [EVAL-ADM1073MEBZ](#) [EVAL-ADM1166TQEBZ](#) [EVAL-ADM1168LQEBZ](#) [EVAL-ADM1171EBZ](#) [EVAL-ADM1276EBZ](#) [EVB-EN5319QI](#) [EVB-EN5365QI](#) [EVB-EN6347QI](#) [EVB-EP5348UI](#) [MIC23158YML EV](#) [MIC23451-AAAYFL EV](#) [MIC5281YMME EV](#) [124352-HMC860LP3E](#) [ADM00513](#) [ADM8611-EVALZ](#) [ADM8612-EVALZ](#) [ADM8613-EVALZ](#) [ADM8615-EVALZ](#) [ADP1046ADC1-EVALZ](#) [ADP1055-EVALZ](#) [ADP122-3.3-EVALZ](#) [ADP130-0.8-EVALZ](#) [ADP130-1.2-EVALZ](#) [ADP130-1.5-EVALZ](#) [ADP130-1.8-EVALZ](#) [ADP160UJZ-REDYKIT](#) [ADP166UJ-EVALZ](#) [ADP1712-3.3-EVALZ](#) [ADP1714-3.3-EVALZ](#) [ADP1715-3.3-EVALZ](#) [ADP1716-2.5-EVALZ](#) [ADP1740-1.5-EVALZ](#) [ADP1752-1.5-EVALZ](#) [ADP1754-1.5-EVALZ](#) [ADP1828LC-EVALZ](#) [ADP1870-0.3-EVALZ](#) [ADP1871-0.6-EVALZ](#) [ADP1873-0.6-EVALZ](#) [ADP1874-0.3-EVALZ](#) [ADP1876-EVALZ](#) [ADP1879-1.0-EVALZ](#) [ADP1882-1.0-EVALZ](#) [ADP1883-0.6-EVALZ](#) [ADP197CB-EVALZ](#) [ADP199CB-EVALZ](#) [ADP2102-1.25-EVALZ](#) [ADP2102-1.2-EVALZ](#)