

NC


DESCRIPTION OF REVISIONS DATE DESCRIPTION OF REVISIONS BY DATE CHKD 4. Move the lock lever at approximately the center. 5. Do not pinch or pick the lock lever to lift it as shown below. Otherwise, it may break. (Do not carry out any operation other than rotating the lever as shown in 2 above.) I INSTRUCTIONS ON FPC LAYOUT AFTER CONNECTION 1

◆Direction of Contacts This connector has contacts on the bottom. Thus, insert it with the exposed conductors face down.

◆ Inserting the FPC


1. Insert the FPC horizontally along the surface and at a right angle to the connector. Insert it properly to the very end. If the FPC is inserted at a slant (incorrectly), the conductors may short-circuit due to pitch shift or the edge of the FPC may catch in the terminals, resulting in deformation of the terminals. This connector has a ZIF structure, and its effective engagement length is 0.35 mm (when the recommended FPC nominal is used).
Use the lock lever carefully to prevent the FPC from dislocating after inserting it.

- 2. Do not insert the FPC diagonally from above. If the FPC is inserted at a slant (incorrectly) as shown below in the FPC insertion process, the FPC may bend and patterns may break or the FPC may not insert completely, resulting in improper conduction.
- *Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion. Besides, it is not difficult to insert FPC correctly all the way to the end. Design the proper layout of parts.
- ₩Make adjustments with the FPC manufacturer for FPC bending perfomance and wire breakage.

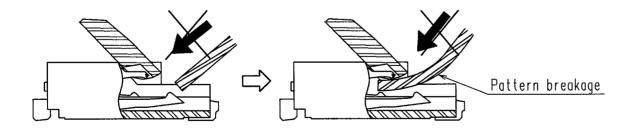


◆ Checking the Locking Condition In the locked condition, make sure that the lock lever is horizontal on the board surface. Do not apply excessive force to it near the 0° position of the lever. Otherwise, the terminals may be deformed. (Allowable force: 1 N or less)

◆Load to FPC Be very careful not to apply any force to the FPC after inserting it. Otherwise, the connector may become unlocked or the FPC may break. Fix the FPC, in particular, when loads are applied to it continuously. Design the FPC layout with care not to bend it sharply near the insertion opening.

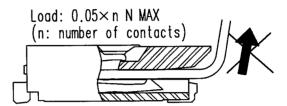

[INSTRUCTIONS ON REMOVING FPC]

◆ Release the lock lever to remove the FPC.

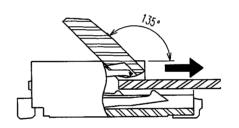

I OTHER INSTRUCTIONS 1

◆Instructions on Manual Soldering Follow the instructions shown below when soldering the connector manually during repair work, etc.

1. Do not perform reflow soldering or manual soldering with the FPC inserted into the connector. 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.

3. Do not use excessive solder (or flux). If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contactsor rotating parts of the lock lever, resulting in poor contact or a rotation failure of the lock lever. Supplying excessive solder to the reinforcing bracket may hinder lock lever rotation, resulting in breakage of the connector.

CODE NO.(OLD)		DRAWN	DES I GNED	CHECKED	APPROVED	RELEASED
INSTRUCTION MANUAL		N.ISHIDA 05 · 03 · 2	S.OKAMURA 6 05 - 03 - 26	,	M. Bodoo	
SCALE SCALE	EDC3-154657-01		PART NO. FH26-27S-0.3SHW(05)			
- : 1			CL580-0204-0-05			

8 FORM NO. 229

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for FFC & FPC Connectors category:

Click to view products by Hirose manufacturer:

Other Similar products are found below:

K-FC20 FH29B-80S-0.2SHW(99) FPH-2022G AYF332735 52610-1075 52610-1275 52610-1934 501864-3091-TR225 086222026001800 52610-0675 62684-36210E9ALF 52746-1671-TR250 10051922-2810EHLF 6-520415-9 SFV6R-1STE9HLF XF3M-2915-1B-R100 1658549-1 46214008010800 AYF534065TA AYF351525 086212040340800+ AYF530365TA 67000-014LF 67000-004LF 006207341915000+ DS1020-19RT1D 67000-003LF 67000-011LF 67000-016LF HFW14R-2STE9LF SFV32R-2STBE9HLF SFW12R-5STE9LF SFW18R-1STAE9LF SFW4R-5STE9LF 52807-0430 046283021002868+ THD1015-8CL-SN 67000-006LF 502250-8027 104267-9617 66987-011LF AYF362535 F0501-T-50-20T-R HFW8S-2STAE1HLF 67000-008LF 67000-012LF ECC576069EU F1002-B-20-20T-R HFW15S-2STAE1HLF 0781271110