


**FEATURES** 

# T2 Terminator Tooling Specification Sheet Order No. 63911-5200

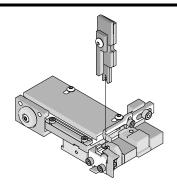


- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

### SCOPE

Products: 2.00mm (.079") Pitch Female Crimp Terminal, 22-28 AWG.

Terminal	Terminal	Wire Size			Insulatio	Strip Length				
Series No.	Order No.			IPC/WHMA-A60 (1)		Terminal (2)				
Series NO.		AWG	mm²	mm	ln.	mm	ln.	mm	ln.	
		22	0.34	1.65	0.065		.049067	1.60-2.00	.063079	
	56134-8000	24	0.20	1.45	0.057	1.25-1.70				
		26	0.13	1.30	0.051					
56134	56134-9000	22	0.34	1.65	0.065	0.90-1.70	.035067	1.60-2.00	.063079	
		24	0.20	1.45	0.057					
		26	0.13	1.30	0.051					
		28 (3)	-	-	-	-	-	-	-	
(1) To achieve optimum IPC-A620 Class 2 insulation crimps, use this insulation OD using UL1007 wire.										
(2) Overall insulation OD specification for terminal.										
(3) 28 /	(3) 28 AWG wire is not recommenced for use in this terminal, use 22-26 AWG wire for better crimp quality.									

## **DEFINITION OF TERMS**

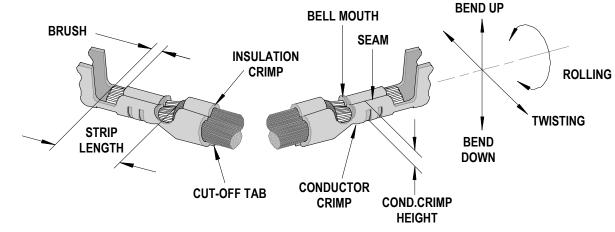

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Release Date: 05-05-09 Revision Date: 05-05-09 **UNCONTROLLED COPY** 

### **CRIMP SPECIFICATION**

Terminal Series No.	Bell n	nouth	Cut-off Tab	Maximum	Conductor Brush	
reminal Series NO.	mm	In.	mm	ln.	mm	ln.
56134	0.05-0.40	.002016	0.30	.012	0.10-0.70	.004028

	Bend up Bend do		Twist	Roll	Punch Width (Ref)				Seam	
Terminal Series No.	Dend up	Denu uown	1 1151	KUI	Cond	Conductor		ation	Seam shall not be	
	Degree		Degree		mm	In	mm	In	open and no wire allowed	
56134	3 °	3 °	3 °	6 °	1.20	.047	1.50	.059	out of the crimping area	

After crimping, the crimp profiles should measure the following:


Terminal	Wire Size		Conductor				Insulation					Pull Force	
Order No.			Crimp Height		Crimp Width (Ref)		Crimp Height		Crimp Width (Ref)		Minimum		
Order No.	AWG	mm <sup>2</sup>	mm	In.	mm	In.	mm	In.	mm	In.	Ν	Lb.	
	22	0.34	0.70-0.75	.028030	1.18-1.28	.046050	1.85-1.95	.073077	1.55-1.75	.061069	44.1	9.9	
56134-8000	24	0.20	0.67-0.72	.026028	1.18-1.28	.046050	1.80-1.90	.071075	1.55-1.75	.061069	29.4	6.6	
	26	0.13	0.61-0.66	.024026	1.18-1.28	.046050	1.75-1.85	.069073	1.55-1.75	.061069	19.6	4.4	
56134-9000	22	0.34	0.70-0.75	.028030	1.18-1.28	.046050	1.85-1.95	.073077	1.55-1.75	.061069	44.1	9.9	
	24	0.20	0.67-0.72	.026028	1.18-1.28	.046050	1.80-1.90	.071075	1.55-1.75	.061069	29.4	6.6	
	26	0.13	0.61-0.66	.024026	1.18-1.28	.046050	1.75-1.85	.069073	1.55-1.75	.061069	19.6	4.4	

#### Tool Qualification Notes:

- This Applicator was qualified to the above specifications with UL1007 wire.
   \*An insulation diameter larger than .051" may cause the insulation grips to pierce the insulation on both sides of the insulation crimp. The customer should determine the suitability for their application.
- 2. Pull Force should be measured with no influence from the insulation crimp.
- 3. The above specifications are guidelines to an optimum crimp.

## PARTS LIST


T2 Terminator 63911-5200												
Item	Order No	Engineering No.	Description	Quantity								
Perishable Tooling												
	63911-5270	63911-5270	Tool Kit (All "Y" Items)	REF								
1	63444-1207	63444-1207	Conductor Punch	1 Y								
2	63445-1213	63445-1213	Conductor Anvil	1 Y								
3	63446-1510	63446-1510	Insulation Punch	1 Y								
4	63445-1504	63445-1504	Insulation Anvil	1 Y								
5	63443-0002	63443-0002	Front Cut-Off Plunger	1 Y								
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y								
		Other Con	nponents									
7	11-18-4083	60707-8	Front Cover	1								
8	11-24-1067	4996-4	Cut-off Plunger Spring	1								
9	63443-0009	63443-0009	Front Scrap Chute	1								
10	63443-0024	63443-0024	Key	1								
11	63443-0085	63443-0085	Wire Stop L-Bracket	1								
12	63443-0090	63443-0090	Wire Stop	1								
13	63443-1703	63443-1703	17.30mm Height Spacer	1								
14	63443-2210	63443-2210	10.0mm Coarse Spacer	2								
15	63443-3160	63443-3160	Plunger Striker Front	1								
16	63443-6003	63443-6003	Rear Cover	1								
		Fra	me									
17	63800-8500	63800-8500	T2 Terminator	1								
		Hardy										
18	N/A	N/A	M3 by 6 Long FHCS	1**								
19	N/A	N/A	M3 by 6 Long SHCS	2**								
20	N/A	N/A	M4 by 6 Long SHCS	2**								
21	N/A	N/A	M4 by 12 Long BHCS	2**								
22	N/A	N/A	M4 by 14 Long SHCS	2**								
23	N/A	N/A	M4 by 45 Long SHCS	2**								
24	N/A	N/A	M5 by 12 Long SHCS	1**								
25	N/A	N/A	#10-32 by 3/8"Long BHCS	1**								
** Ava	ailable from an	industrial supply con	mpany such as MSC (1-800-6	** Available from an industrial supply company such as MSC (1-800-645-7270).								

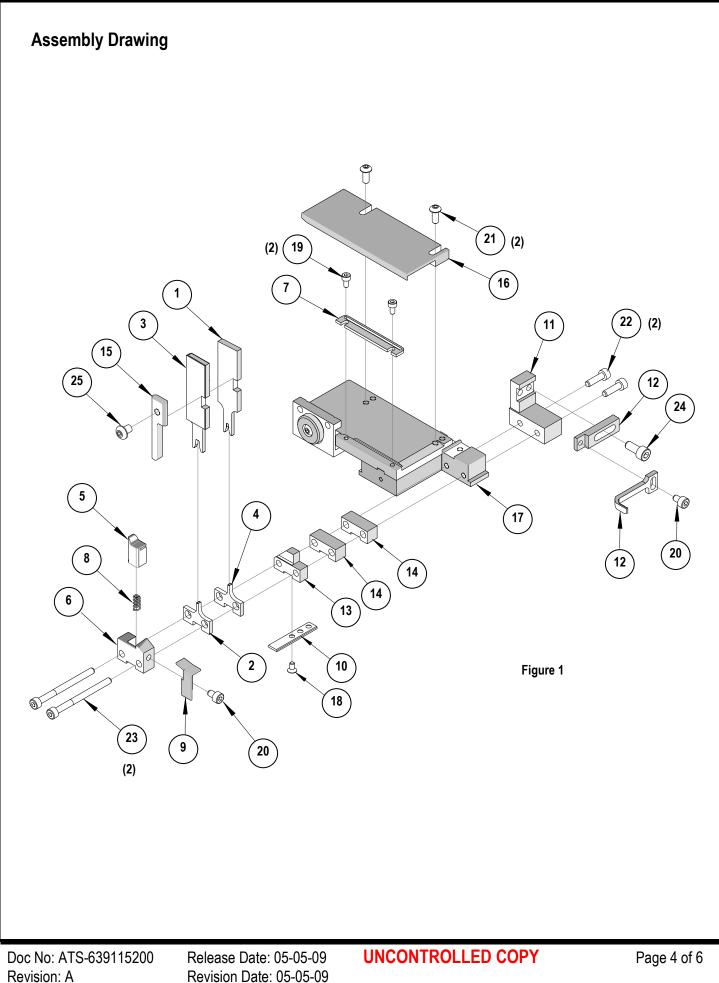

## NOTES

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

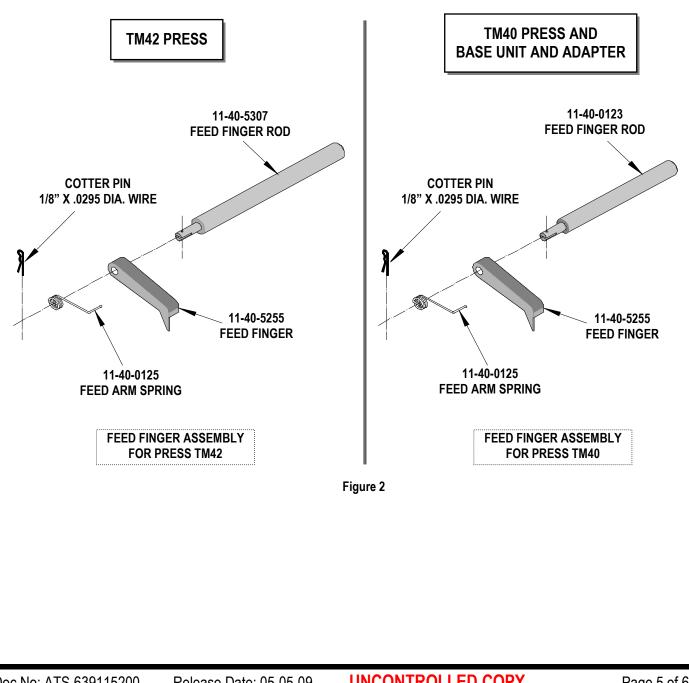

Release Date: 05-05-09 Revision Date: 05-05-09

### NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX

amerinfo@molex.com

Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

European Headquarters

Munich, Germany 49-89-413092-0 eurinfo@molex.com **Corporate Headquarters** 

2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-639115200 Revision: A

Release Date: 05-05-09 Revision Date: 05-05-09 UNCONTROLLED COPY

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Tool Kits & Cases category:

Click to view products by Molex manufacturer:

Other Similar products are found below :

 217434-1
 4263
 1055420-1
 11-18-3023
 63860-8170
 856600-2
 690372163
 11-40-3247
 63883-2870
 63885-0270
 63866-1070
 63863-5070

 63892-7370
 11-18-3209
 63860-4070
 63881-0970
 A0403641
 11-18-3040
 63865-2070
 63910-1470
 63861-5070
 63850-7470
 11-18-3201

 63910-7570
 FM 0501
 146
 63883-0670
 63830-0070
 63902-9170
 11-18-3147
 11-18-3079
 63883-2670
 63900-1770
 11-18-3190
 63851-1070

 63912-4770
 63911-5270
 63895-1070
 63850-6070
 1-69411-3
 63852-9270
 63802-6270
 63902-4870
 11-18-3202
 63852-9170

 63850-1070
 63830-0170
 63910-2870
 11-18-3010
 63820-7070
 1-69411-3
 63852-9270
 63802-6270
 63902-4870
 11-18-3202
 63852-9170