


ANNA-B112

Stand-alone Bluetooth 5 low energy module

Data sheet

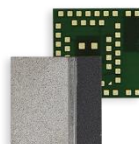

Abstract

This technical data sheet describes the ultra-compact ANNA-B112 stand-alone Bluetooth® 5 low energy module packed into a System-in-Package design. Despite the small size, ANNA-B112 offers an internal antenna option. With embedded Bluetooth low energy stack and u-connectXpress software, this SiP module is tailored for OEMs who wish to have the shortest time-to-market. ANNA-B112 offers full flexibility, and the OEMs can embed their own application on top of the integrated Bluetooth low energy stack using Nordic SDK or Arm® Mbed™ integrated development environment (IDE).

Document information

| | | |
|-------------------------------|-------------------------------------------|-------------|
| Title | ANNA-B112 | |
| Subtitle | Stand-alone Bluetooth 5 low energy module | |
| Document type | Data sheet | |
| Document number | UBX-18011707 | |
| Revision and date | R10 | 10-Aug-2021 |
| Disclosure Restriction | C1-Public | |

| Product status | Corresponding content status | |
|--------------------------------------|-------------------------------------|----------------------------------------------------------------------------------------|
| Functional sample | Draft | For functional testing. Revised and supplementary data will be published later. |
| In development / Prototype | Objective specification | Target values. Revised and supplementary data will be published later. |
| Engineering sample | Advance information | Data based on early testing. Revised and supplementary data will be published later. |
| Initial production | Early production information | Data from product verification. Revised and supplementary data may be published later. |
| Mass production / End of life | Production information | Document contains the final product specification. |

This document applies to the following products:

| Product name | Type number | u-connectXpress software version | Hardware version | PCN reference | Product status |
|---------------------|--------------------|-----------------------------------------|-------------------------|----------------------|-----------------------|
| ANNA-B112 | ANNA-B112-00B-00 | 1.0.0 | 03 | N/A | Mass production |
| ANNA-B112 | ANNA-B112-01B-00 | 2.0.0 | 03 | N/A | Mass production |
| ANNA-B112 | ANNA-B112-70B-00 | N/A | 03 | N/A | Initial production |
| ANNA-B112 | ANNA-B112-02B-00 | 4.0.0 | 03 | N/A | Initial production |

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

Contents

| | |
|--------------------------------------------------|-----------|
| Document information | 2 |
| Contents | 3 |
| 1 Functional description..... | 6 |
| 1.1 Overview..... | 6 |
| 1.2 Product features | 7 |
| 1.3 Block diagram | 8 |
| 1.4 Product description | 9 |
| 1.5 Software options..... | 9 |
| 1.5.1 u-connectXpress software | 10 |
| 1.5.2 Open CPU..... | 10 |
| 1.6 Bluetooth device address | 10 |
| 2 Interfaces | 11 |
| 2.1 Power management | 11 |
| 2.1.1 Module supply input (VCC) | 11 |
| 2.2 RF antenna interfaces | 11 |
| 2.2.1 2.4 GHz Bluetooth low energy (ANT) | 11 |
| 2.2.2 Near Field Communication (NFC)..... | 11 |
| 2.3 Low Power Oscillator interface..... | 11 |
| 2.4 System functions..... | 12 |
| 2.4.1 Module power-on | 12 |
| 2.4.2 Module power-off..... | 12 |
| 2.4.3 Standby mode | 12 |
| 2.4.4 Sleep mode..... | 13 |
| 2.4.5 Module reset | 13 |
| 2.4.6 Real Time Counter (RTC)..... | 13 |
| 2.5 Serial interfaces | 13 |
| 2.5.1 Asynchronous serial interface (UART) | 14 |
| 2.5.2 Serial peripheral interface (SPI) | 14 |
| 2.5.3 I2C interface..... | 14 |
| 2.5.4 I2S interface..... | 14 |
| 2.6 GPIO | 15 |
| 2.6.1 PWM..... | 16 |
| 2.7 Analog interfaces | 16 |
| 2.7.1 ADC..... | 16 |
| 2.7.2 Comparator | 16 |
| 2.7.3 Low power comparator | 16 |
| 2.7.4 Analog pin options..... | 16 |
| 2.8 u-connectXpress software features | 17 |
| 2.8.1 u-blox Serial Port Service (SPS) | 17 |
| 2.8.2 System status signals..... | 17 |

| | | |
|----------|-------------------------------------------------------|-----------|
| 2.8.3 | System control signals | 17 |
| 2.8.4 | UART signals | 17 |
| 2.8.5 | IO signals | 18 |
| 2.9 | Debug interfaces | 18 |
| 2.9.1 | SWD..... | 18 |
| 2.9.2 | Trace – Serial Wire Viewer..... | 18 |
| 3 | Pin definition..... | 19 |
| 3.1 | Pin assignment open CPU..... | 19 |
| 3.2 | Pin assignment in u-connectXpress software..... | 22 |
| 4 | Electrical specifications..... | 25 |
| 4.1 | Absolute maximum ratings | 25 |
| 4.1.1 | Maximum ESD ratings..... | 25 |
| 4.2 | Operating conditions | 25 |
| 4.2.1 | Operating temperature range..... | 25 |
| 4.2.2 | Supply/Power pins | 26 |
| 4.2.3 | Current consumption..... | 26 |
| 4.2.4 | RF performance | 26 |
| 4.2.5 | ANNA-B112 radiation patterns | 27 |
| 4.2.6 | RESET_N pin..... | 29 |
| 4.2.7 | Digital pins..... | 29 |
| 5 | Mechanical specifications..... | 30 |
| 6 | Qualification and approvals | 31 |
| 6.1 | Country approvals..... | 31 |
| 6.2 | European Union regulatory compliance | 31 |
| 6.2.1 | Radio Equipment Directive (RED) 2014/53/EU | 31 |
| 6.2.2 | Compliance with the RoHS directive | 31 |
| 6.3 | FCC and IC Compliance..... | 31 |
| | FCC compliance..... | 32 |
| 6.3.2 | RF-exposure statement | 32 |
| 6.3.3 | End product user manual instructions | 33 |
| 6.3.4 | End product labeling requirements | 33 |
| 6.3.5 | FCC and IC IDs | 34 |
| 6.3.6 | End product compliance..... | 34 |
| 6.4 | Japan radio equipment compliance | 35 |
| 6.4.1 | Compliance statement..... | 35 |
| 6.4.2 | End product labelling requirement..... | 35 |
| 6.4.3 | End product user manual requirement | 35 |
| 6.5 | NCC Taiwan compliance | 36 |
| 6.5.1 | Taiwan NCC Warning Statement..... | 36 |
| 6.5.2 | ANNA-B112 labeling requirements for end product | 36 |
| 6.6 | KCC South Korea compliance..... | 36 |
| 6.7 | Brazil compliance | 36 |

| | | |
|--------------------------|-------------------------------------------------------------|-----------|
| 6.8 | Australia and New Zealand regulatory compliance | 37 |
| 6.9 | South Africa regulatory compliance | 38 |
| 6.10 | SRRC China Radio Transmission Equipment Type Approval | 38 |
| 6.10.1 | ANNA-B112 labeling requirements for end product | 38 |
| 6.10.2 | ANNA-B112 shielding | 39 |
| 6.11 | Safety compliance | 40 |
| 6.12 | Bluetooth qualification information | 40 |
| 7 | Antennas | 41 |
| 7.1 | Approved antennas | 42 |
| 8 | Product handling | 44 |
| 8.1 | Packaging | 44 |
| 8.2 | Reels | 44 |
| 8.3 | Tapes | 45 |
| 8.4 | Moisture sensitivity levels..... | 46 |
| 8.5 | Reflow soldering | 46 |
| 8.6 | ESD precautions..... | 46 |
| 9 | Marking and ordering information | 47 |
| 9.1 | Product marking..... | 47 |
| 9.2 | Explanation of codes | 48 |
| 9.3 | Ordering information..... | 48 |
| Appendix | | 49 |
| A | Glossary | 49 |
| Related documents | | 50 |
| Revision history | | 51 |
| Contact | | 52 |

1 Functional description

1.1 Overview

ANNA-B112 is an ultra-small, high-performing, standalone Bluetooth low energy module. The System in Package (SiP) module features Bluetooth 5, a powerful Arm® Cortex®-M4 microprocessor with FPU, and state-of-the-art power performance.

ANNA-B112 is delivered with u-connectXpress software that provides support for u-blox Bluetooth low energy Serial Port Service, GATT client and server, beacons, NFC™, and simultaneous peripheral and central roles – all configurable from a host by using AT commands.

The module supports two alternative antenna implementations. Utilize the integrated internal antenna together with an external antenna tuning strip, or optionally connect an external antenna to the available antenna pin during the design-in. Although the reach of external antennas vary, the internal antenna of the module – including the external antenna strip – has a transceiver range of up to 160 m.

ANNA-B112 has full modular approval for Europe (RED), US (FCC), Canada (IC / ISED RSS), Japan (MIC), Taiwan (NCC), South Korea (KCC), Australia / New Zealand (ACMA), Brazil (Anatel), South Africa (ICASA).

1.2 Product features

| | ANNA-B112 | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|-----|
| Grade | | |
| Automotive | | |
| Professional | • | |
| Standard | | |
| Radio | | |
| Chip inside | nRF52832 | |
| Bluetooth qualification | v5.0 | |
| Bluetooth low energy | • | |
| Bluetooth output power EIRP [dBm] * | 5 / 8 | |
| Max range [meters] * | 160 / 190 | |
| NFC | • | |
| Antenna type (see footnotes) | chip / pin | |
| Application software | | |
| u-connectXpress | • | |
| Open CPU for embedded applications | | • |
| Interfaces | | |
| UART | 1 | ◆ |
| SPI | | ◆ |
| I ² C | | ◆ |
| I ² S | | ◆ |
| PDM and PWM | | ◆ |
| GPIO pins | 11 | 25 |
| AD converters [number of bits] | | 12 |
| Features | | |
| AT command interface | • | |
| MCU (see footnotes) | | M4F |
| RAM [kB] | | 64 |
| Flash [kB] | | 512 |
| Simultaneous GATT server and client | • | ◆ |
| Low Energy Serial Port Service | • | |
| Throughput [Mbit/s] | 0.8 | 1.4 |
| Maximum Bluetooth connections | 7 | 20 |
| Bluetooth mesh | | ◆ |
| FOTA | | ◆ |
| * = The different values are for use with internal/external antenna ◆ = Feature enabled by HW. The actual support depends on the open CPU application SW. | | |
| pin = Antenna pin chip = Internal chip antenna M4F = 64 MHz Arm® Cortex-M4 with FPU | | |

Table 1: ANNA-B112 main features summary

1.3 Block diagram

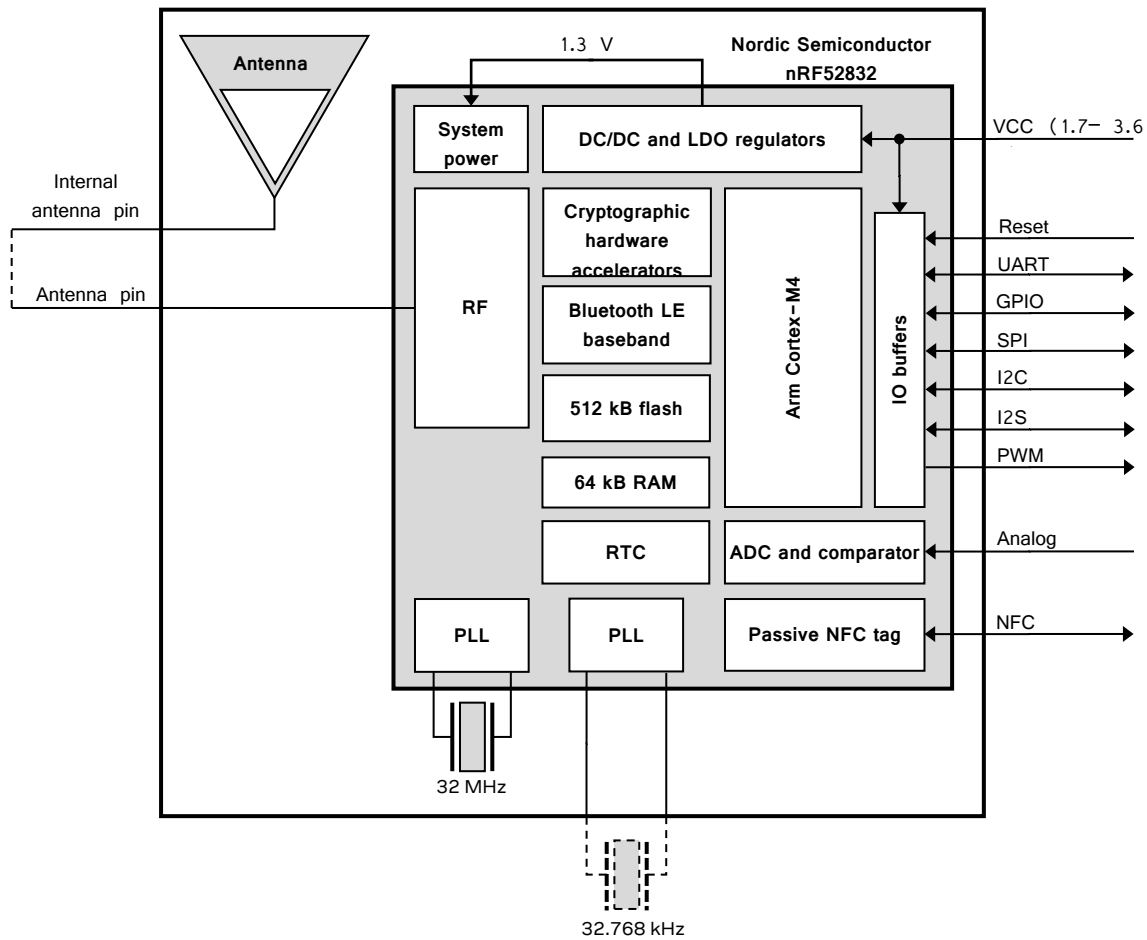


Figure 1: Block diagram of ANNA-B112

The ANNA-B112 SiP module has an integrated antenna. The RF signal pin can either be connected directly to the adjacent antenna pin to use the internal antenna or routed to an external antenna or antenna connector.

The module does not have its own low power oscillator (LPO) and depending on the power supply requirement, you could connect an external LPO crystal or oscillator.

An integrated DC/DC converter is used for higher efficiency under heavy load situations. See also [Module supply input \(VCC\)](#).

1.4 Product description

| Item | ANNA-B112 |
|--------------------------------------------------------|----------------------|
| Bluetooth version | 5.0 |
| Band support | 2.4 GHz, 40 channels |
| Typical conducted output power | +4 dBm |
| Max radiated output power with internal antenna (EIRP) | +5 dBm |
| Max radiated output power with external antenna (EIRP) | +9 dBm |
| Sensitivity (conducted) | -91 dBm |
| Best sensitivity with internal antenna (EIRP) | -92 dBm |
| Best sensitivity with external antenna (EIRP) | -96 dBm |
| Data rates | 1 and 2 Mbps GFSK |
| Module size | 6.5 x 6.5 x 1.2 mm |

Table 2: ANNA-B112 characteristics summary

1.5 Software options

The integrated application processor of the ANNA-B112 module is an Arm Cortex-M4 with FPU that has 512 kB flash memory and 64 kB RAM. The software structure of any program running on the module can be broken down into the following components:

- Radio stack
- Bootloader (optional)
- Application

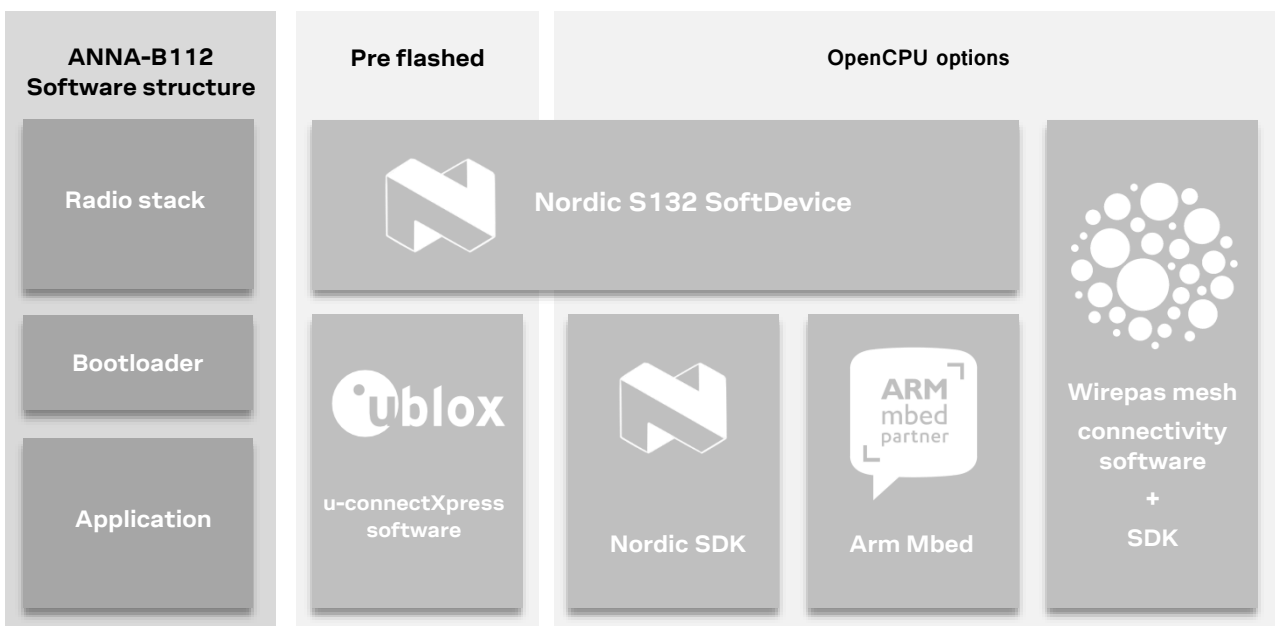


Figure 2: ANNA-B112 software structure and available software options



More information on each option, see also the ANNA-B112 system integration manual [1].

1.5.1 u-connectXpress software

ANNA-B1 is preflashed with u-connectXpress software.

The u-connectXpress software enables the use of the u-blox Low Energy Serial Port Service, controlled by AT commands over the UART interface. You can configure ANNA-B112 modules with AT commands or with the u-blox s-center software. The s-center evaluation software can be downloaded from the u-blox website and is available free of charge.

For information about the features, capabilities, and use of the u-blox Low Energy Serial Port Service, see also the u-connectXpress software user guide [3] and the u-connectXpress AT commands manual [2].

1.5.2 Open CPU

A custom application can be embedded in the ANNA-B112-70B module, or any ANNA-B112 variant, if the module memory is erased first. The supported development environments are described below.

Nordic SDK

The Nordic nRF5 SDK provides a rich and well tested software development environment for nRF52-based devices. It includes a broad selection of drivers, libraries, and example applications.

Arm Mbed OS

Arm Mbed OS is an open-source, embedded operating system designed specifically for the "things" in the "Internet of Things". It includes all features to develop a connected product, including security, connectivity, an RTOS, and drivers for sensors and I/O devices. ANNA-B112 fully supports Mbed OS 5.

Wirepas Mesh stack

ANNA-B112 modules can also be used together with the Wirepas Mesh stack. The stack enables ANNA-B1 to be used in large-scale, mesh environments. The Wirepas mesh stack is a third-party licensed software from Wirepas.

For more information about the Wirepas mesh stack, [contact](#) your local u-blox support team or contact Wirepas directly.

1.6 Bluetooth device address

Each ANNA-B1 module is preprogrammed with a unique 48-bit Bluetooth device address.

2 Interfaces

2.1 Power management

2.1.1 Module supply input (VCC)

ANNA-B112 uses an integrated step-down converter to transform the supply voltage presented at the **VCC** pin into a stable system voltage. As a result, ANNA-B112 modules are compatible for use in battery-powered designs without the use of an additional voltage converter. You can choose one of the following board voltage converter options:

- A low-dropout (LDO) converter
- A DC/DC buck converter

ANNA-B112 automatically switches between these converters to suit the prevailing current consumption. The DC/DC converter is more efficient under high loads when the radio is active, while the LDO converter is better suited for power saving modes. It is possible to configure the module to use only the LDO mode, if needed.

2.2 RF antenna interfaces

2.2.1 2.4 GHz Bluetooth low energy (ANT)

The ANNA-B112 2.4 GHz antenna interface can be implemented in two possible ways:

- With an external antenna or antenna connector: Connect a carrier board or antenna connector to the antenna pin (**ANT**) of the module using a controlled impedance trace. The **ANT** pin has a nominal characteristic impedance of 50 Ω . For more information, see also the ANNA-B112 system integration manual [1].
- With the internal antenna: Connect the internal antenna **ANT_INT** pin to the **ANT** pin to utilize the integrated internal antenna onboard the module. Additionally, connect the **ANT_PCB**, **ANT_GND1** and **ANT_GND2** pins to an external antenna tuning strip, as described in the ANNA-B112 system integration manual [1], Appendix B.

2.2.2 Near Field Communication (NFC)

ANNA-B112 modules include a Near Field Communication interface, capable of operating as a 13.56 MHz NFC tag at a bit rate of 106 kbps. As an NFC tag, data can be read from or written to ANNA-B112 modules using an NFC reader, ANNA-B112 modules are not capable of reading other tags or initiating NFC communications. Two pins are available for connecting to an external NFC antenna: **NFC1** and **NFC2**. For more information about NFC antenna design considerations, see also the ANNA-B112 system integration manual [1].

2.3 Low Power Oscillator interface

During standby mode, ANNA-B112 needs a 32.768 kHz clock source (accuracy +/- 250 ppm or better). Several clock options are available, as shown in Table 3:

| Source | Current consumption | Comment |
|----------------------------------|----------------------|------------------------------------------------------------------------------|
| External 32.768kHz crystal | 300 nA | Connected to the XL1 and XL2 pins. See also Pin definition . |
| Internal RC oscillator | 620 nA + calibration | Needs recalibration every 8 s |
| External 32.768 kHz clock signal | - | Connected to the XL1 pin. See also Pin definition . |

Table 3: Supported low power clock sources for ANNA-B112

For more information about the different 32.768 kHz clock source alternatives, see also the ANNA-B112 system integration manual [1].

2.4 System functions

ANNA-B112 modules are power efficient devices capable of operating in different power saving modes and configurations. Different sections of the module can be powered off when they are not needed, and complex wake-up events can be generated from different external and internal inputs. The radio part of the module operates independently from the CPU.

The two main power saving modes are:

- Standby mode
- Sleep mode

Depending on the application, the module should spend most of its time in sleep mode to conserve battery life.

2.4.1 Module power-on

ANNA-B112 can be switched on in one of the following ways, which causes the module to reboot:

- Rising edge on the VCC pin to a valid supply voltage
- Issuing a reset of the module

A wake-up event from sleep mode to active mode can be issued by:

- Changing the state of any digital I/O pin, which may be enabled /disabled for each pin.

If waking up from standby mode, an event can also be issued by:

- The on-board Real Time Counter (RTC)
- A programmable digital or analog sensor event. For example, rising voltage level on an analog comparator pin

2.4.2 Module power-off

There is no dedicated pin to power off ANNA-B112 modules. You can configure any GPIO pin to enter or exit the [Sleep mode](#), which essentially powers down the module.


An under-voltage (brown-out) shutdown occurs on ANNA-B112 modules when the **VCC** supply drops below the operating range minimum limit. If this occurs, it is not possible to store the current parameter settings in the non-volatile memory of the module. For more information, see also the ANNA-B112 system integration manual [1].

2.4.3 Standby mode

Standby mode is one of the power saving modes that essentially powers down ANNA-B112, but keeps the system RAM intact. It allows for a few low-power digital interfaces (including SPI) and analog functions to run continuously. It also allows for complex, autonomous, power-up events, including periodic RTC events and radio events.

The following events can be used to bring the module out of the standby mode:

- External wake-up events
- Internal wake-up events from RTC, radio, NFC and so on
- Analog or digital sensor event (programmable voltage level or edge detection)

 During standby mode, the module needs a 32.768 kHz clock source. For more information about the different alternatives for the 32.768 kHz clock source, see also [Low Power Oscillator interface](#).

2.4.4 Sleep mode

Sleep mode is the deepest power saving mode of ANNA-B112 modules. During sleep mode, all functionality is stopped to ensure minimum power consumption. The module needs an external event to wake up from sleep mode.

The following events can be used to wake up the module out of the sleep mode:

- External event on a digital pin
- External event on a low power comparator pin
- Detection of NFC field

When using the u-connectXpress software, the module can be manually switched on or off with proper storage of current settings using the UART **DSR** pin.

ANNA-B112 can be programmed to latch the digital values present at its GPIO pins during sleep. The module keeps the values latched, and a change of state on any of these pins triggers a wake up to active mode.

The module always reboots after wake up from the sleep mode; however, different sections of the RAM can be configured to remain intact during and after the entry into sleep mode.


2.4.5 Module reset

ANNA-B112 modules are reset in one of the following ways:

- Applying a low logic level on the **RESET_N** input pin, which is normally pulled high using an internal pull-up resistor. This causes an “external” or “hardware” reset of the module. The prevailing parameter settings are not saved in the non-volatile module memory and a proper network detach is not performed.
- Using the `AT+CPWROFF` command to initiate an “internal” or “software” reset of the module. The current parameter settings are saved in the non-volatile module memory and a proper network detach is performed.

2.4.6 Real Time Counter (RTC)


A key system feature available on the module is the Real Time Counter. This counter can generate multiple interrupts and events to the CPU and radio as well as internal and external hardware blocks. These events can be precisely timed ranging from microseconds up to hours and allow for periodic advertising of Bluetooth LE events without involving the main CPU. The RTC can be operated in power-on and standby modes.


 During standby mode, the module needs a 32.768 kHz clock source. See also [Low Power Oscillator interface](#).

2.5 Serial interfaces

ANNA-B112 modules support the following serial communication interfaces:

- 1x UART interface: 4-wire unbalanced asynchronous serial interface used for AT commands interface, data communication and u-connectXpress software upgrades using the FOAT feature.
- 3x SPI interfaces: Up to three serial peripheral interfaces can be used simultaneously.
- 2x I2C interfaces: Inter-Integrated Circuit (I2C) interface for communication with digital sensors.


 Radio performance parameters such as sensitivity, can be affected by high frequency on some of the digital I/O with large sink/source current. For more information, see also the low frequency pins shown in Table 7.

 All digital interface pins on the module are shared between the digital and analog interfaces and GPIOs. Any function can be assigned to any pin that is not already occupied.

2.5.1 Asynchronous serial interface (UART)


The UART interface supports hardware flow control and baud-rates up to 1 Mbps. Other characteristics of the UART interface are listed below:

- Data lines (RXD as input, TXD as output) and hardware flow control lines (CTS as input, RTS as output) are provided.
- Hardware flow control (default) or no flow control is supported.
- Power saving indication available on the hardware flow control output (CTS line): The line is driven to the OFF state when the module is not ready to accept data signals.
- Programmable baud-rate generator allows most industry standard rates, as well as non-standard rates up to 1 Mbps.
- Frame format configuration:
 - 8 data bits
 - Even or no-parity bit
 - 1 stop bit
- Default frame configuration is 8N1, meaning eight (8) data bits, no (N) parity bit, and one (1) stop bit.

 Radio performance parameters such as sensitivity, can be affected by high frequency on some of the digital I/O with large sink/source current. For more information, see also the low frequency pins shown in Table 7.


2.5.2 Serial peripheral interface (SPI)

ANNA-B112 supports up to three Serial Peripheral Interfaces that can operate in both master and slave mode with a maximum serial clock frequency of 8 MHz in both modes. The SPI interfaces use four signals: **SCLK**, **MOSI**, **MISO** and **CS**. When using the SPI interface in master mode, it is possible to use GPIOs as additional Chip Select (**CS**) signals to allow addressing of multiple slaves.

 Radio performance parameters such as sensitivity, can be affected by high frequency on some of the digital I/O with large sink/source current. For more information, see also the low frequency pins shown in Table 7.

2.5.3 I2C interface

The Inter-Integrated Circuit interfaces can be used to transfer or receive data on a 2-wire bus network. ANNA-B112 modules can operate as both master and slave on the I2C bus using both standard (100 kbps) and fast (400 kbps) transmission speeds. The interface uses the **SCL** signal-to-clock instructions and data on the **SDL** signal.

 Radio performance parameters such as sensitivity, can be affected by high frequency on some of the digital I/O with large sink/source current. For more information, see also the low frequency pins shown in Table 7.


2.5.4 I2S interface

The Inter-IC Sound (I2S) interface can be used to transfer audio sample streams between ANNA-B112 and external audio devices such as codecs, DACs, and ADCs. It supports original I2S and left or right-aligned interface formats in both master and slave mode.

It uses up to five signals:


- Master clock (**MCK**)
- Left right clock or Word clock (**LRCK**)
- Serial clock (**SCK**)
- Serial data in (**SDIN**)
- Serial data out (**SDOUT**)

The Master side of the interface always provides the **LRCK** and **SCK** clock signals, but as an addition ANNA-B112 can supply a **MCK** clock signal in both master and slave mode to provide to external systems that cannot generate their own clock signal. The two data signals - **SDIN** and **SDOUT** allow for simultaneous bi-directional audio streaming. The interface supports 8, 16 and 24-bit sample widths with up to 48 kHz sample rate.

 Radio performance parameters such as sensitivity, can be affected by high frequency on some of the digital I/O with large sink/source current. For more information, see also the low frequency pins shown in Table 7.

2.6 GPIO

ANNA-B112 modules have a versatile pin-out. If left un-configured, there are 25 GPIO pins in total – with no analog or digital interfaces. All digital interfaces or functions must then be allocated to a GPIO pin before use. Eight out of the 25 GPIO pins are analog enabled and can consequently have an analog function allocated to them. Table 4 shows the number of digital and analog functions that can be assigned to a GPIO pin in addition to the serial interfaces.

 The pins dedicated to the NFC antenna function (**NFC1** and **NFC2**) have some limitation when the pins are configured for normal GPIO operation. The pin capacitance is higher on those, and you can expect some increased leakage current between the two pins if they are used in GPIO mode and are driven to different logical values. To save power, the two pins should always be set to the same logical value whenever entering one of the device power saving modes. See also [Digital pins](#).

| Function | Description | Default ANNA pin | Configurable GPIOs |
|------------------------------|---------------------------------------------------------------------------------------------------------------|------------------|--------------------|
| General purpose input | Digital input with configurable edge detection and interrupt generation | | Any |
| General purpose output | Digital output with configurable drive strength, pull-up, pull-down, open-source, open-drain and/or slew rate | | Any |
| Pin disabled | Pin is disconnected from input buffers and output drivers. | All* | Any |
| Timer/ counter | High precision time measurement between two pulses/ Pulse counting with interrupt/event generation | | Any |
| Interrupt/ Event trigger | Interrupt/event trigger to the software application/ Wake up event | | Any |
| ADC input | 8/10/12-bit analog to digital converter | | Any analog |
| Analog comparator input | Compare two voltages, capable of generating wake-up events and interrupts | | Any analog |
| PWM output | Output complex pulse width modulation waveforms | | Any |
| Connection status indication | Indicates if a BLE connection is maintained | BLUE** | Any |

* = If left unconfigured

** = If using the u-connectXpress software

Table 4: GPIO custom functions configuration

2.6.1 PWM

ANNA-B112 modules provide up to 12 independent PWM channels that can be used to generate complex waveforms. These waveforms can be used to control motors, dim LEDs and as audio signals, if connected to speakers. Duty-cycle sequences may be stored in RAM to be chained and looped into complex sequences without CPU intervention. Each channel uses a single GPIO pin as output.

2.7 Analog interfaces

8 of the 25 digital GPIOs can be multiplexed to analog functions. The following analog functions are available for use:

- 1x 8-channel ADC
- 1x Analog comparator*
- 1x Low-power analog comparator*

*Only one of the comparators can be used simultaneously.

2.7.1 ADC

The Analog to Digital Converter (ADC) can sample up to 200 kHz using different inputs as sample triggers. It supports 8/10/12-bit resolution. Any of the 8 analog inputs can be used both as single-ended inputs and as differential pairs for measuring the voltage across them. The ADC supports full 0 V to VCC input range.

2.7.2 Comparator

The comparator compares voltages from any analog pin with different references as shown in Table 5. It supports full 0 V to VCC input range and can generate different software events to the rest of the system.

2.7.3 Low power comparator

The low-power comparator operates in the same way as the normal comparator, with some reduced functionality. It can be used during sleep mode as a wake-up source.

2.7.4 Analog pin options

Table 5 shows the supported connections of the analog functions.



An analog pin may not be simultaneously connected to multiple functions.

| Analog function | Can be connected to |
|--------------------------|------------------------------------------------------|
| ADC single-ended input | Any analog pin or VCC |
| ADC differential input | Any analog pin or VCC pair |
| Comparator IN+ | Any analog pin |
| Comparator IN- | Pin 19 or 20, VCC, 1.2 V, 1.8 V, 2.4 V |
| Low-power comparator IN+ | Any analog pin |
| Low-power comparator IN- | Pin 19 or 20, 1/16 to 15/16 VCC in steps of 1/16 VCC |

Table 5: Possible uses of analog pin

2.8 u-connectXpress software features

This section describes the available features when using the u-connectXpress software. See also the u-connect AT commands manual [2].

2.8.1 u-blox Serial Port Service (SPS)

The serial port service feature enables serial port emulation over Bluetooth low energy.

2.8.2 System status signals

The **RED**, **GREEN** and **BLUE** pins are used to signal the system status according to Table 6. The pins are active low and are intended to be routed to an RGB LED.

| Mode | Status | RGB LED Color | RED | GREEN | BLUE |
|-------------------------------|------------|---------------|------|-------|------|
| Data\Extended Data mode (EDM) | IDLE | Green | HIGH | LOW | HIGH |
| Command mode | IDLE | Orange | LOW | LOW | HIGH |
| EDM/Data mode, Command mode | CONNECTING | Purple | LOW | HIGH | LOW |
| EDM/Data mode, Command mode | CONNECTED* | Blue | HIGH | HIGH | LOW |

* = LED flashes on data activity

Table 6: System status indication

 The CONNECTING and CONNECTED statuses indicate u-blox SPS connections.

2.8.3 System control signals

The following input signals are used to control the system:

- **RESET_N** is used to reset the system. See also [Module reset](#).
- If **SWITCH_2** is driven low during start up, the UART serial settings are restored to their default values.
- **SWITCH_2** can be used to open a Bluetooth LE connection with a peripheral device.
- If both **SWITCH_1** and **SWITCH_2** are driven low during start up, the system will enter the bootloader mode.
- If both **SWITCH_1** and **SWITCH_2** are driven low during start up and held low for 10 seconds, the system will exit the bootloader mode and restore all settings to their factory default.

2.8.4 UART signals

In addition to the normal **RXD**, **TXD**, **CTS**, and **RTS** signals, the u-connectXpress software adds the **DSR** and **DTR** pins to the UART interface. Note that they are not used as originally intended, but to control the state of the ANNA module. For example, depending on the current configuration:

The **DSR** pin can be used to:

- Enter command mode
- Disconnect and/or toggle connectable status
- Enable/disable the rest of the UART interface
- Enter/wake up from sleep mode


The **DTR** pin can be used to indicate:

- The system mode
- If the SPS peers are connected
- If a Bluetooth LE bonded device is connected
- A Bluetooth LE GAP connection

 See the u-connect AT commands manual [2] for more information.

2.8.5 IO signals

When using the u-connectXpress software, 11 module pins can be used for manual, digital read/write operations. These pins can be configured as outputs or inputs, with or without pull-up/pull-down, using AT commands. For more information, see also the u-connect AT commands manual [2].

 In this data sheet, these signals are defined as IO signals to distinguish from the GPIO signals described in [GPIO](#). The IO signals are used with u-connectXpress software only and controlled using AT commands. The GPIO signals, representing hardware functionality, can only be used by writing a custom software application.

2.9 Debug interfaces

2.9.1 SWD

ANNA-B112 series modules provide an SWD interface for flashing and debugging. The SWD interface consists of two pins: **SWDCLK** and **SWDIO**.

2.9.2 Trace – Serial Wire Viewer

A serial trace option will also be available as an additional pin: **SWO**. The Serial Wire Output is used to:


- Support printf style debugging
- Trace OS and application events
- Emit diagnostic system information

A debugger that supports Serial Wire Viewer (SWV) is required. The trace function can be used only when developing a custom application.

3 Pin definition

3.1 Pin assignment open CPU

Figure 3 shows the pin-out of the module in an unconfigured state. Alternatively, you can use the [pin assignment for u-connectXpress software](#).

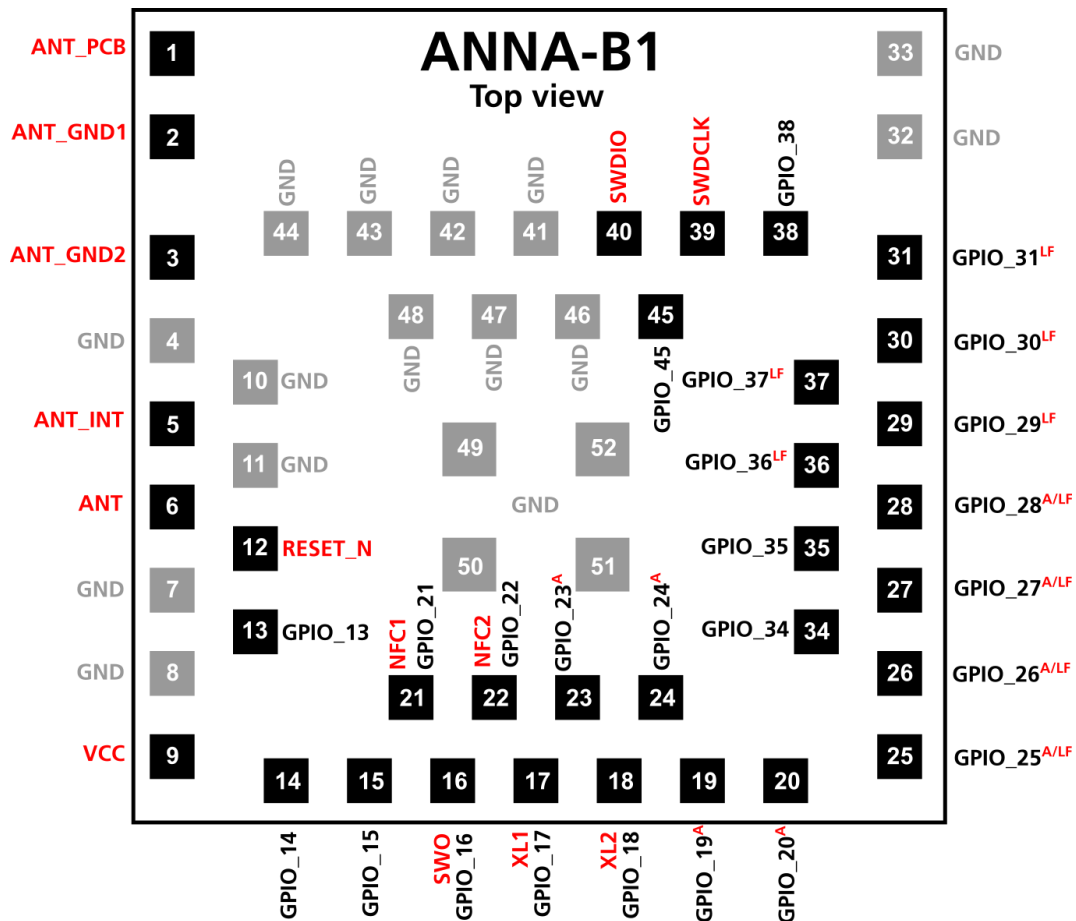

A = Analog function capable pin LF = Low Frequency, low drive I/O only
 Signals that are highlighted in red are locked to a specific pin, the grey pins are GND pins.

Figure 3: ANNA-B112 pin assignment open CPU (top view)

All digital or analog functions described in this data sheet may be freely assigned to any GPIO pin. Analog functions are limited to analog capable pins.

GPIO pins 25–31 and 36–37 are connected to pins located close to the radio part of the RF chip. It is advisable to avoid using these pins for high-speed digital interfaces or sinking/sourcing large currents through them. Doing so can adversely affect RF performance.

Do not apply an NFC field to the NFC pins when they are configured as GPIOs as it can cause permanent damage to the module. When driving different logic levels on these pins in GPIO mode, a small current leakage occurs. Ensure that they are set to the same logic level before entering any power saving modes. See also [Digital pins](#).

| No. | Name | I/O | Description | nRF52 port | Remarks |
|-------|--------------|-----|--------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | ANT_PCB | - | Antenna pattern on carrier board if the module is mounted in a corner. | | Should only be connected if the module is mounted in a corner. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 2 | ANT_GND1 | - | Antenna ground pattern if the module is mounted in the middle of a side. | | Should only be connected if the module is mounted in the middle of a side. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 3 | ANT_GND2 | - | Antenna grounding if the module is mounted in the middle of a side. | | Should only be connected if the module is mounted in the middle of a side. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 4 | GND | - | Ground | | |
| 5 | ANT_INT | - | Feeding to internal antenna of the module. | | Connect to ANT pin if the internal antenna is used. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 6 | ANT | - | Tx/Rx antenna interface. | | 50 Ω nominal characteristic impedance. Connect to ANT pin if the internal antenna is used. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 7-8 | GND | - | Ground | | |
| 9 | VCC | - | Module supply voltage input | | 1.7–3.6 V range |
| 10-11 | GND | - | Ground | | |
| 12 | RESET_N | I/O | System reset input | P0.21 | Active low |
| 13 | GPIO_13 | I/O | General purpose I/O | P0.14 | |
| 14 | GPIO_14 | I/O | General purpose I/O | P0.15 | |
| 15 | GPIO_15 | I/O | General purpose I/O | P0.16 | |
| 16 | SWO/GPIO_16 | I/O | Serial Wire debug trace data output | P0.18 | May be used as a GPIO |
| 17 | XL1 | I/O | Connection for 32.768 kHz crystal (LFXO) | P0.00 | If internal RC-oscillator is used, ground XL1 and XL2. |
| 18 | XL2 | I/O | Connection for 32.768 kHz crystal (LFXO) | P0.01 | If an external clock source is used instead of a crystal: Apply external low swing signal to XL1, ground XL2. Apply external full swing signal to XL1, leave XL2 grounded or unconnected. May be used as a GPIO. |
| 19 | GPIO_19 | I/O | Analog function enabled GPIO | P0.03 | Pin is analog capable |
| 20 | GPIO_20 | I/O | Analog function enabled GPIO | P0.02 | Pin is analog capable |
| 21 | NFC1/GPIO_21 | I/O | NFC pin 1 (default) | P0.09 | May be used as a GPIO |
| 22 | NFC2/GPIO_22 | I/O | NFC pin 2 (default) | P0.10 | May be used as a GPIO |
| 23 | GPIO_23 | I/O | Analog function enabled GPIO | P0.05 | Pin is analog capable |
| 24 | GPIO_24 | I/O | Analog function enabled GPIO | P0.04 | Pin is analog capable |
| 25 | GPIO_25 | I/O | Analog function enabled GPIO | P0.31 | Pin is analog capable. Use as low-drive, low-frequency GPIO only |
| 26 | GPIO_26 | I/O | Analog function enabled GPIO | P0.30 | Pin is analog capable. Use as low-drive, low-frequency GPIO only |
| 27 | GPIO_27 | I/O | Analog function enabled GPIO | P0.29 | Pin is analog capable. Use as low-drive, low-frequency GPIO only |

| No. | Name | I/O | Description | nRF52 port | Remarks |
|-------|---------|-----|-------------------------------------|------------|-------------------------------------------------------------------------|
| 28 | GPIO_28 | I/O | Analog function enabled GPIO | P0.28 | Pin is analog capable. Use as low-drive, low-frequency GPIO only |
| 29 | GPIO_29 | I/O | General purpose I/O | P0.27 | Use as low-drive, low-frequency GPIO only |
| 30 | GPIO_30 | I/O | General purpose I/O | P0.25 | Use as low-drive, low-frequency GPIO only |
| 31 | GPIO_31 | I/O | General purpose I/O | P0.26 | Use as low-drive, low-frequency GPIO only |
| 32-33 | GND | - | Ground | | |
| 34 | GPIO_34 | I/O | General purpose I/O | P0.11 | |
| 35 | GPIO_35 | I/O | General purpose I/O | P0.19 | |
| 36 | GPIO_36 | I/O | General purpose I/O | P0.22 | Use as low-drive, low-frequency GPIO only |
| 37 | GPIO_37 | I/O | General purpose I/O | P0.23 | Use as low-drive, low-frequency GPIO only |
| 38 | GPIO_38 | I/O | General purpose I/O | P0.24 | |
| 39 | SWDCLK | I | Serial Wire Debug port clock signal | | |
| 40 | SWDIO | I/O | Serial Wire Debug port data signal | | |
| 41-44 | GND | - | Ground | | |
| 45 | GPIO_45 | I/O | General purpose I/O | P0.20 | |
| 46-48 | GND | - | Ground | | |
| 49-52 | EGP | - | Exposed Ground Pins | | The exposed pins in the center of the module should be connected to GND |

Table 7: ANNA-B112 pin-out open CPU

3.2 Pin assignment in u-connectXpress software

Figure 4 shows the pin-out and pin configuration used in u-connectXpress software.

Figure 4 and Table 8 reflect the latest u-connectXpress software version only.

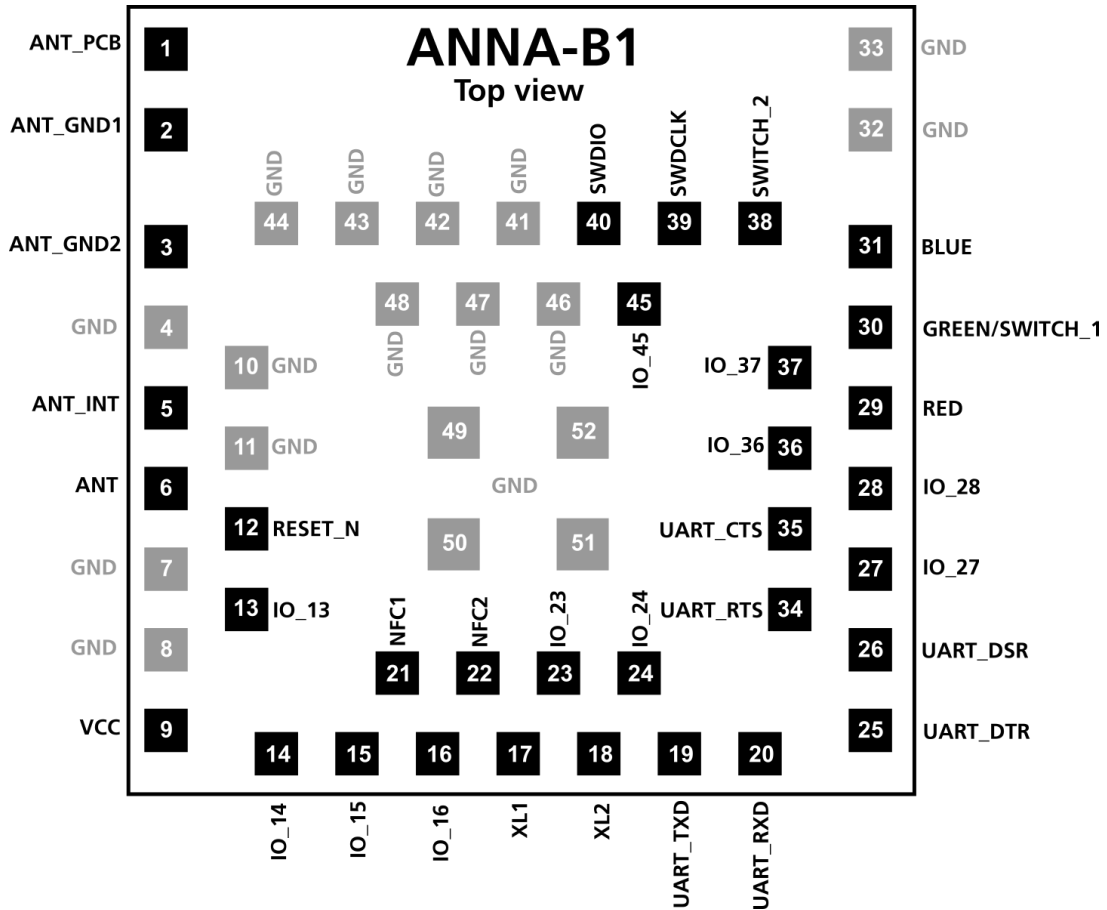


Figure 4: ANNA-B112 pin assignment (top view) applicable for u-connectXpress software. The grey pins are GND pins.

This pin layout must be followed when using u-connectXpress software. No additional interfaces can be added.

| No. | Name | I/O | Description | Remarks |
|-------|----------------|-----|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | ANT_PCB | - | Antenna pattern on carrier board if the module is mounted in a corner. | Should only be connected if the module is mounted in a corner. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 2 | ANT_GND1 | - | Antenna ground pattern if the module is mounted in the middle of a side. | Should only be connected if the module is mounted in the middle of a side. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 3 | ANT_GND2 | - | Antenna grounding if the module is mounted in the middle of a side. | Should only be connected if the module is mounted in the middle of a side. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 4 | GND | - | Ground | |
| 5 | ANT_INT | - | Feeding to internal antenna of the module. | Connect to ANT pin if the internal antenna is used. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 6 | ANT | - | Tx/Rx antenna interface. | 50 Ω nominal characteristic impedance. Connect to ANT pin if the internal antenna is used. See also 2.4 GHz Bluetooth low energy (ANT) . |
| 7-8 | GND | - | Ground | |
| 9 | VCC | - | Module supply voltage input | 1.7-3.6 V range. |
| 10-11 | GND | - | Ground | |
| 12 | RESET_N | I | System reset input | Active low |
| 13 | IO_13 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 14 | IO_14 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 15 | IO_15 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 16 | IO_16 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 17 | XL1 | - | Connection for 32.768 kHz crystal (LFXO) | If internal RC-oscillator is used, ground XL1 and XL2. |
| 18 | XL2 | - | Connection for 32.768 kHz crystal (LFXO) | If an external clock source is used instead of a crystal: Apply external low swing signal to XL1, ground XL2. Apply external full swing signal to XL1, leave XL2 grounded or unconnected. |
| 19 | UART_TXD | O | UART data output | |
| 20 | UART_RXD | I | UART data input | |
| 21 | NFC1 | I/O | NFC pin 1 | |
| 22 | NFC2 | I/O | NFC pin 2 | |
| 23 | IO_23 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 24 | IO_24 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 25 | UART_DTR | O | UART data terminal ready signal | Used to indicate system status |
| 26 | UART_DSR | I | UART data set ready signal | Used to change system modes |
| 27 | IO_27 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 28 | IO_28 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 29 | RED | O | RED system status signal | Active low, should be routed to an RGB LED |
| 30 | GREEN/SWITCH_1 | I/O | This signal is multiplexed: GREEN: System status signal. SWITCH_1: Multiple functions | Active low. GREEN: Should be routed to an RGB LED. SWITCH_1: See also System control signals . |
| 31 | BLUE | O | BLUE system status signal | Active low, should be routed to an RGB LED |
| 32-33 | GND | - | Ground | |

| No. | Name | I/O | Description | Remarks |
|-------|----------|-----|-------------------------------------|-------------------------------------------------------------------------|
| 34 | UART_RTS | O | UART request to send control signal | Used only when hardware flow control is enabled |
| 35 | UART_CTS | I | UART clear to send control signal | Used only when hardware flow control is enabled |
| 36 | IO_36 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 37 | IO_37 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 38 | SWITCH_2 | I | Multiple functions | Active low. See also System control signals . |
| 39 | SWDCLK | I | Serial Wire Debug port clock signal | |
| 40 | SWDIO | I/O | Serial Wire Debug port data signal | |
| 41-44 | GND | - | Ground | |
| 45 | IO_45 | I/O | u-connectXpress software IO pin | Can be used for manual digital I/O |
| 46-48 | GND | - | Ground | |
| 49-52 | EGP | - | Exposed Ground Pins | The exposed pins in the center of the module should be connected to GND |

Table 8: ANNA-B112 and u-connectXpress software pin-out

4 Electrical specifications

Stressing the device above one or more of the ratings listed in the [Absolute maximum ratings](#) can cause permanent damage. These are stress ratings only. Operating the module at these or at any conditions other than those specified in the [Operating conditions](#) should be avoided. Exposure to absolute maximum rating conditions for extended periods can affect device reliability.

Operating condition ranges define those limits within which the functionality of the device is guaranteed. Where application information is given, it is advisory only and does not form part of the specification.

4.1 Absolute maximum ratings

| Symbol | Description | Condition | Min | Max | Unit |
|--------|---------------------------|-------------------------------|------|-----|------|
| VCC | Module supply voltage | Input DC voltage at VCC pin | -0.3 | 3.9 | V |
| P_ANT | Maximum power at receiver | Input RF power at antenna pin | | +10 | dBm |

Table 9: Absolute maximum ratings

The product is not protected against overvoltage or reversed voltages. If necessary, voltage spikes exceeding the power supply voltage specification, given in table above, must be limited to values within the specified boundaries by using appropriate protection devices.

4.1.1 Maximum ESD ratings

| Parameter | Min | Typical | Max | Unit | Remarks |
|---------------------------------------------|-----|---------|-----|------|-----------------------------------------------|
| ESD sensitivity for all pins except ANT pin | | | 2 | kV | Human body model according to JEDEC JS001 |
| | | | 500 | V | Charged device model according to JESD22-C101 |
| ESD indirect contact discharge | | | ±8* | kV | According to EN 301 489-1 |

*Tested on EVK-ANNA-B1

Table 10: Maximum ESD ratings

ANNA-B112 modules are Electrostatic Sensitive Devices and require special precautions while handling. See also [ESD precautions](#).

4.2 Operating conditions

Unless otherwise specified, all operating condition specifications are at an ambient temperature of 25°C and a supply voltage of 3.3 V.

Operation beyond the specified operating conditions is not recommended and extended exposure beyond them may affect device reliability.

4.2.1 Operating temperature range

| Parameter | Min | Max | Unit |
|-----------------------|-----|-----|------|
| Storage temperature | -40 | +85 | °C |
| Operating temperature | -40 | +85 | °C |

Table 11: Temperature range

4.2.2 Supply/Power pins

| Symbol | Parameter | Min | Typ | Max | Unit |
|------------|---------------------------------------------|-----|-----|-----|------|
| VCC | Input supply voltage | 1.7 | 3.0 | 3.6 | V |
| t_RVCC | Supply voltage rise time | | | 60 | ms |
| VCC_ripple | VCC input noise peak to peak, 10–100 KHz | | | 100 | mV |
| | VCC input noise peak to peak, 100 KHz–1 MHz | | | 50 | mV |
| | VCC input noise peak to peak, 1–3 MHz | | | 25 | mV |

Table 12: Input characteristics of voltage supply pins

4.2.3 Current consumption

Table 13 shows the typical current consumption of the ANNA-B112 module at 3.0 V and DCDC.

| Condition | Typ | Max |
|------------------------------------------------------------------------------------|--------|-----|
| No clocks running, no RAM data retention | 300 nA | |
| No clocks running, 64 kB RAM data retention | 620 nA | |
| RTC and 64 kB RAM data retention. System running on 32.768 kHz clock from crystal. | 2.2 µA | |
| CPU running benchmarking tests @ 64 MHz clock speed, all interfaces idle | 3.7 mA | |
| Radio RX only | 5.4 mA | |
| Radio TX only, +0dBm output power | 5.3 mA | |

Table 13: Module VCC current consumption

Table 14 shows the current consumption during some typical use cases when using the u-connectXpress software 2.0.0 and an external 32.768 kHz crystal unless specified otherwise:

| Mode | Condition | 3.3 V VCC | | 1.8 V VCC | |
|---------|--------------------------------------------------------------------------------------------------------------------------------------|-----------|--------|-----------|--------|
| | | Average | Peak | Average | Peak |
| Active | Advertising 1s periods with +4 dBm output power and 31 bytes payload, CPU and UART interface is running | 1.3 mA | 12 mA | 1.9 mA | 20 mA |
| Standby | Advertising 1s periods with +4 dBm output power and 31 bytes payload, <i>external 32.768 kHz crystal</i> | 26 µA | 9.3 mA | 34 µA | 16 mA |
| Standby | Advertising 1s periods with +4 dBm output power and 31 bytes payload, <i>internal RC-oscillator and 4s calibration period</i> | 32 µA | 9.3 mA | 40 µA | 16 mA |
| Standby | One advertisement event (4.7 ms), +4 dBm output power and 31 bytes payload | 3.4 mA | 9.3 mA | 5.1 mA | 16 mA |
| Active | Connected as peripheral, connection events 30 ms periods, +4 dBm output power and 0 bytes payload, CPU and UART interface is running | 1.4 mA | 12 mA | 2.0 mA | 20 mA |
| Standby | Connected as peripheral, connection events 30 ms periods, +4 dBm output power and 0 bytes payload | 120 µA | 9.3 mA | 150 µA | 16 mA |
| Sleep | UART DSR pin is used to enter sleep mode. No RAM retention | 300 nA | 2.3 mA | 300 nA | 2.3 mA |

Table 14: Current consumption during typical use cases


4.2.4 RF performance

| Parameter | Test condition | Min | Typ | Max | Unit |
|----------------------------|--------------------|-----|-----|-----|------|
| Receiver input sensitivity | Conducted at 25 °C | | -91 | | dBm |
| Output power | Conducted at 25 °C | | +4 | | dBm |

Table 15: RF performance

4.2.5 ANNA-B112 radiation patterns

The antenna radiation test set-up utilizes the reference design based on evaluation board with ANNA-B112 situated in the corner of the board, EVK-ANNA-B112C. For more information, see also the ANNA-B112 system integration manual [1].

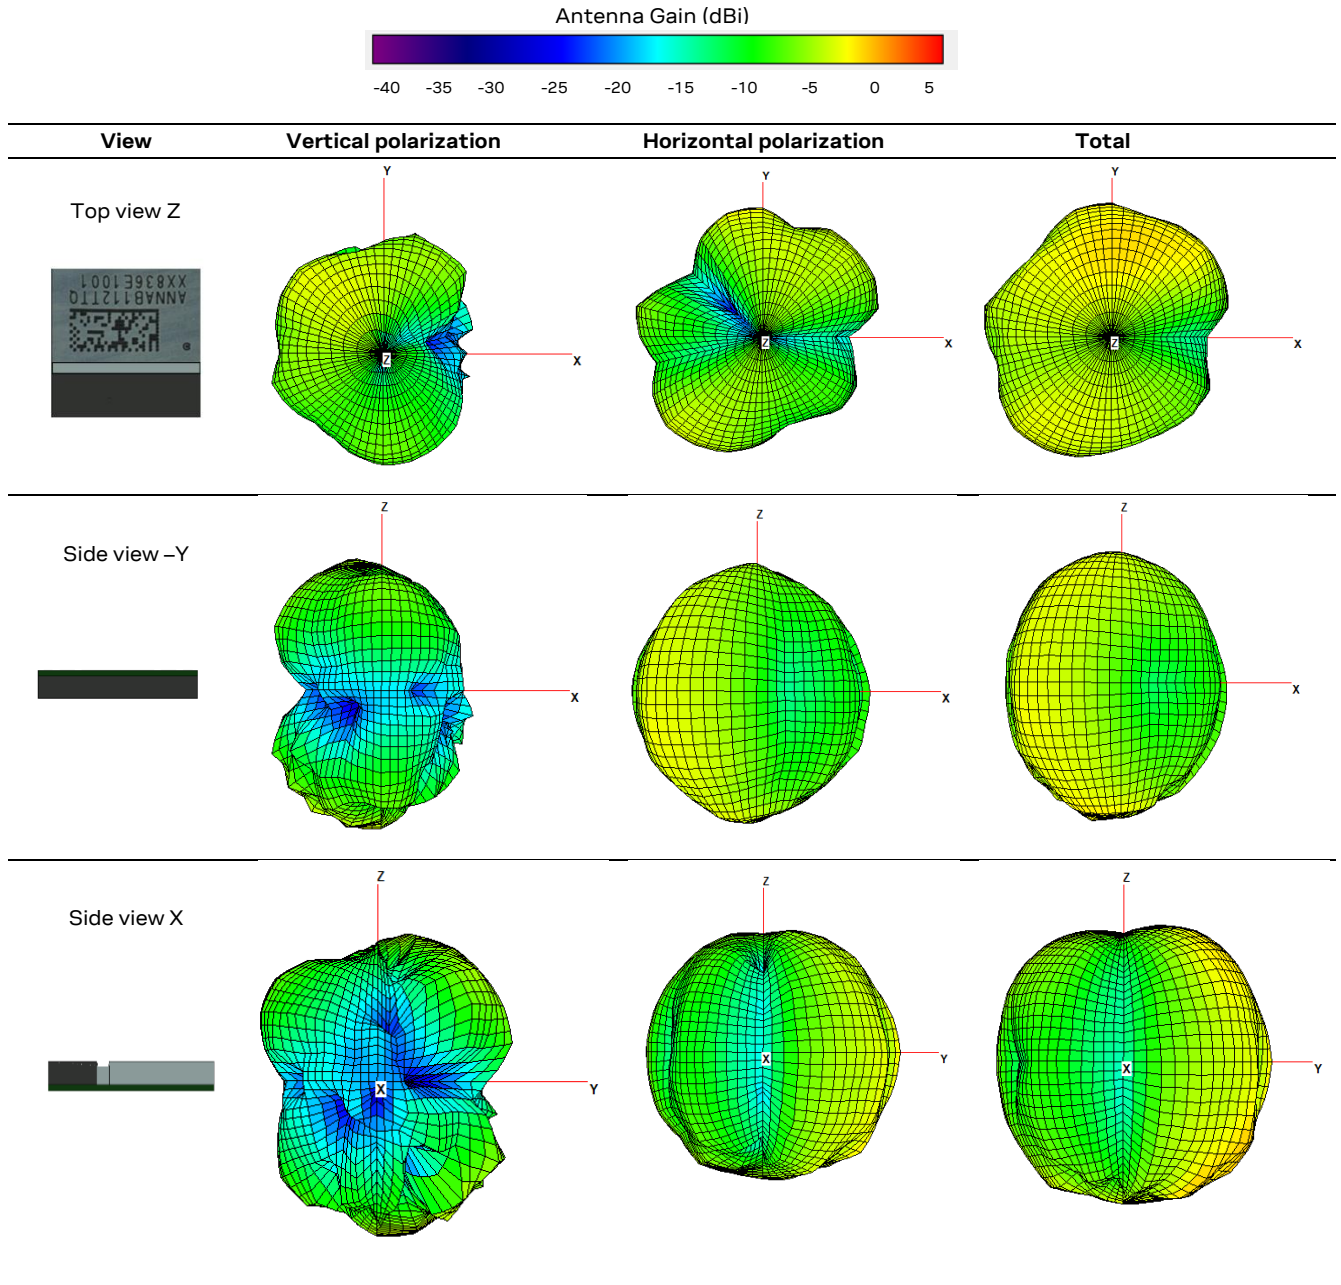

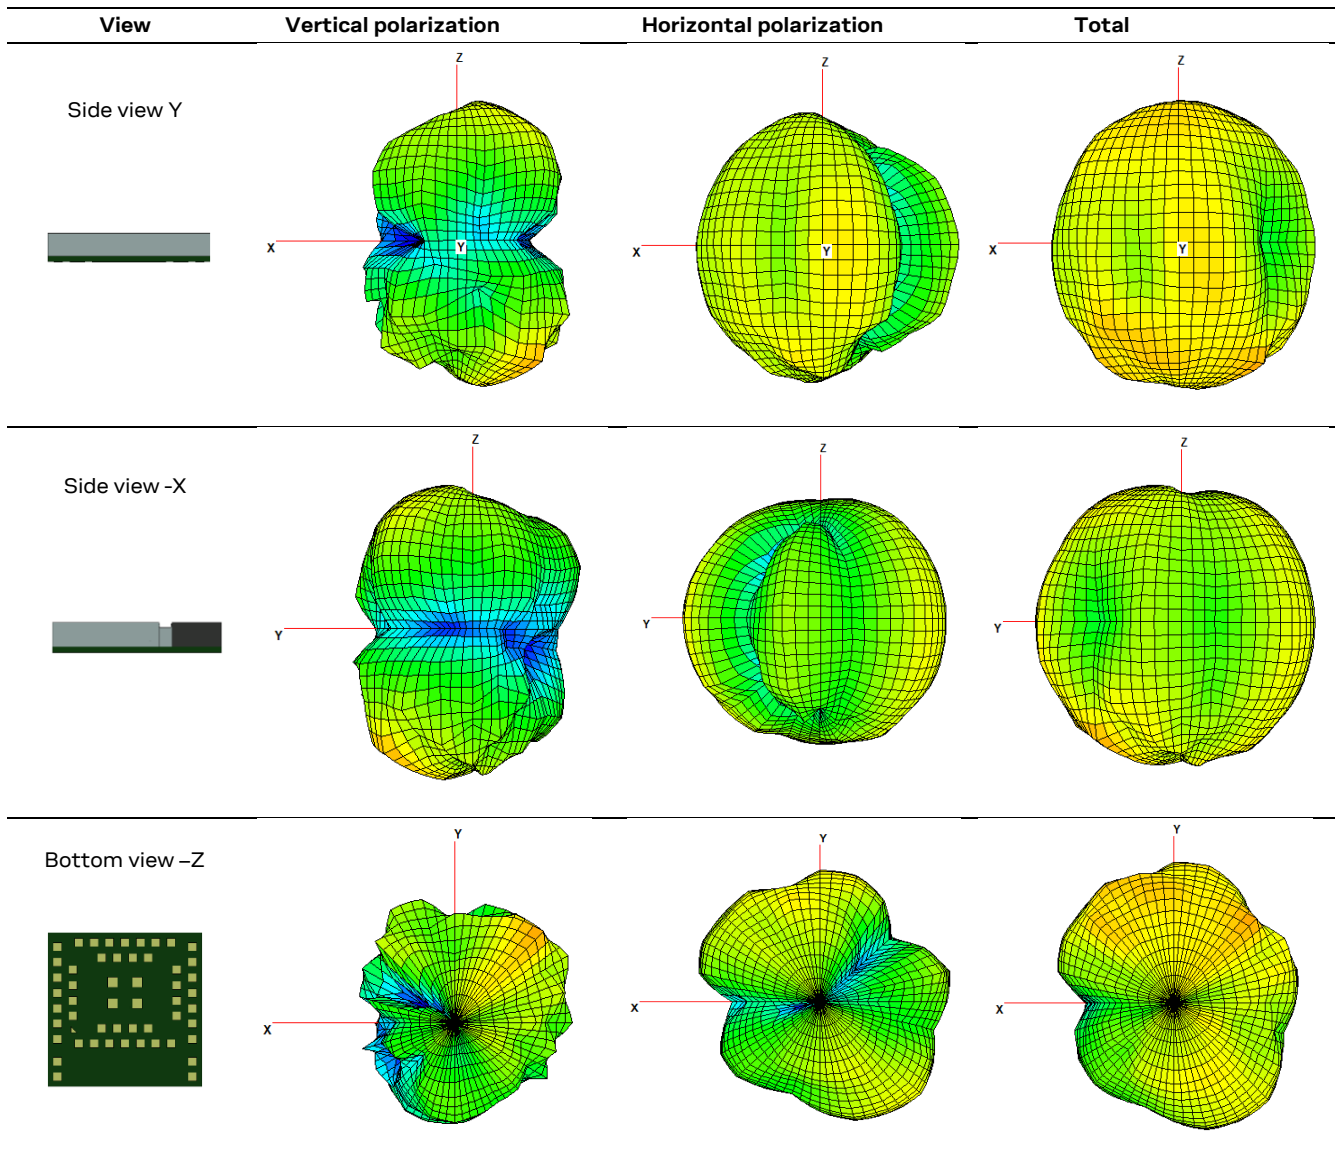


Table 16: Antenna radiation patterns

4.2.6 RESET_N pin

| Pin name | Parameter | Min | Typ | Max | Unit | Remarks |
|----------|-----------------------------|-----|-----|---------|------|------------------------------------|
| RESET_N | Low-level input | 0 | | 0.3*VCC | V | |
| | Internal pull-up resistance | | 13 | | kΩ | |
| | RESET duration | | | 55 | ms | Time taken to release a pin reset. |

Table 17: RESET_N pin characteristics


4.2.7 Digital pins

| Pin name | Parameter | Min | Typ | Max | Unit | Remarks |
|-------------------------------------------|---------------------------------------------|---------|-----|---------|------|------------------------------------------|
| Any digital pin | Input characteristic: Low-level input | 0 | | 0.3*VCC | V | |
| | Input characteristic: high-level input | 0.7*VCC | | VCC | V | |
| | Output characteristic: Low-level output | 0 | | 0.4 | V | Normal drive strength |
| | | 0 | | 0.4 | V | High drive strength |
| | Output characteristic: High-level output | VCC-0.4 | | VCC | V | Normal drive strength |
| | | VCC-0.4 | | VCC | V | High drive strength |
| | Pull-up resistance | 11 | 13 | 16 | kΩ | |
| Pull-down resistance | 11 | 13 | 16 | kΩ | | |
| Any digital pin except IO_28 and IO_29 | Pin capacitance | | 3 | | pF | |
| IO_28 and IO_29 | Leakage current | | 2 | 10 | μA | When driven to different logic levels |
| | Pin capacitance | | 4 | | pF | |

Table 18: Digital pin characteristics

5 Mechanical specifications

Figure 5 shows the mechanical outline of the ANNA-B112 package.

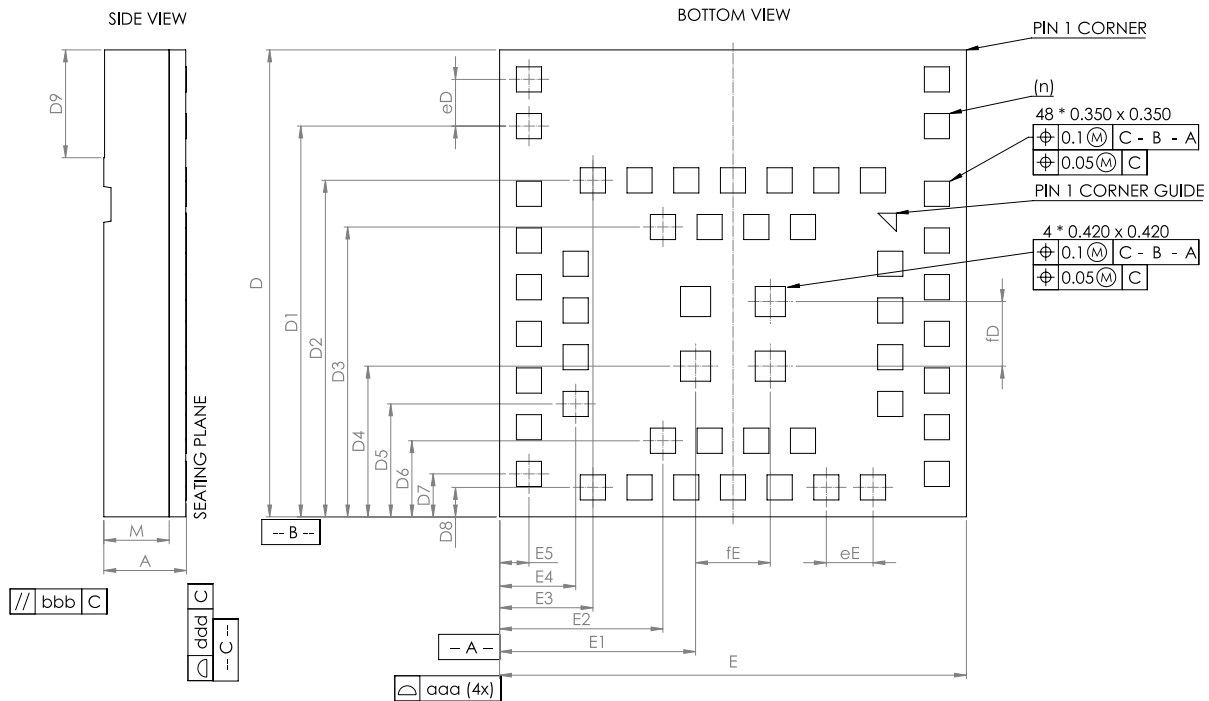

| Description | Symbol | Dimensions (mm) | Tolerance (mm) |
|------------------------|--------|-----------------|----------------|
| Package | PIM | | |
| Width | E | 6.500 | ± 0.100 |
| Length | D | 6.500 | ± 0.100 |
| Outer Pitch | eE | 0.650 | |
| Outer Pitch | eD | 0.650 | |
| Inner Pitch | fE | 1.040 | |
| Inner Pitch | fD | 0.900 | |
| Total thickness | A | 1.150 | ± 0.100 |
| Mold thickness | M | 0.210 | |
| | D1 | 2.730 | |
| | D2 | 2.730 | |
| | D3 | 1.300 | |
| | D4 | 1.060 | |
| | D5 | 0.410 | |
| | D6 | 5.440 | |
| | D7 | 4.685 | |
| | D8 | 4.035 | |
| | D9 | 2.035 | |
| | D10 | 1.573 | |
| | D11 | 1.060 | |
| | D12 | 0.598 | |
| | D13 | 0.410 | |
| Antenna Area | D9 | 1.50 | |
| Lead Count | n | 52 | |
| Package Edge Tolerance | aaa | 0.100 | |
| Mold Flatness | bbb | 0.100 | |
| Coplanarity | ddd | 0.100 | |

Figure 5: ANNA-B112 mechanical specifications

6 Qualification and approvals

6.1 Country approvals

The ANNA-B112 module series is certified for use in the following countries/regions:

- Europe (ETSI RED)
- US (FCC/CFR 47 part 15 unlicensed modular transmitter approval)
- Canada (IC/ISED RSS)
- Japan (MIC)
- Taiwan (NCC)
- South Korea (KCC)
- Australia / New Zealand (ACMA)
- Brazil (Anatel)
- South Africa (ICASA)
- China (SRRRC)

See the following sections for additional information.

6.2 European Union regulatory compliance

Information about regulatory compliance of the European Union for ANNA-B112 modules is available in the ANNA-B112 declaration of conformity [4].

6.2.1 Radio Equipment Directive (RED) 2014/53/EU

ANNA-B112 modules comply with the essential requirements and other relevant provisions of Radio Equipment Directive (RED) 2014/53/EU.


6.2.2 Compliance with the RoHS directive

ANNA-B112 modules comply with the "Directive 2015/863/EU" of the European Parliament and the Council on the Restriction of Use of certain Hazardous Substances in Electrical and Electronic Equipment" (RoHS).

6.3 FCC and IC Compliance

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Caution

-  Any changes or modification NOT explicitly APPROVED by u-blox AG may cause the module to cease to comply with FCC rules part 15 thus void the user's authority to operate the equipment.

FCC compliance

ANNA-B112 modules are for OEM integrations only. The end product must be professionally installed in such manner that only the authorized antennas can be used.

For ANNA-B112 three variants of antenna reference designs are available and one of these must be followed to comply with the ANNA-B112 FCC/IC modular approval (see ANNA-B112 system integration manual). Two of the reference designs show different variants of implementing internal antenna and one describes how to implement external antenna connector (U.FL. connector).

6.3.1.1 FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6.3.2 RF-exposure statement

6.3.2.1 IC Compliance

This equipment complies with the requirements of IC RSS-102 issue 5 radiation exposure limits set forth for an uncontrolled environment.

Having a separation distance of minimum 10 mm between the user and/or bystander and the antenna and /or radiating element ensures that the output power (e.i.r.p.) of ANNA-B112 is below the SAR evaluation Exemption limits defined in RSS-102 issue 5.


6.3.2.2 FCC Compliance

This device complies with the FCC radiation exposure limits set forth for an uncontrolled environment.

The maximum output power of ANNA-B112 is below the SAR test exclusion limits presented in KDB 447498 D01v06 applicable for separation distances between 0 mm and 5 mm. Therefore, SAR evaluation is not needed.

6.3.3 End product user manual instructions


6.3.3.1 IC Compliance

-  User manuals for license-exempt radio apparatus shall contain the following text, or an equivalent notice that shall be displayed in a conspicuous location, either in the user manual or on the device, or both:

"This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and*
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. "*

Under Industry Canada regulations, this radio transmitter can only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be chosen in such a way that the equivalent isotropically radiated power (e.i.r.p.) is not more than that is necessary for successful communication.

-  Le manuel d'utilisation des appareils radio exempts de licence doit contenir l'énoncé qui suit, ou l'équivalent, à un endroit bien en vue dans le manuel d'utilisation ou sur l'appareil, ou encore aux deux endroits:

"Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;*
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. "*

Conformément aux réglementations d'Industry Canada, cet émetteur radio ne peut fonctionner qu'à l'aide d'une antenne dont le type et le gain maximal (ou minimal) ont été approuvés pour cet émetteur par Industry Canada. Pour réduire le risque d'interférences avec d'autres utilisateurs, il faut choisir le type d'antenne et son gain de telle sorte que la puissance isotrope rayonnée équivalente (p.i.r.e) ne soit pas supérieure à celle requise pour obtenir une communication satisfaisante.

6.3.4 End product labeling requirements

6.3.4.1 IC Compliance

The host product shall be properly labelled to identify the modules within the host product. The Innovation, Science and Economic Development Canada certification label of a module shall be clearly visible at all times when installed in the host product; otherwise, the host product must be labelled to display the Innovation, Science and Economic Development Canada certification number for the module, preceded by the word "Contains" or similar wording expressing the same meaning, as shown in Figure 6.

Le produit hôte devra être correctement étiqueté, de façon à permettre l'identification des modules qui s'y trouvent.

L'étiquette d'homologation d'un module d'Innovation, Sciences et Développement économique Canada devra être posée sur le produit hôte à un endroit bien en vue, en tout temps. En l'absence d'étiquette, le produit hôte doit porter une étiquette sur laquelle figure le numéro d'homologation du module d'Innovation, Sciences et Développement économique Canada, précédé du mot « contient », ou d'une formulation similaire allant dans le même sens et qui va comme suit:

This device contains
 FCC ID: XPYANNAB1
 IC: 8595A-ANNAB1

Figure 6: Example of an end product label

6.3.4.2 FCC Compliance

For an end product that uses the ANNA-B112 module, there must be a label containing, at least, the information shown in Figure 6.

The label must be affixed on an exterior surface of the end product such that it will be visible upon inspection in compliance with the modular approval guidelines developed by the FCC.



In accordance with 47 CFR § 15.19, the end product shall bear the following statement in a conspicuous location on the device:

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation."*

When the device is so small or for such use that it is not practicable to place the statement above on it, the information shall be placed in a prominent location in the instruction manual or pamphlet supplied to the user or, alternatively, shall be placed on the container in which the device is marketed.

In case, where the final product will be installed in locations where the end-user is not able to see the FCC ID and/or this statement, the FCC ID and the statement shall also be included in the end product manual.

6.3.5 FCC and IC IDs

| Model | FCC ID | ISED certification number |
|-----------|-----------|---------------------------|
| ANNA-B112 | XPYANNAB1 | 8595A-ANNAB1 |

Table 19: FCC and ISED certification number for the ANNA-B112 module

6.3.6 End product compliance

6.3.6.1 General requirements

- Any changes to hardware, hosts or co-location configuration may require new radiated emission and SAR evaluation and/or testing.
- Only authorized antenna(s) may be used.
- Any notification to the end user about how to install or remove the integrated radio module is NOT allowed.

- The modular transmitter approval of ANNA-B112 does not exempt the end product from being evaluated against applicable regulatory demands. The evaluation of the end product shall be performed with the ANNA-B112 module installed and operating in a way that reflects the intended end product use case. The upper frequency measurement range of the end product evaluation is the 5th harmonic of 2.4 GHz as declared in 47 CFR Part 15.33 (b)(1).
- The following requirements apply to all products that integrate a radio module:
 - Subpart B - UNINTENTIONAL RADIATORS
To verify that the composite device of host and module complies with the requirements of FCC part 15B the integrator shall perform sufficient measurements using ANSI 63.4-2014.
 - Subpart C - INTENTIONAL RADIATORS
It is required that the integrator carry out sufficient verification measurements using ANSI 63.10-2013 to validate that the fundamental and out of band emissions of the transmitter part of the composite device complies with the requirements of FCC part 15C.
- When the items listed above are fulfilled the host manufacturer can use the authorization procedures presented in Table 1 of 47 CFR Part 15.101.

6.3.6.2 Co-location (simultaneous transmission)

If the module is to be co-located with another transmitter, additional measurements for simultaneous transmission are required.

6.4 Japan radio equipment compliance

6.4.1 Compliance statement

The ANNA-B112 module complies with the Japanese Technical Regulation Conformity Certification of Specified Radio Equipment (ordinance of MPT N°. 37, 1981), Article 2, Paragraph 1:


- Item 19 "2.4 GHz band wide band low power data communication system".

6.4.2 End product labelling requirement

When a product integrating a ANNA-B112 series module is placed on the Japanese market the product must be affixed with a label with the "Giteki" marking as shown in Figure 7. The marking must be visible for inspection.



Figure 7: Giteki mark, **R** and the ANNA-B112 MIC certification number

 The required minimum size of the Giteki mark is Ø3.0 mm.

6.4.3 End product user manual requirement

As the MIC ID is not included on the ANNA-B112 marking, the end product manufacturer must include a copy of the ANNA-B112 Japan Radio Certificate to the end product technical documentation.

6.5 NCC Taiwan compliance

6.5.1 Taiwan NCC Warning Statement

- 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Statement translation:

- Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices.
- The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

6.5.2 ANNA-B112 labeling requirements for end product

When a product integrated with an ANNA-B112 module is placed on the Taiwan market, the product must be affixed with a label marking as shown below. The label can use wording such as the following:

Contains Transmitter Module

內含發射器模組:  CCAI18LP2200T2


or any similar wording that expresses the same meaning may be used. The marking must be visible for inspection.

6.6 KCC South Korea compliance

The ANNA-B112 series modules are certified by the Korea Communications Commission (KCC).

When a product containing an ANNA-B112 module is placed on the South Korean market, the product must be affixed with a label or marking containing the KCC logo and certification number as shown in the figure below. This information must also be included in the product user manuals.

 R-C-ULX-ANNA-B112

 The height of the KCC logo must be at least 5 mm.

6.7 Brazil compliance

When a product containing ANNA-B1 module is placed on the Brazilian market, the product must be affixed with a label or marking containing the Anatel logo, ANNA-B1 Homologation number: 03850-19-05903 and a statement claiming that the device may not cause harmful interference but must accept it (Resolution No 506).



“Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.”

Statement translation:

“This equipment operates on a secondary basis and, consequently, must accept harmful interference, including from stations of the same kind, and may not cause harmful interference to systems operating on a primary basis.”

When the device is so small or for such use that it is not practicable to place the statement above on it, the information shall be placed in a prominent location in the instruction manual or pamphlet supplied to the user or, alternatively, shall be placed on the container in which the device is marketed.

In case, where the final product will be installed in locations where the end user is unable to see the Anatel logo, ANNA-B1 Homologation number and/or this statement, the Anatel logo, ANNA-B1 Homologation number, and the statement shall also be included in the end product manual.

6.8 Australia and New Zealand regulatory compliance



The ANNA-B1 module is compliant with the standards made by the Australian Communications and Media Authority (ACMA).

The modules are compliant with AS/NZS 4268:2012 standard – Radio equipment and systems – Short range devices – Limits and methods of standard measurement. The test reports of ANNA-B1 module can be used as part of the product certification and compliance folder. For more information on the test reports, [contact](#) your local support team

To meet overall Australian and/or New Zealand end product compliance, the integrator must create a compliance folder containing all the relevant compliance test reports such as RF, EMC, electrical safety and DoC (Declaration of Conformity) and so on. It is the responsibility of the integrator to know what is required in the compliance folder for ACMA compliance.

For more information on Australia compliance, refer to the Australian Communications and Media Authority web site <http://www.acma.gov.au/>.

For more information on New Zealand compliance, refer to the New Zealand Radio Spectrum Management Group web site www.rsm.govt.nz.

6.9 South Africa regulatory compliance

The ANNA-B1 modules are compliant and certified by the Independent Communications Authority of South Africa (ICASA). End products that are made available for sale or lease or is supplied in any other manner in South Africa shall have a legible label permanently affixed to its exterior surface. The label shall have the ICASA logo and the ICASA issued license number as shown in the figure below. The minimum width and height of the ICASA logo shall be 3 mm.


The approval labels must be purchased by the customer's local representative directly from the approval authority ICASA. A sample of a NINA-B1 ICASA label is included below:



More information on registration as a Responsible Integrator and labeling requirements is found at the following website:

Independent Communications Authority of South Africa (ICASA) web site - <https://www.icasa.org.za>

6.10 SRRC China Radio Transmission Equipment Type Approval

 The SRRC modular approval for ANNA-B112 is only valid when using the internal antenna.

In accordance with the provisions on the Radio Regulations of the People's Republic of China, the ANNA-B112 module with the product name ANNA-B112 conforms to the provisions with its CMIIT

ID:

2021DJ6698

6.10.1 ANNA-B112 labeling requirements for end product

The following requirements apply for end products that are sold in China:

- Label with CMIIT ID number of the module is required to be placed on the end product.
- The following statement must be included in Chinese in the Chinese user manual:

本设备包含型号核准代码(分别)为: CMIIT ID: 2021DJ6698的无线电发射模块。

6.10.2 ANNA-B112 shielding

Figure 8 shows the shielding and cover areas of ANNA-B112, which includes an antenna area and shield cover area. The RF unit of ANNA-B112 is located under the shield cover.

如下图中绿色和橘黄色方框部分所，ANNA-B112由两部分组成: 天线区域和屏蔽罩区域。ANNA-B112的射频元器件位于该模块的屏蔽罩下方。

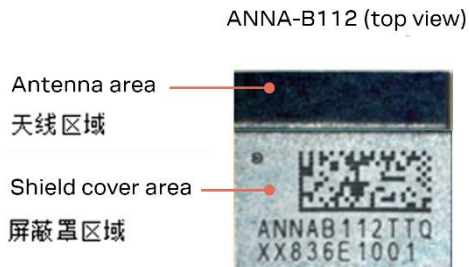


Figure 8: ANNA-B112 shielding and cover areas

Figure 9 shows the shield cover of ANNA-B112 SiP shield its RF unit through its three parts:

- Metal coating (red)
- Metal fence at the border between the shield area and antenna area (purple)
- PCB traces exposed to three edges except for the metal fence side of the shield cover area of the module (blue).

All three parts are connected to GND of the ANNA-B112 module.

如下图所示，ANNA-B112的屏蔽罩是通过三个部分把该模块的射频元器件完全屏蔽起来的：金属图层（图中红色部分）、金属栅栏（图中紫色部分）以及暴露在ANNA-B112模块的屏蔽罩区域除了金属栅栏侧的其他三个边缘的PCB走线（图中浅蓝色部分）。所有的这三个部分都是跟ANNA-B112模块的GND连接起来的。

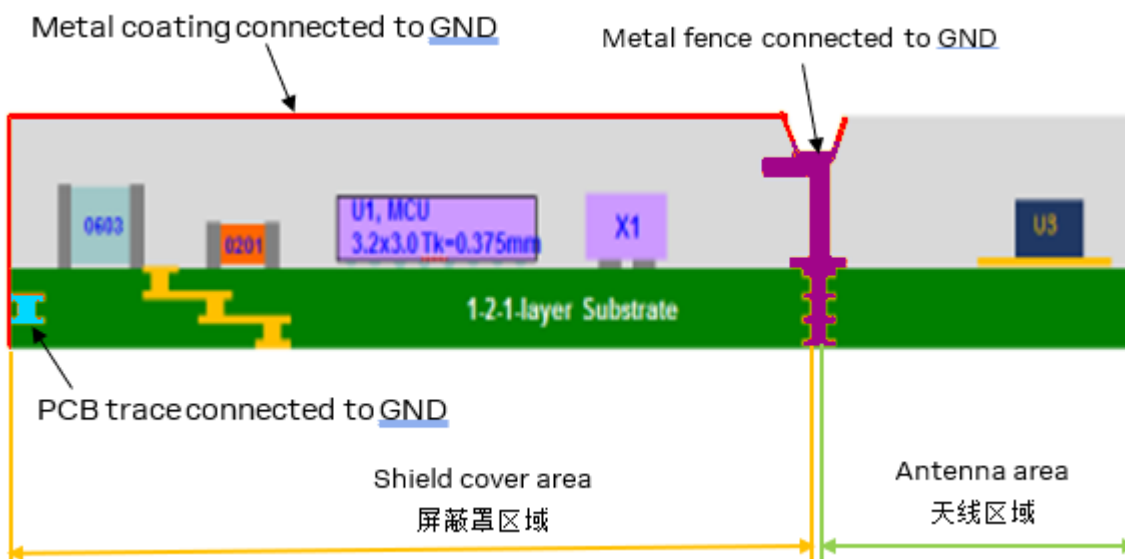


Figure 9: ANNA-B112 SiP shield its RF unit showing metal coating, metal fence and PCB traces

6.11 Safety compliance

For compliance with safety standard EN 60950-1, ANNA-B112 modules must be supplied with a Class-2 Limited Power Source.

6.12 Bluetooth qualification information






® The ANNA-B112 module has been qualified according to the Bluetooth version 5.0 specifications. For an end product with ANNA-B112 integrated, no further qualification is required. If the end product is to be Bluetooth listed, the QD ID listed in Table 20 shall be included in the end product listing. Table 20 describes the QD ID to which it refers.

| Bluetooth version | Bluetooth product type | QD ID | Listing date | Nordic SoftDevice S132 version | u-connectXpress software version |
|-------------------|------------------------|--------|--------------|--------------------------------|----------------------------------|
| 5.0 | End Product | 119389 | 2018-10-05 | 5.0.0 or later | 1.0.0 or later |

Table 20: ANNA-B112 Bluetooth QD IDs

7 Antennas

This chapter gives an overview of the different external antennas that can be used together with the module.

-  Note that not all antennas are approved for use in all markets/regions.
-  This radio transmitter IC: 8595A-ANNAB1 has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.
-  Cet émetteur radio IC: 8595A-ANNAB1 été approuvé par Industry Canada pour fonctionner avec les types d'antenne énumérés ci-dessous avec le gain maximum autorisé et l'impédance nécessaire pour chaque type d'antenne indiqué. Les types d'antenne ne figurant pas dans cette liste et ayant un gain supérieur au gain maximum indiqué pour ce type-là sont strictement interdits d'utilisation avec cet appareil.

For each antenna, the "Approvals" field defines in which test reports the antenna is included. Definitions of the «Approvals» field are:

- FCC - The antenna is included in the FCC test reports and thus approved for use in countries that accept the FCC radio approvals, primarily US.
- IC - The antenna is included in the IC (Industrie Canada) test reports and thus approved for use in countries that accept the IC radio approvals, primarily Canada.
- RED - The antenna is included in the ETSI test reports and thus approved for use in countries that accept the Radio Equipment Directive, primarily the European countries.
- MIC - The antenna is included in the Japanese government affiliated MIC test reports and thus approved for use in the Japanese market.
- NCC - The antenna is included in the Taiwan NCC test reports and thus approved for use in Taiwan.
- KCC - The antenna is included in the KCC test reports and thus approved for use in South Korea.
- ANATEL – The antenna is included in the Brazil Anatel test reports and thus approved for use in Brazil.
- ACMA – The antenna is included in the Australia and New Zealand test reports and thus approved for use in Australia and New Zealand.
- ICASA – The antenna is included in the South Africa ICASA test reports and thus approved for use in South Africa.

7.1 Approved antennas

ANNA-B112 internal antenna

| | |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gain | +0.7 dBi |
| Comment | Internal antenna on ANNA-B112. For more information, see also 2.4 GHz Bluetooth low energy (ANT) and the ANNA-B112 system integration manual [1]. Should not be mounted inside a metal enclosure. |
| Approval | FCC, IC, RED, MIC, NCC, KCC, ANATEL, ACMA and ICASA |



FXP75.07.0045B

| | |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manufacturer | Taoglas |
| Gain | +2.5 dBi |
| Impedance | 50 Ω |
| Size | 5.9 x 4.1 x 0.24 mm |
| Type | Patch, Flexfilm |
| Connector | U.FL. |
| Cable length | 45 mm |
| Comment | Should be attached to a plastic enclosure or part for best performance. For more information, see antenna data sheet. Should not be mounted inside a metal enclosure. To be mounted on a U.FL connector. |
| Approval | FCC, IC, RED, MIC, NCC, KCC, ANATEL, ACMA and ICASA |



PC17.07.0070A

| | |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manufacturer | Taoglas |
| Gain | +1.0 dBi |
| Impedance | 50 Ω |
| Size | 24.0 x 11.0 x 0.8 mm |
| Type | Patch, PCB |
| Connector | U.FL. |
| Cable length | 70 mm |
| Comment | Should be attached to a plastic enclosure or part for best performance. For more information, see antenna data sheet. Should not be mounted inside a metal enclosure. To be mounted on a U.FL connector. |
| Approval | FCC, IC, RED, MIC, NCC, KCC, ANATEL, ACMA and ICASA |



FXP74.07.0100A

| | |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manufacturer | Taoglas |
| Gain | +4.0 dBi |
| Impedance | 50 Ω |
| Size | 47.0 x 7.0 x 0.1 mm |
| Type | Patch, Flexfilm |
| Connector | U.FL. |
| Cable length | 100 mm |
| Comment | Should be attached to a plastic enclosure or part for best performance. For more information, see antenna data sheet. Should not be mounted inside a metal enclosure. To be mounted on a U.FL connector. |
| Approval | RED, MIC, KCC, ANATEL, ACMA and ICASA |



FXP72.07.0053A

| | |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manufacturer | Taoglas |
| Gain | +5.0 dBi |
| Impedance | 50 Ω |
| Size | 31.0 x 31.0 x 0.1 mm |
| Type | Patch, Flexfilm |
| Connector | U.FL. |
| Cable length | 53 mm |
| Comment | Should be attached to a plastic enclosure or part for best performance. For more information, see the antenna data sheet. Should not be mounted inside a metal enclosure. To be mounted on a U.FL connector. |
| Approval | RED, MIC, KCC, ANATEL, ACMA and ICASA |



8 Product handling

8.1 Packaging

ANNA-B112 modules are delivered as hermetically sealed, reeled tapes to enable efficient production, production lot setup and tear-down.

8.2 Reels

Detailed information about the reel types for ANNA-B112 modules are provided in Table 21.

| Model | Reel Type | Reel Part Number | Qty |
|-----------|-----------|------------------|--------------|
| ANNA-B112 | 7" | MYR-131-BB | 500 pcs/reel |

Table 21: Reel type for ANNA-B112

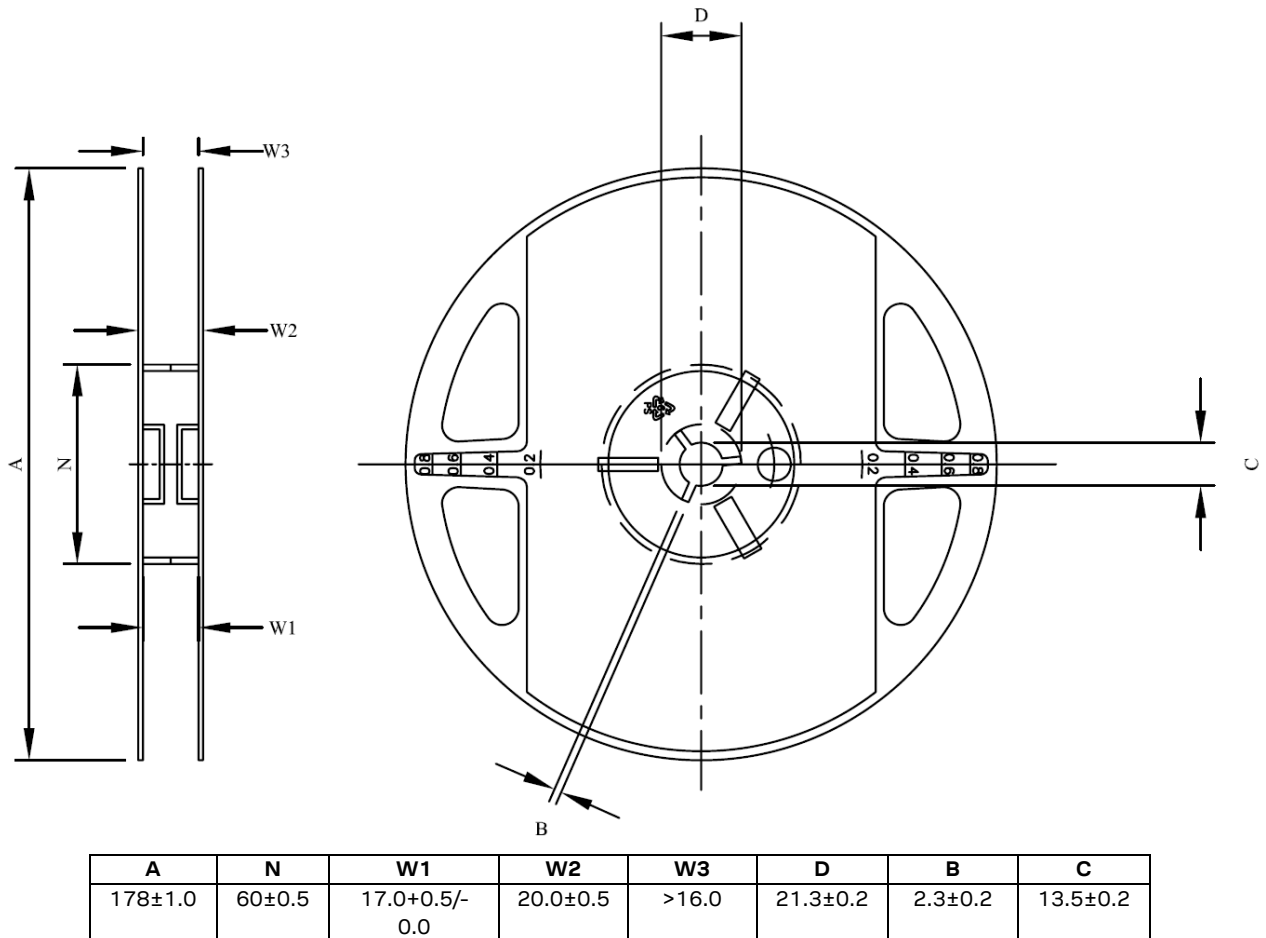


Figure 10: Seven-inch reel for ANNA-B112 modules

8.3 Tapes

Figure 11 shows the position and orientation of ANNA-B112 modules as they are delivered on tape. The dimensions of the tapes are specified in Figure 12.


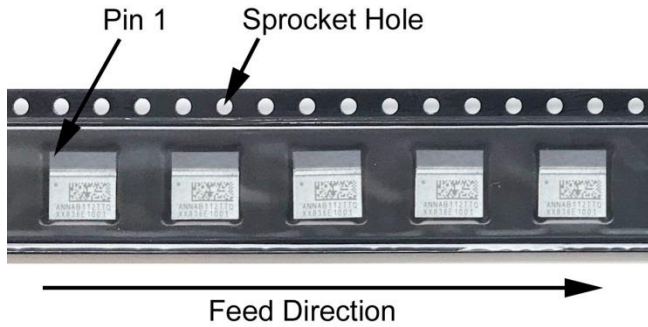


Figure 11: Orientation of ANNA-B112 modules on tape

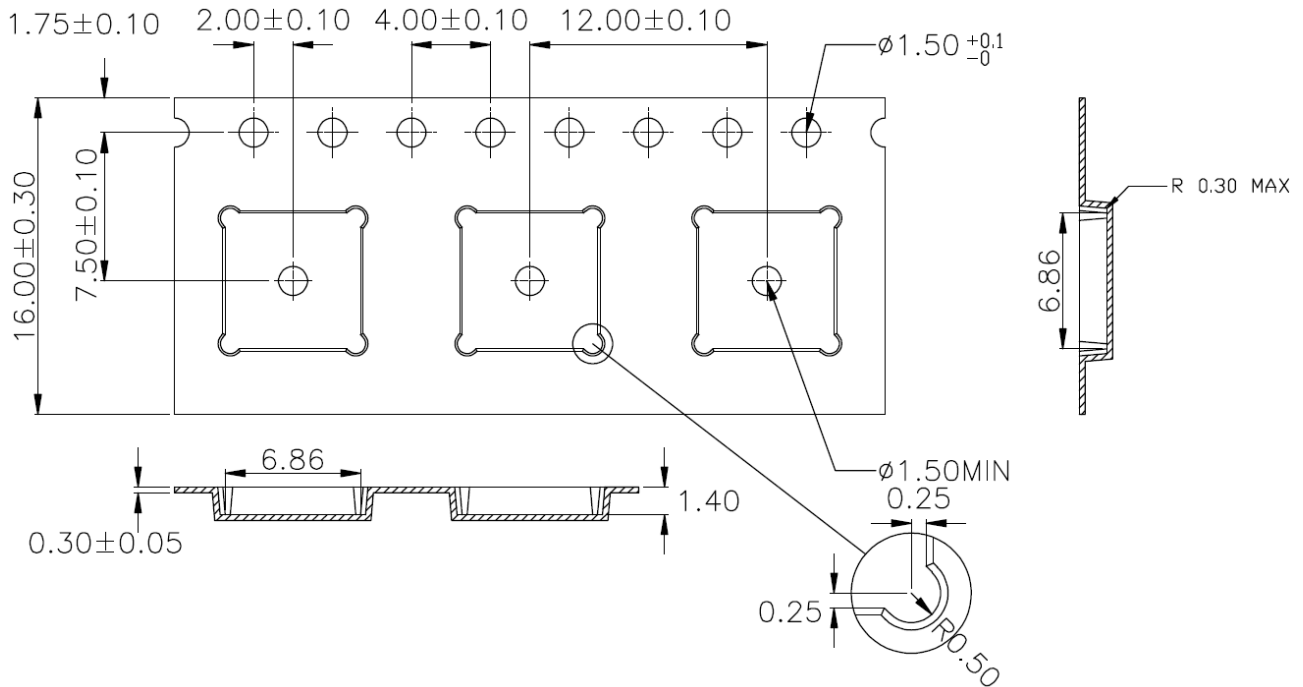

Sprocket hole pitch cumulative tolerance ± 0.20 .

Carrier camber is within 1mm in 250mm.

Material: Black Conductive Polyester Allow (ABS+PS).


All dimensions meet EIA-481-D requirements.

Thickness: 0.30 ± 0.05 mm.

Surface resistivity: $105 \sim 109 \Omega/\text{sq}$.

Figure 12: ANNA-B112 tape dimensions


8.4 Moisture sensitivity levels

-  ANNA-B112 modules are Moisture Sensitive Devices (MSD), and are rated at MSL level 3 according to MSL standards, IPC/JEDEC J-STD-020. The standards can be downloaded from www.jedec.org.


The Moisture Sensitivity Level (MSL) impacts the required packaging and handling precautions. For more information regarding moisture sensitivity levels, labeling, and storage, see also the u-blox packaging information [5].

8.5 Reflow soldering

Reflow profiles must be selected according to u-blox recommendations. See also the ANNA-B112 system integration manual [1].

-  Failure to observe these recommendations can result in severe damage to the device.

8.6 ESD precautions

-  ANNA-B112 modules contain highly sensitive electronic circuitry and are Electrostatic Sensitive Devices (ESD). Handling the ANNA-B112 modules without proper ESD protection can destroy or damage them permanently.

ANNA-B112 modules are electrostatic sensitive devices (ESD) and require special ESD precautions that are typically applied to ESD sensitive components. See also [Maximum ESD ratings](#).

Proper ESD handling and packaging procedures must be applied throughout the processing, handling, and operation of any application that incorporates the ANNA-B112 module. The ESD precautions must be implemented on the application board, where the module is mounted. See also the ANNA-B112 system integration manual [1].

-  Failure to observe these recommendations can result in severe damage to the device.

9 Marking and ordering information

9.1 Product marking

Important product and associated production data is included in a laser mark on all ANNA-B112 modules, as shown in Figure 13.



Figure 13: Product marking on the ANNA-B112 module

The product marking provides information that describes the production date, product type number, and version. The exact nomenclature of the product marking is described in Table 22.

| Item | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|----------|---|---|--------|----|--------|----|--------|----|----|----|----|------|----------------------|--|--|--|--|--|----------|--|--|--------|--|--------|--|--------|--|----------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Dot | Pin 1 corner indication for assembly orientation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Line 1 | Product name, major version, and product grade ANNAB112: Product name TT = Major product version Q = Quality grade | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Line 2 | Minor version and production date XX = Minor product version 8 = Y = Last digit of production year 36 = WW = Week number of production date E1 = EE = Assembly mother lot, last digits 001 = SSS: Assembly sub lot number | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2D code | <table border="1"> <thead> <tr> <th></th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> <th>10</th> <th>11</th> <th>12</th> <th>13</th> <th>14</th> <th>15</th> <th>16</th> </tr> </thead> <tbody> <tr> <td>Year</td> <td colspan="6">Assembly mother lot#</td> <td colspan="3">Sub lot#</td> <td colspan="2">Strip#</td> <td colspan="2">Y axis</td> <td colspan="2">X axis</td> </tr> <tr> <td>Example</td> <td>8</td> <td>3</td> <td>6</td> <td>U</td> <td>B</td> <td>E</td> <td>1</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> </tr> </tbody> </table> | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | Year | Assembly mother lot# | | | | | | Sub lot# | | | Strip# | | Y axis | | X axis | | Example | 8 | 3 | 6 | U | B | E | 1 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 1 |
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Year | Assembly mother lot# | | | | | | Sub lot# | | | Strip# | | Y axis | | X axis | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Example | 8 | 3 | 6 | U | B | E | 1 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Table 22: ANNA-B112 marking description

9.2 Explanation of codes

Three different product code formats are used.

The **Product name** is used in documentation like this data sheet. It identifies all u-blox products independent of the product version and quality grade.

The **Ordering Code** includes major product version and quality grade, while the **Type number** includes the minor product version. Table 23 below details these three different formats:

| Format | Structure |
|---------------|------------------|
| Product Name | PPPP-TGVV |
| Ordering Code | PPPP-TGVV-TTQ |
| Type Number | PPPP-TGVV-TTQ-XX |

Table 23: Product code formats

Table 24 explains the parts of the product code.

| Code | Meaning | Example |
|------|-----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| PPPP | Form factor | ANNA |
| TG | Platform (Technology and Generation) T – Dominant technology, For example, W: Wi-Fi, B: Bluetooth G – Generation | B1: Bluetooth Generation 1 |
| VV | Variant based on the same platform; range [00...99] | 12: default mounting, with internal antenna |
| TT | Major Product Version | 00: first revision |
| Q | Quality grade <ul style="list-style-type: none"> • A: Automotive • B: Professional • C: Standard | B: professional grade |
| XX | Minor product version (not relevant for certification) | Default value is 00 |

Table 24: Part identification code

9.3 Ordering information

| Ordering Code | Product |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------|
| ANNA-B112-00B | ANNA-B1 module pre-flashed with u-connectXpress software v1.0.0 for optional use with either an internal or external antenna. |
| ANNA-B112-01B | ANNA-B1 module pre-flashed with u-connectXpress software v2.0.0 for optional use with either an internal antenna or an external antenna. |
| ANNA-B112-70B | ANNA-B1 module with open CPU architecture and optional use of either an internal or external antenna. |
| ANNA-B112-02B | ANNA-B1 module pre-flashed with u-connectXpress software v4.0.0 for optional use with either an internal antenna or an external antenna. |

Table 25: Product ordering codes

Appendix


A Glossary

| Abbreviation | Definition |
|--------------|---------------------------------------------|
| ADC | Analog to digital converter |
| BLE | Bluetooth low energy |
| BPF | Band pass filter |
| CTS | Clear to send |
| ESD | Electro static discharge |
| FCC | Federal Communications Commission |
| GATT | Generic ATtribute profile |
| GPIO | General purpose input/output |
| IC | Industry Canada |
| I2C | Inter-integrated circuit |
| ICS | Inter-IC Sound |
| LPO | Low power oscillator |
| MCU | Micro controller unit |
| MSD | Moisture sensitive device |
| RF | Radio frequency |
| RTOS | Real time operating system |
| SiP | System in package |
| SPI | Serial peripheral interface |
| UART | Universal asynchronous receiver/transmitter |

Table 26: Explanation of the abbreviations and terms used

Related documents

- [1] ANNA-B112 system integration manual, [UBX-18009821](#)
- [2] u-connect AT commands manual, [UBX-14044127](#)
- [3] Using u-connectXpress software user guide, [UBX-16024251](#)
- [4] ANNA-B112 declaration of conformity, [UBX-18058993](#)
- [5] Packaging information reference, [UBX-14001652](#)

 For product change notifications and regular updates of u-blox documentation, register on our website, www.u-blox.com.

Revision history

| Revision | Date | Name | Comments |
|----------|-------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R01 | 28-Mar-2018 | mwej, kgom | Initial release. |
| R02 | 14-May-2018 | mwej, kgom | Changed product status to Engineering Sample. Updated main features summary (Table 1) and the block diagram (Figure 1). Updated the countries for modular type approvals (section 1.1 and 6.1). |
| R03 | 15-Nov-2018 | mwej, hekf, kgom | Changed product status to Initial Production. Updated RoHS compliance from RoHS 2 to RoHS 3. Inserted table of antenna radiation patterns. Updated package thickness and added missing dimensions in the mechanical drawing. Updated the number of units on a reel in section 8.2. Included information about Approved antennas in section 0. Added reference to the ANNA-B112 Getting Started Guide. Updated range figures in Table 1. Updated product marking in section 9.1. Updated information about the completed certifications for ETSI (Europe), FCC (USA), IC (Canada), Japan (sections 6.2, 6.3 and 6.4). Updated Tape information in section 8.3. Added Bluetooth qualification listing information in section 0. |
| R04 | 24-Dec-2018 | mwej, hekf | Added information about the completed certification for Taiwan (section 6.5). |
| R05 | 2-Apr-2019 | mwej, hekf | Added Hardware revision information (page 2). Updated the product ordering codes (Table 25) with software version 2.0.0 Updated Table 1. Replaced "u-blox connectivity software" with "u-connectXpress software" in all instances. Replaced all references to the "ANNA-B112 Getting Started" guide with the new document "u-connectXpress User Guide". Updated the document name of the "u-blox Short Range AT Commands Manual" to the new name - "u-connect AT Commands Manual". Added KCC to Approved antennas (section 0). Added information about the completed certification for South Korea (section 6.6). |
| R06 | 29-Oct-2019 | hekf | Updated Table 1. Changed the current consumption values in Table 14 and also mentioned that they are valid for u-connectXpress software version 2.0.0. Added information about the completed certification for Brazil, Australia/New Zealand and South Africa (sections 6.7, 6.8, and 0). Removed the mode column in Table 13 for better readability. Added information in Table 8 about grounding pins XL1 and XL2 if the internal RC-oscillator is used with the u-connectXpress software. |
| R07 | 25-Mar-2020 | hekf | Changed product status to Mass production. |
| R08 | 02-Nov-2020 | hekf | Changed ESD HBM to 2 kV, CDM to 500 V and highlighted ESD indirect contact discharge in Table 10. |
| R09 | 21-Dec-2020 | hekf | Clarified the need of antenna strips in combination with integrated antennas in sections 1.1 and 2.2. Added product description and ordering information for the ANNA-B112-70B open CPU variant in sections 1.4 and in 9.3 with associated changes in the document information. |
| R10 | 10-Aug-21 | fkru, hisa | Added information about the completed certification for SRRC China Radio Transmission Equipment Type Approval . Added ANNA-B112-02B-00 product. Revised all document cross references and included editorial edits in all chapters. |

Contact

For complete contact information, visit us at www.u-blox.com.

u-blox Offices

North, Central and South America

u-blox America, Inc.

Phone: +1 703 483 3180
E-mail: info_us@u-blox.com

Regional Office West Coast:

Phone: +1 408 573 3640
E-mail: info_us@u-blox.com

Technical Support:

Phone: +1 703 483 3185
E-mail: support@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG

Phone: +41 44 722 74 44
E-mail: info@u-blox.com
Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811
E-mail: info_ap@u-blox.com
Support: support_ap@u-blox.com

Regional Office Australia:

Phone: +61 3 9566 7255
E-mail: info_au@u-blox.com
Support: support_ap@u-blox.com

Regional Office China (Beijing):

Phone: +86 10 68 133 545
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Chongqing):

Phone: +86 23 6815 1588
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shanghai):

Phone: +86 21 6090 4832
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shenzhen):

Phone: +86 755 8627 1083
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office India:

Phone: +91 80 405 092 00
E-mail: info_in@u-blox.com
Support: support_in@u-blox.com

Regional Office Japan (Osaka):

Phone: +81 6 6941 3660
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Korea:

Phone: +82 2 542 0861
E-mail: info_kr@u-blox.com
Support: support_kr@u-blox.com

Regional Office Taiwan:

Phone: +886 2 2657 1090
E-mail: info_tw@u-blox.com
Support: support_tw@u-blox.com

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Bluetooth Modules - 802.15.1 category](#):

Click to view products by [U-Blox manufacturer](#):

Other Similar products are found below :

[BM83SM1-00AA](#) [ESP32-S2-MINI-2-N4](#) [ESP32-S2-MINI-2-N4R2](#) [ESP32-S2-MINI-2U-N4R2](#) [ESP32-S2-SOLO-2-N4R2](#) [ESP32-S3-MINI-1U-N8](#) [ATWINC1510-MR210PB1976](#) [VG3751T240NFS1](#) [PB-02](#) [PB-03F](#) [BT3L](#) [BT2S](#) [BTU](#) [PB-01](#) [PB-02-Kit](#) [TB-05](#) [E73-2G4M04S1AX](#) [E330-900T13S](#) [E73-2G4M08S1EX](#) [E83-2G4M03S](#) [E104-BT5005A](#) [E73-2G4M04S1F](#) [E73-2G4M04S1FX](#) [E104-BT08](#) [E104-BT53C3](#) [E104-BT5010A](#) [E72-2G4M05S1G](#) [E72-2G4M20S1C](#) [E104-BT54S](#) [E104-BT07](#) [DL-CC2340-B](#) [ESP8684-WROOM-02UC-N4](#) [HLK-B40-I](#) [HLK-B40](#) [VG6328A](#) [Core52840](#) [WCH-BSU](#) [BLE-SER-A-ANT](#) [WS8000-M6](#) [WL6601-TC](#) [E73-2G4M04S1BX](#) [ESP32-H2-MINI-1U-H4](#) [RN4678-VB/RM122](#) [ESP32-C6-WROOM-1-N16](#) [RADXA WIRELESS MODULE A1](#) [WT5010-S2](#) [WT52810-S1](#) [WT52840-S1](#) [BLE5101](#) [ESP8684-MINI-1U-H4](#)